

BULLETIN No. 1138

ISSUE 1

DECEMBER, 1946

TELETYPE

PRINTING TELEGRAPH SYSTEMS

PARTS

TYPE-WHEEL PAGE PRINTER

TELETYPE MODEL 27

SIGNAL CORPS TT4/TG



CORPORATION

SUBSIDIARY OF

Western Electric Company

CHICAGO, U.S.A.

BULLETIN No. 1138
ISSUE 1
DECEMBER, 1946

TELETYPE

PRINTING TELEGRAPH SYSTEMS

PARTS

TYPE-WHEEL PAGE PRINTER
TELETYPE MODEL 27
SIGNAL CORPS TT4/TG




SPECIAL NOTE

ONLY PARTS SHOWN HEREIN WITHOUT THE LETTER "E"
PREFIX MAY BE ORDERED AS SERVICE ITEMS.




PART NUMBERS PREFIXED WITH LETTER "E" ARE SHOWN
FOR IDENTIFICATION PURPOSES ONLY.



ALPHABETICAL INDEX


DESCRIPTION	PAGE NO.	DESCRIPTION	PAGE NO.
Base Tray and Casting - - - - -	1	Motor Control - - - - -	10
Bells - - - - -	9	Motor Control Contact - - - - -	10
Break Key - - - - -	16	Paper Roll Frame - - - - -	18
Cam Sleeve - Function - - - - -	3	Paper Roll Spindle - - - - -	18
Cam Sleeve - Selector - - - - -	3	Pinion - - - - -	14
Cam Sleeve - Transmitter - - - - -	13	Platen Carriage - - - - -	11
Carrying Case - - - - -	20	Plug and Cable - Keyboard - - - - -	12
Clutch Throwout Lever - - - - -	3	Power Filter - - - - -	16
Code Discs - - - - -	2	Power Supply Panel - - - - -	17
Code and Function Bar Unit - - - - -	5	Print Hammer Parts - - - - -	1
Condenser - - - - -	14,17	Range Scale - - - - -	4
Condenser and Spare Fuse Bracket - - - - -	17	Rear Frame - - - - -	9
Contact Levers - Transmitter - - - - -	13	Rectifier - - - - -	16
Control Panel - - - - -	16	Resistors - - - - -	14,17
Copyholder - - - - -	16	Rheostat - - - - -	16
Cover - Lower Section - - - - -	15	Ribbon Feed Mechanism - - - - -	8
Cover - Upper Section - - - - -	19	Ribbon Spools - - - - -	8
Dashpot - Carriage Return - - - - -	9	Rubber Mounting - Carrying Case - - - - -	20
Dashpot - Type Wheel - - - - -	1	Rubber Mounting - Cover - - - - -	15
Draw Strap - - - - -	9	Selector Bars - Keyboard - - - - -	12
Filter - - - - -	13	Selector Shaft - - - - -	3
Function Code Bars - - - - -	5	Selector Unit - - - - -	4
Function Plate - - - - -	10	Socket and Cable - - - - -	17
Fuses - - - - -	17	Spring Drum - - - - -	9
Gears - - - - -	2,3,13	Switch - Lever Action - - - - -	16
Governor - Motor - - - - -	14	Switch - Toggle - - - - -	16
Keyboard - - - - -	12	Terminal Block - - - - -	17
Keyboard Panel - - - - -	12	Toggle Switch - - - - -	16
Key Levers - - - - -	12	Transfer Contact - - - - -	10
Keytops - - - - -	21	Transfer Levers - - - - -	4
Line Feed Bail - - - - -	9	Transfer Locking Levers - - - - -	13
Line Meter - - - - -	16	Transmitter - - - - -	13
Magnet - Motor Control - - - - -	10	Tuning Fork Holder - - - - -	17
Magnet - Selector Unit - - - - -	4	Type Pallets - - - - -	21
Miscellaneous Equipment Mounted in Cover (Lower Section) - - - - -	16,17,18	Type Wheel - - - - -	2
Miscellaneous Function Levers - - - - -	7	Type-wheel Clutch - - - - -	2
Motor - - - - -	14	Type-wheel Drum Shaft - - - - -	2
		Type-wheel Lift and Function Pawls - - - - -	6

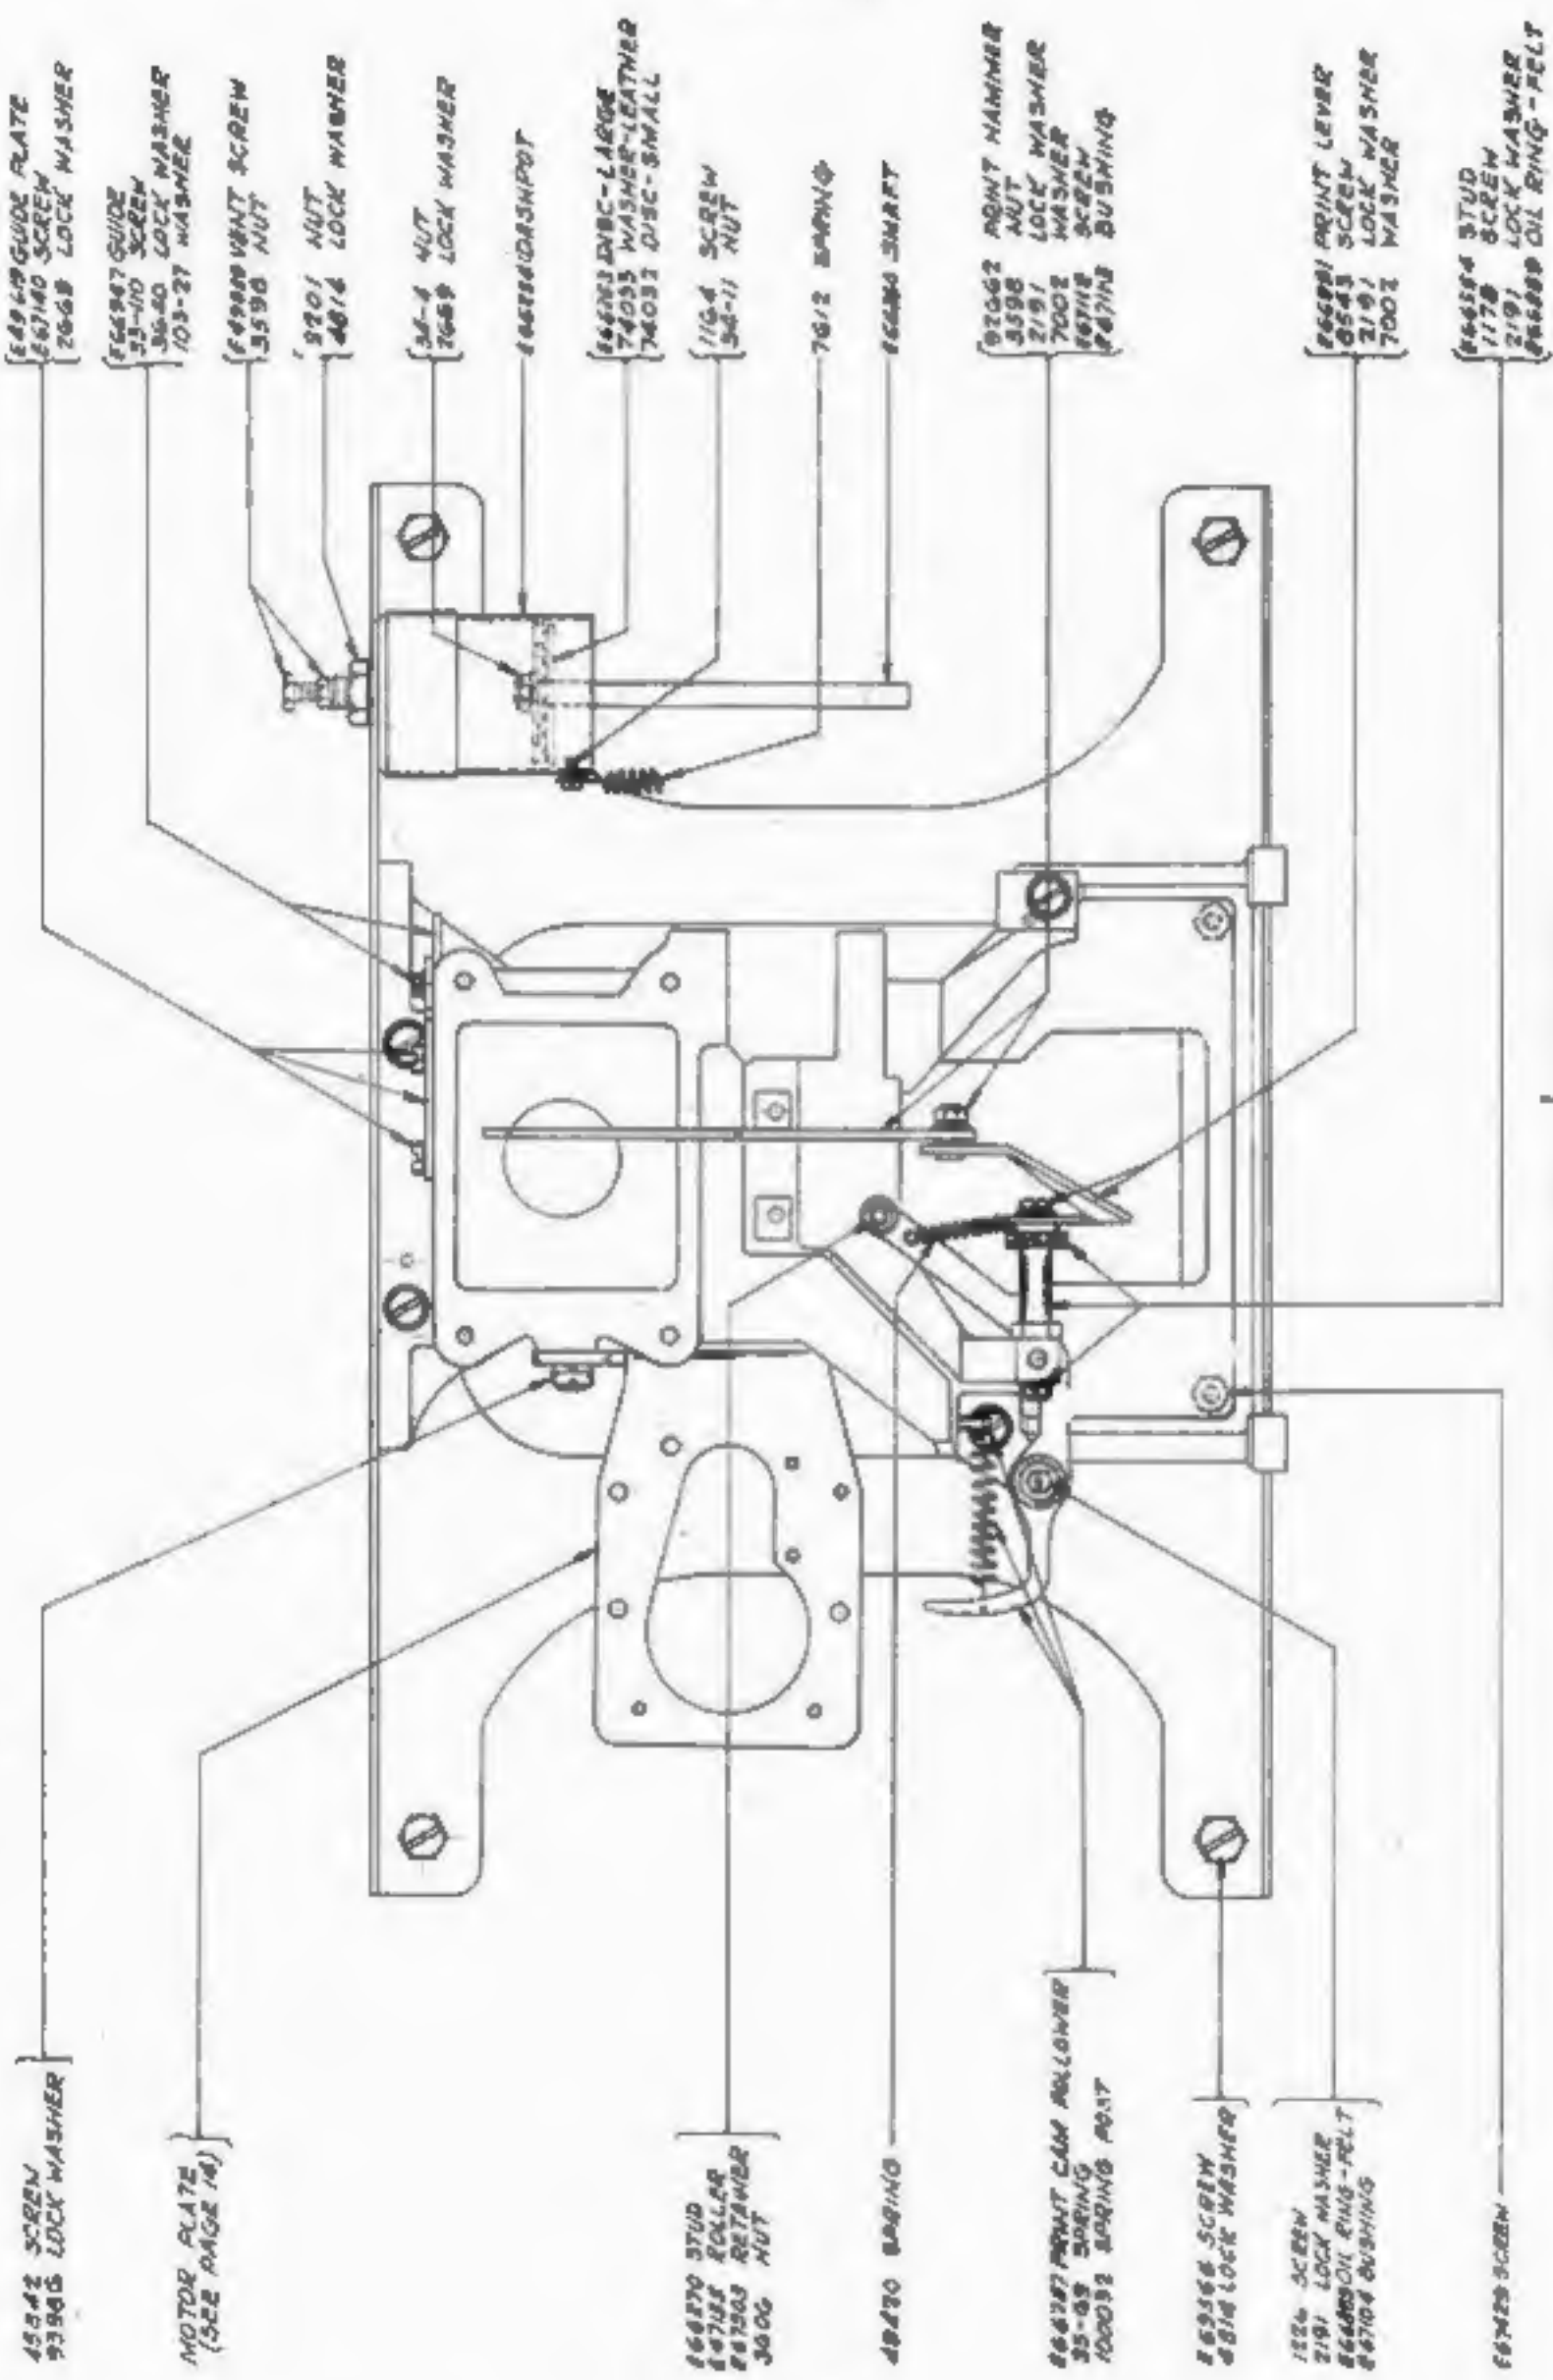


BASE TRAY & CASTING
(TOP VIEW)

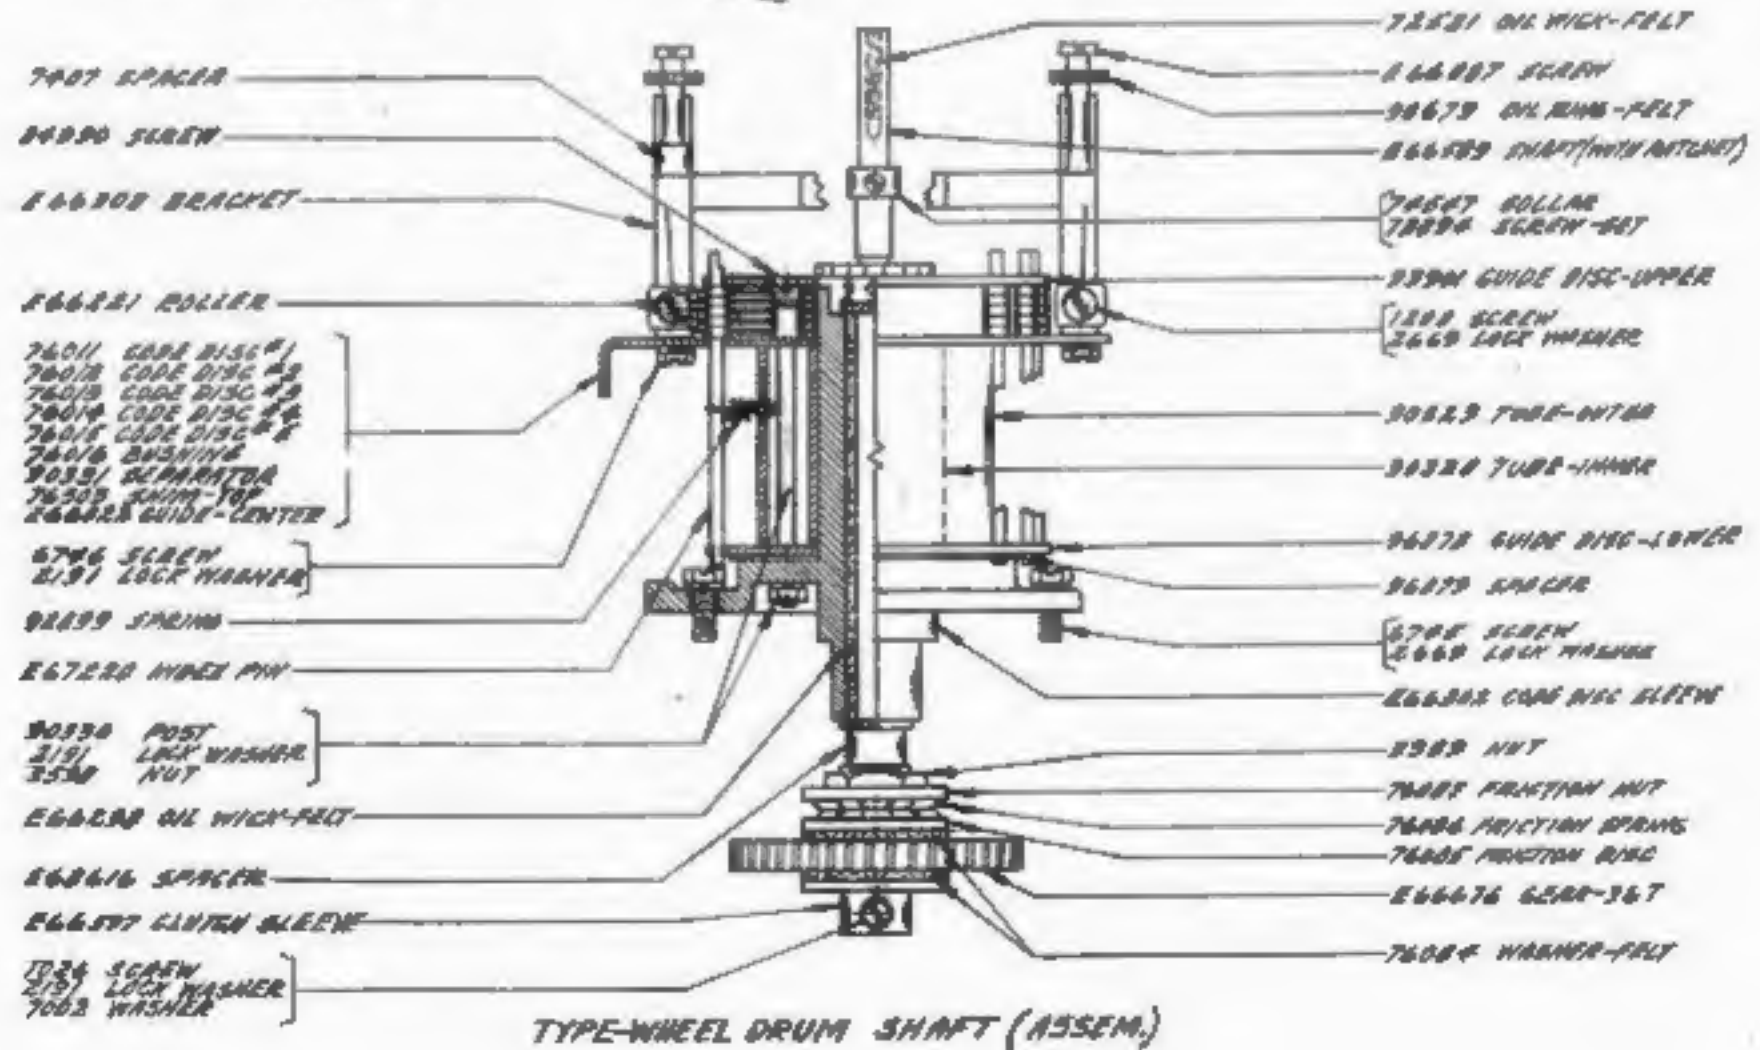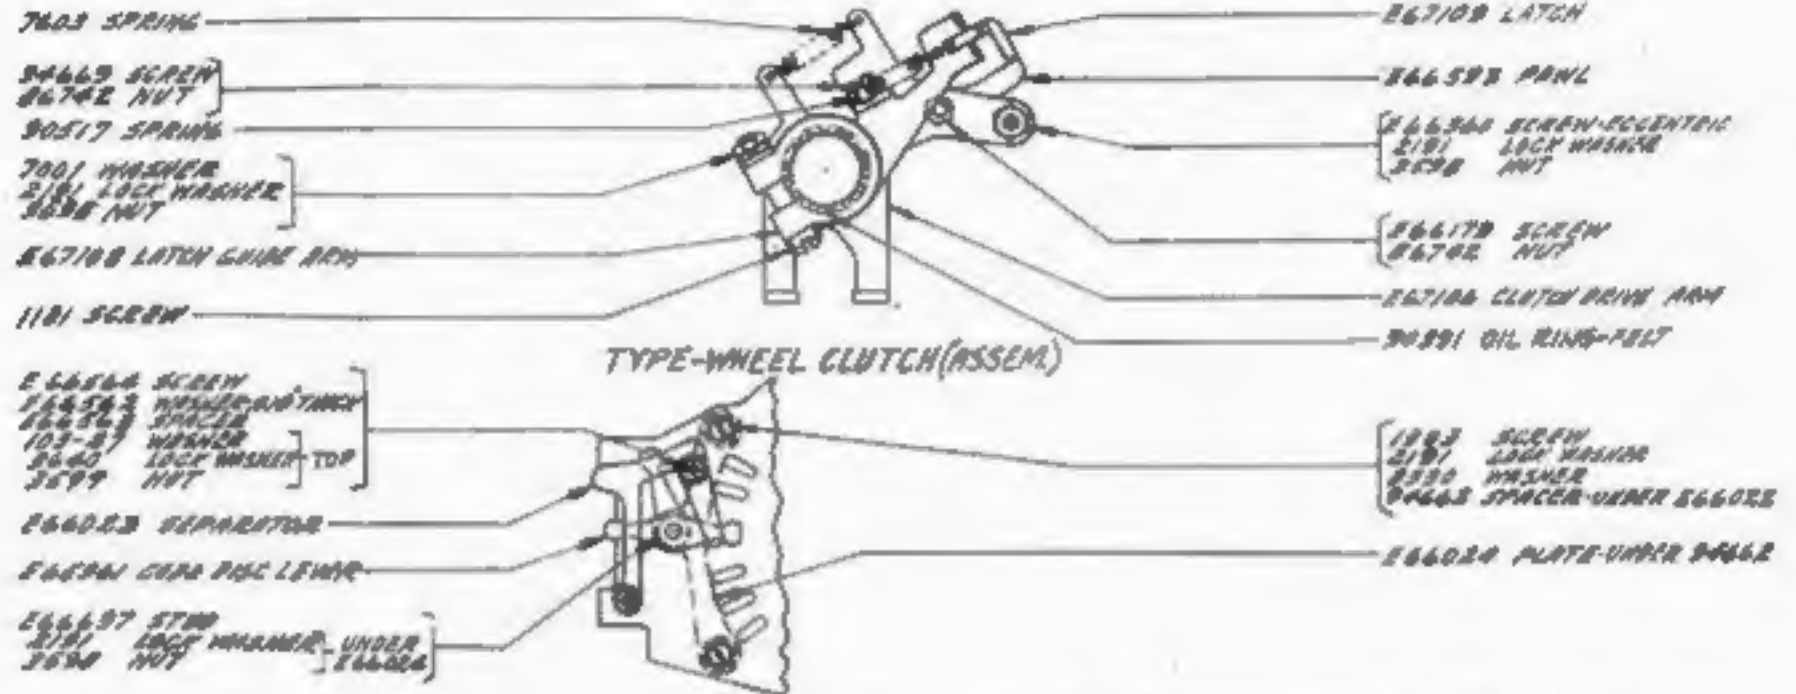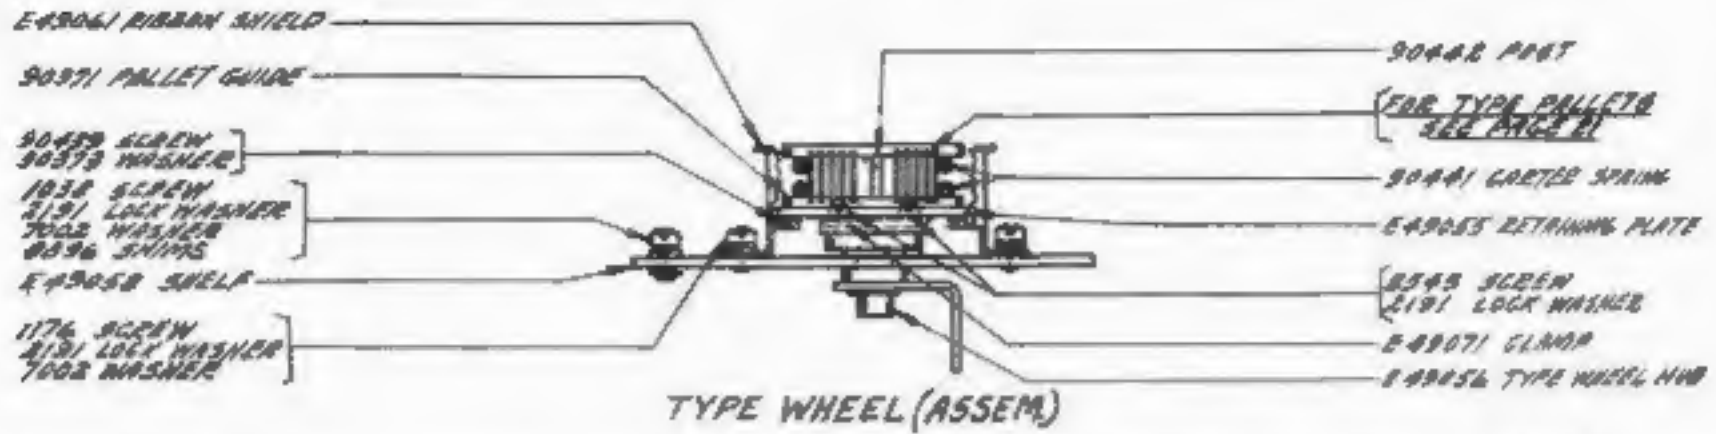

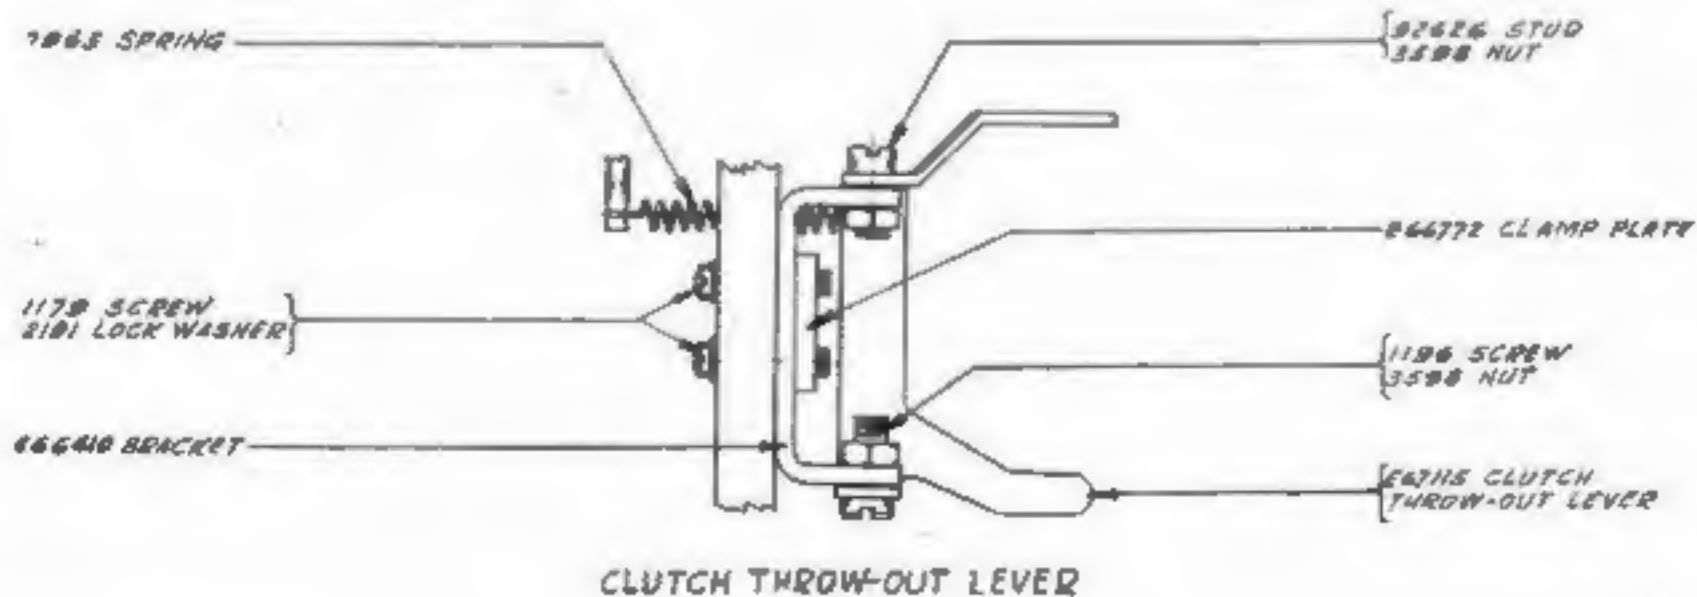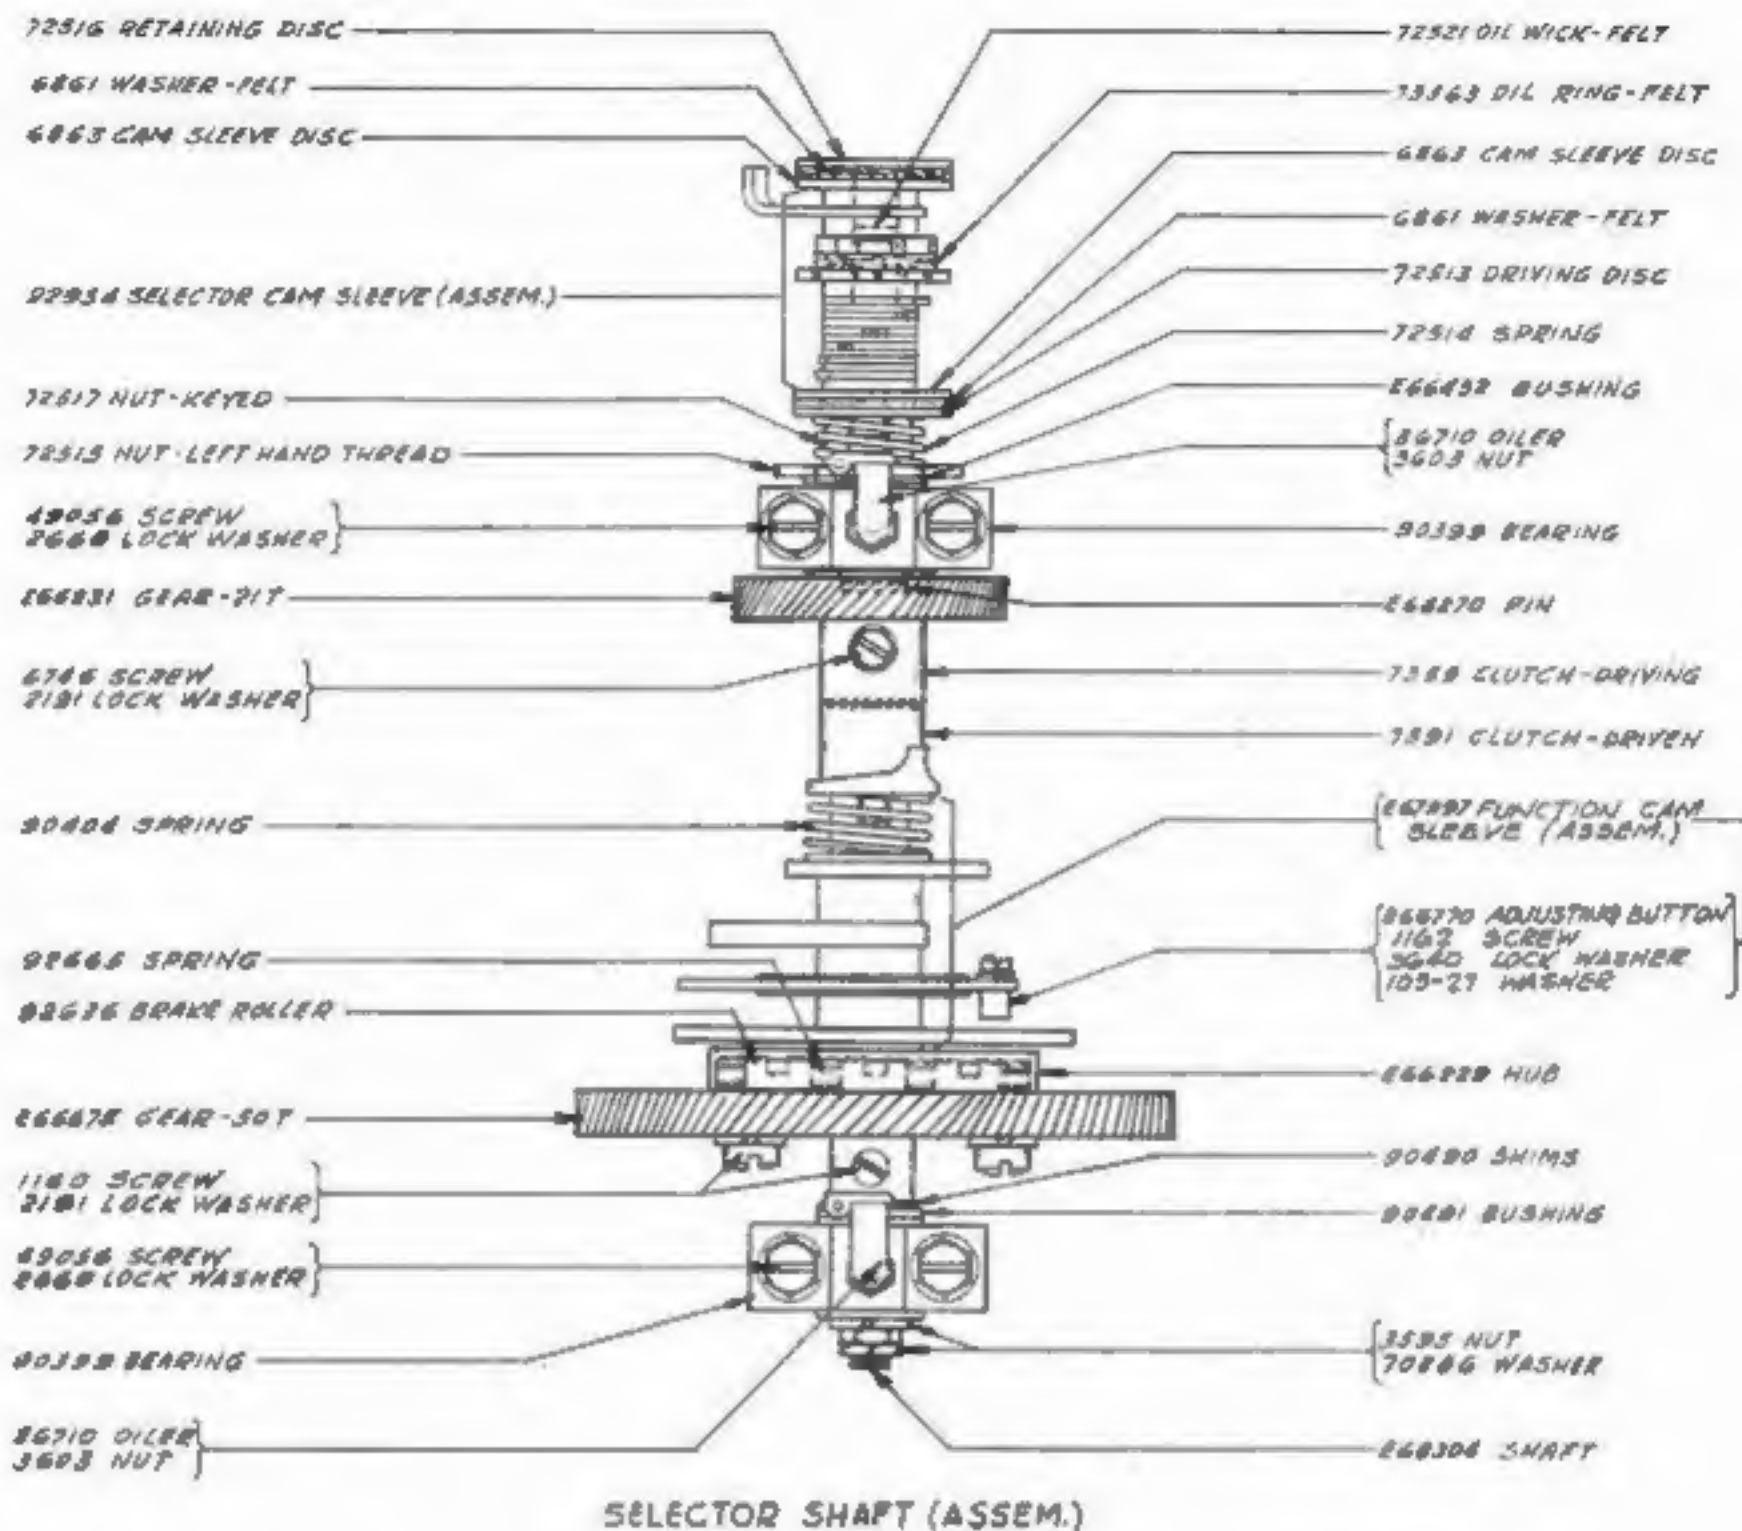


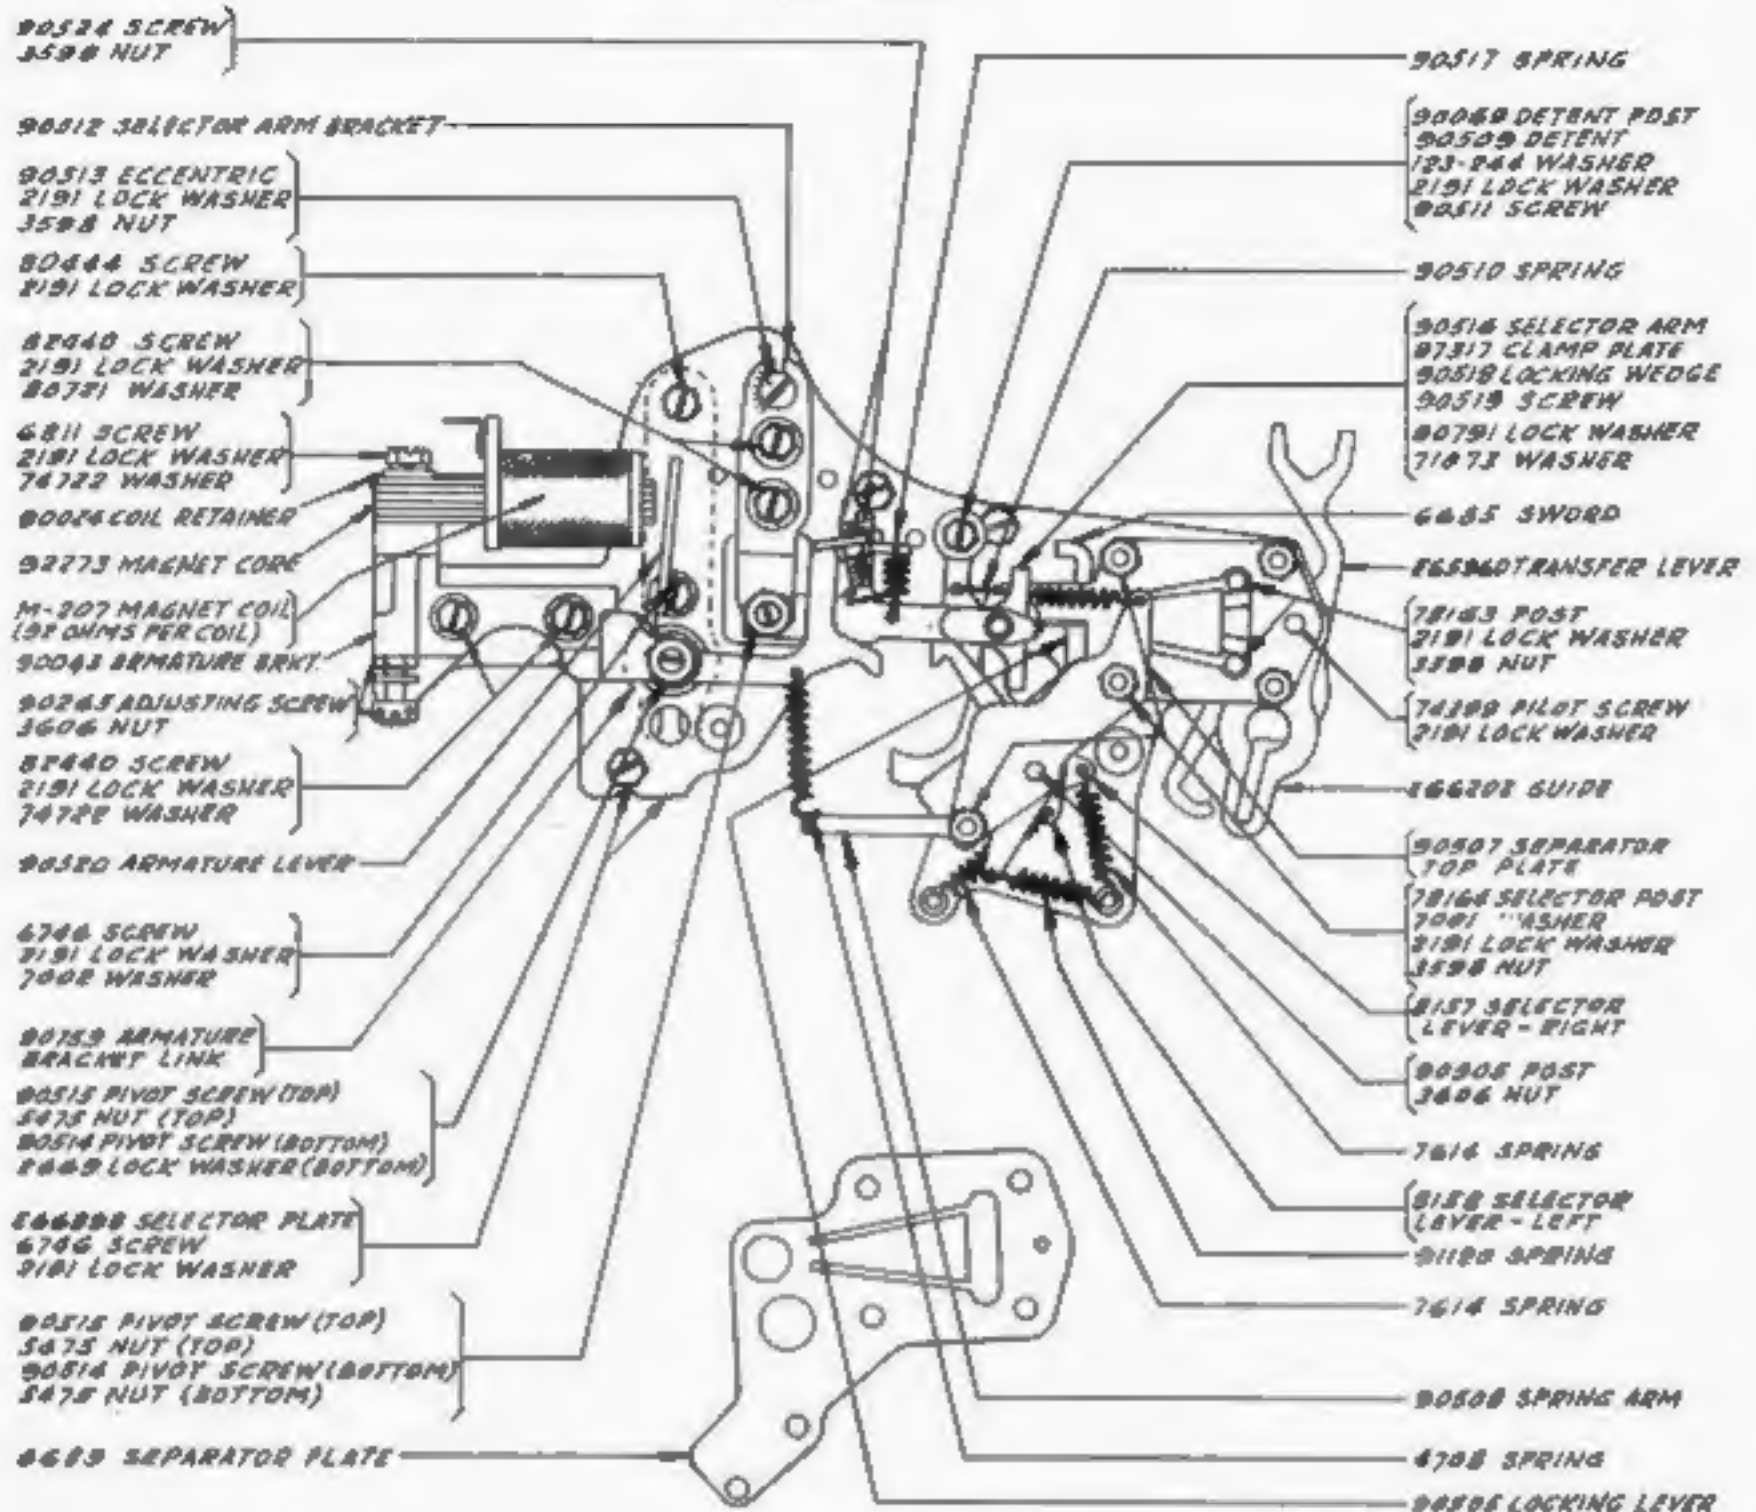



SELECTOR UNIT

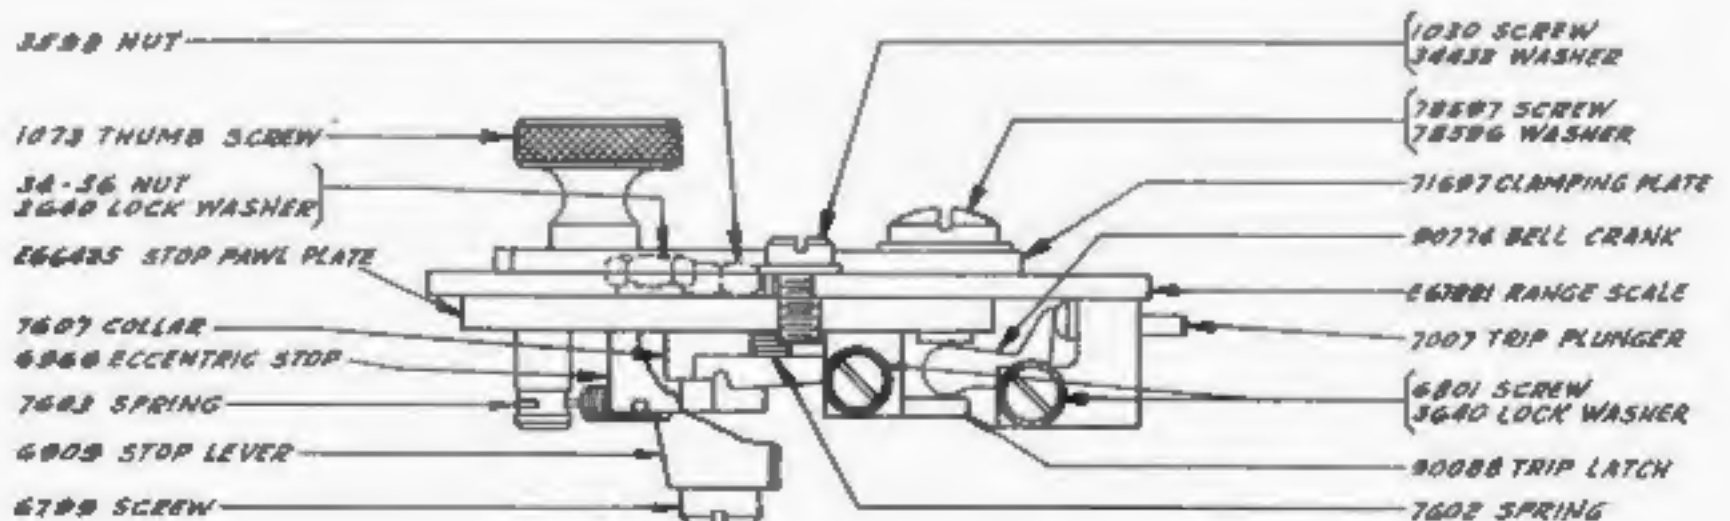



RANGE SCALE (ASSEM.)

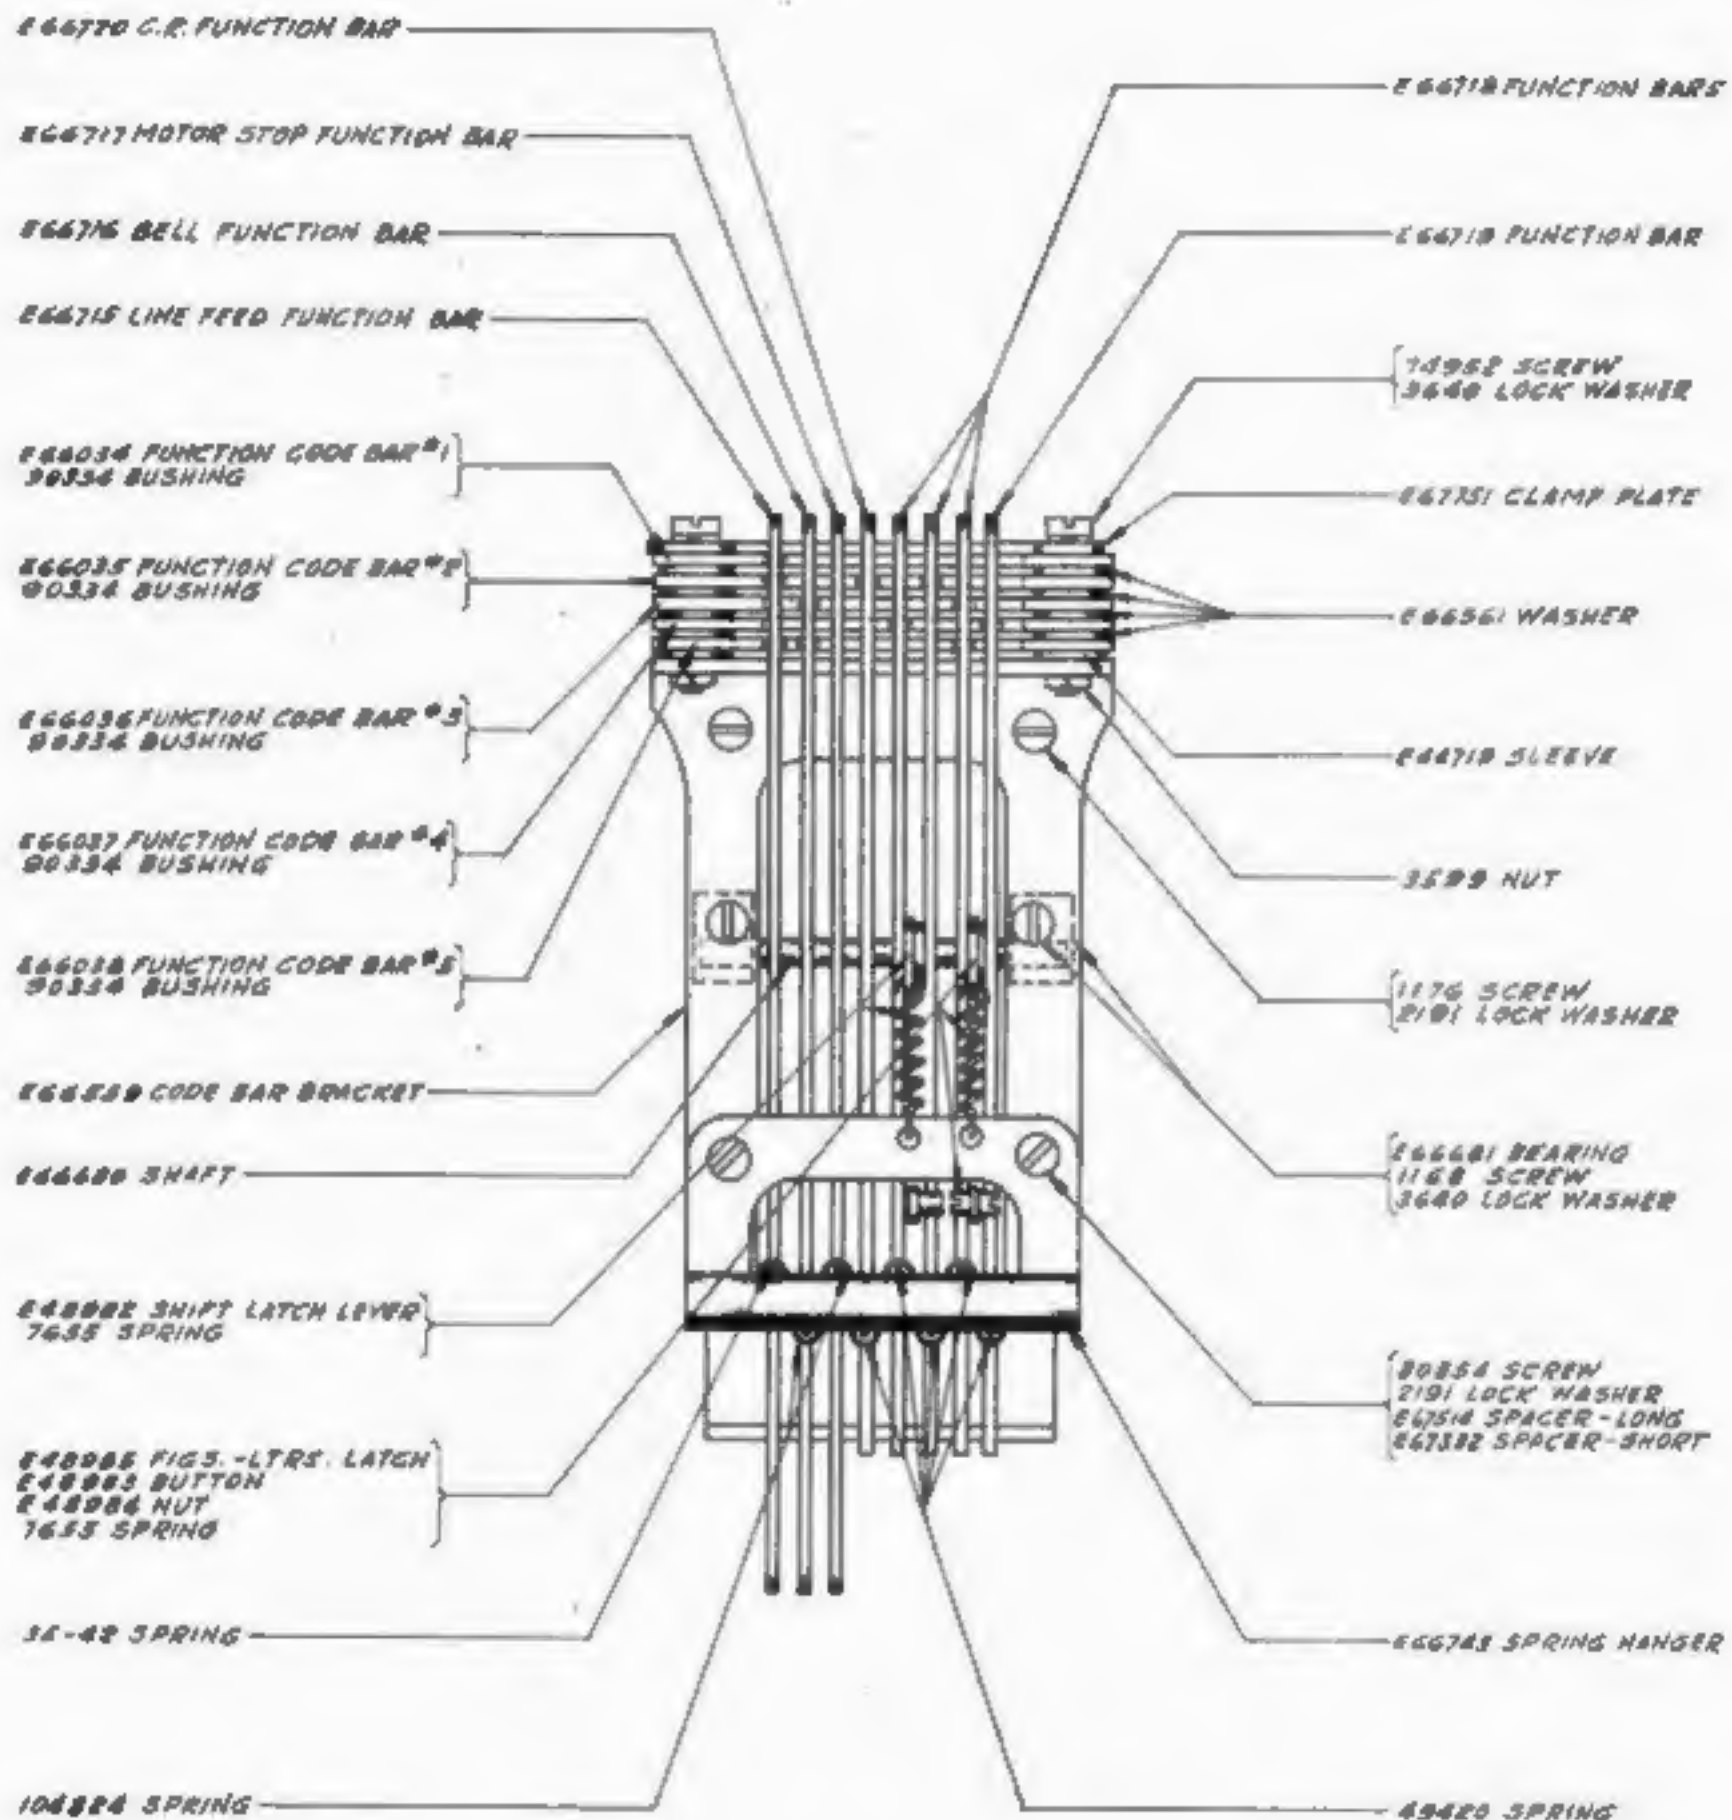



CODE & FUNCTION BAR UNIT

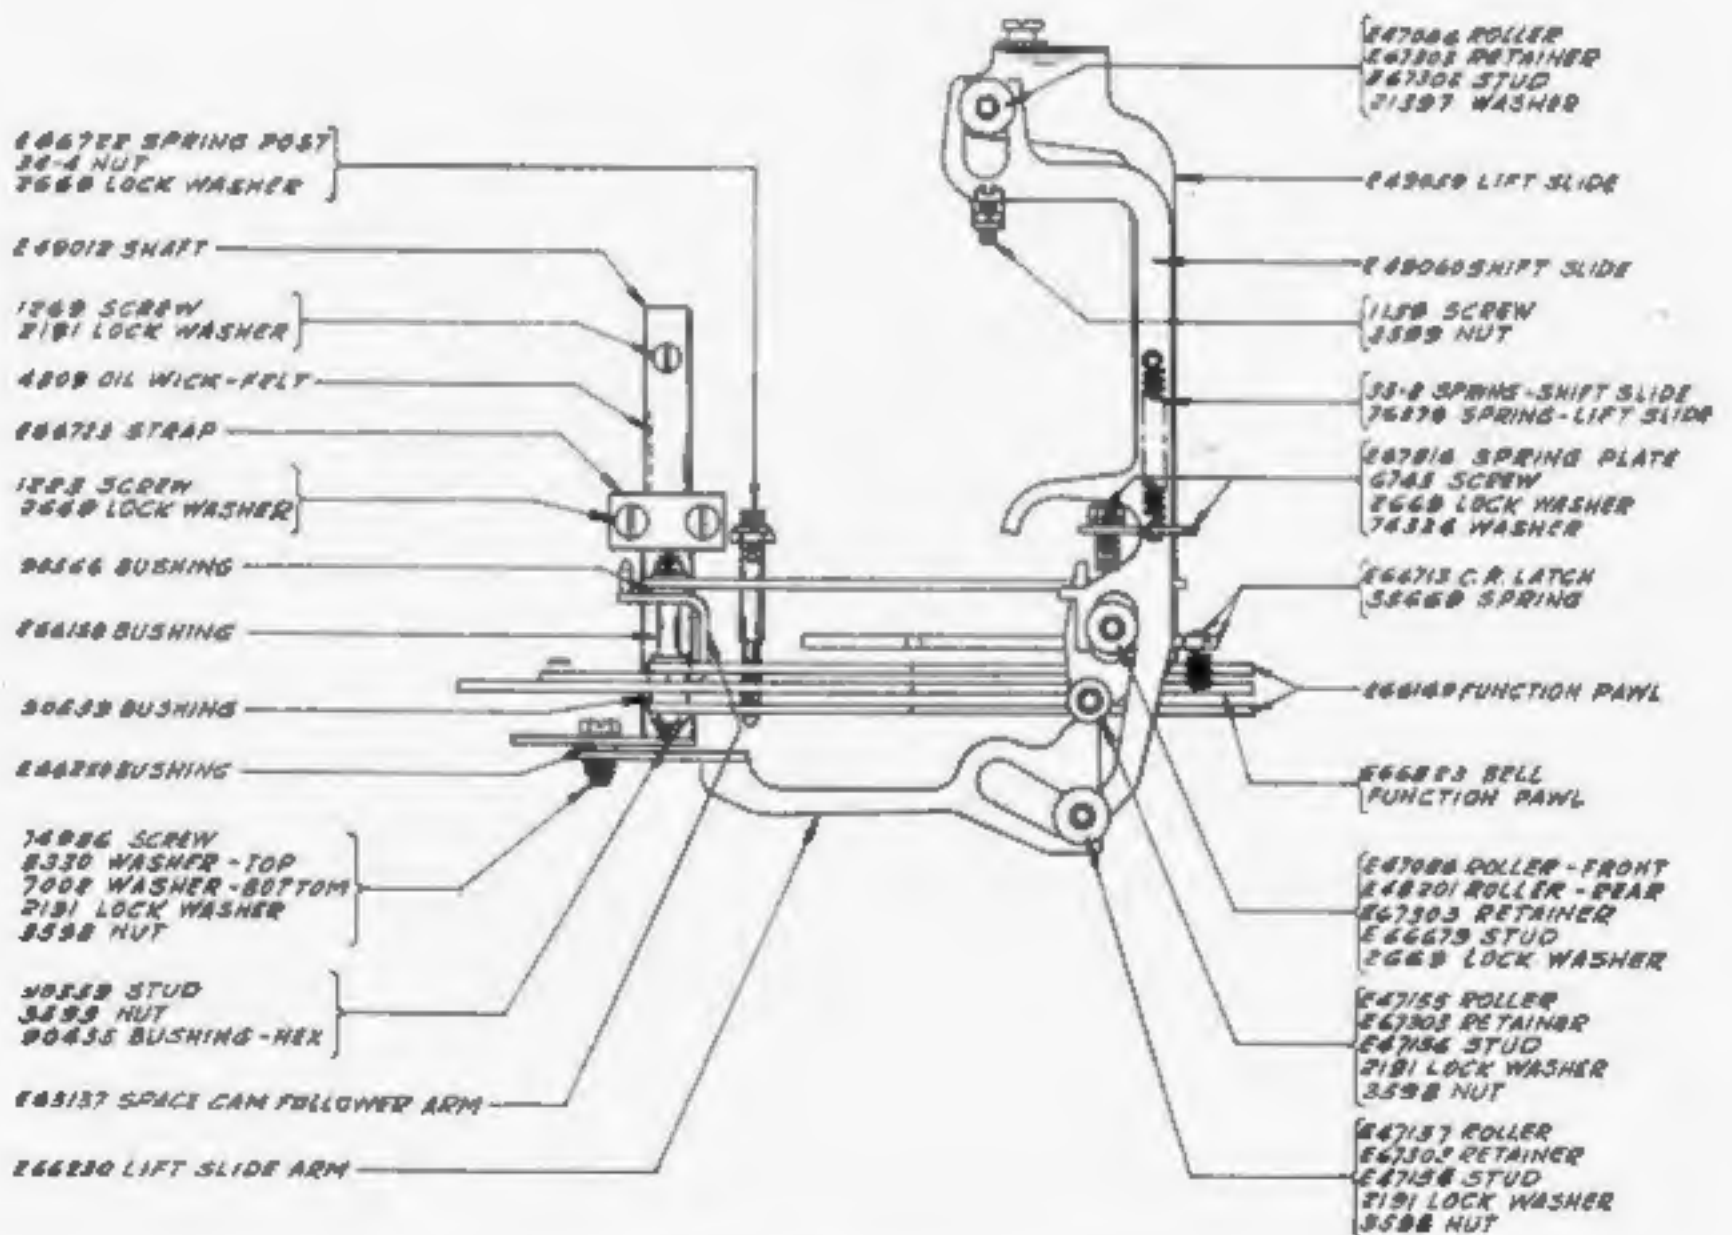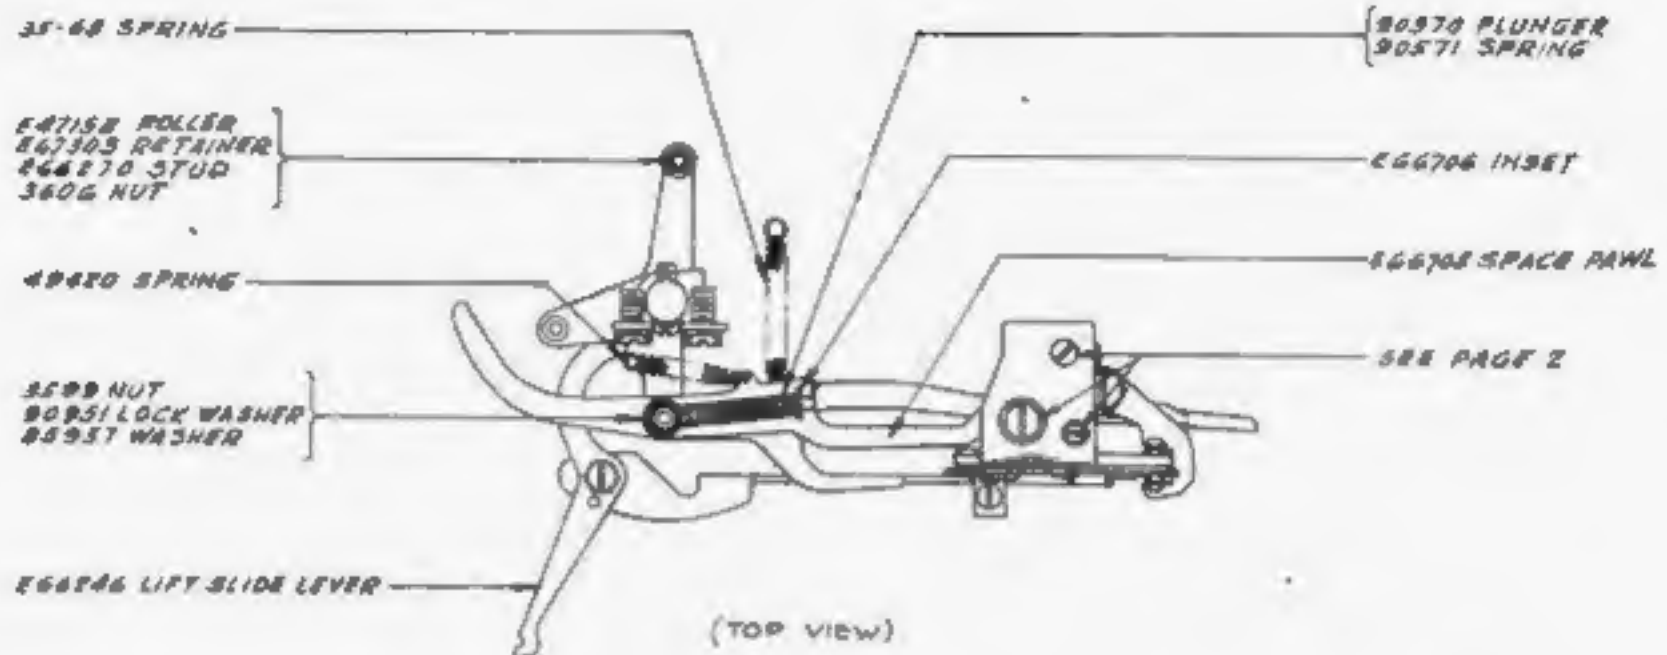


TYPE-WHEEL LIFT & FUNCTION PAWLS
(FRONT VIEW)

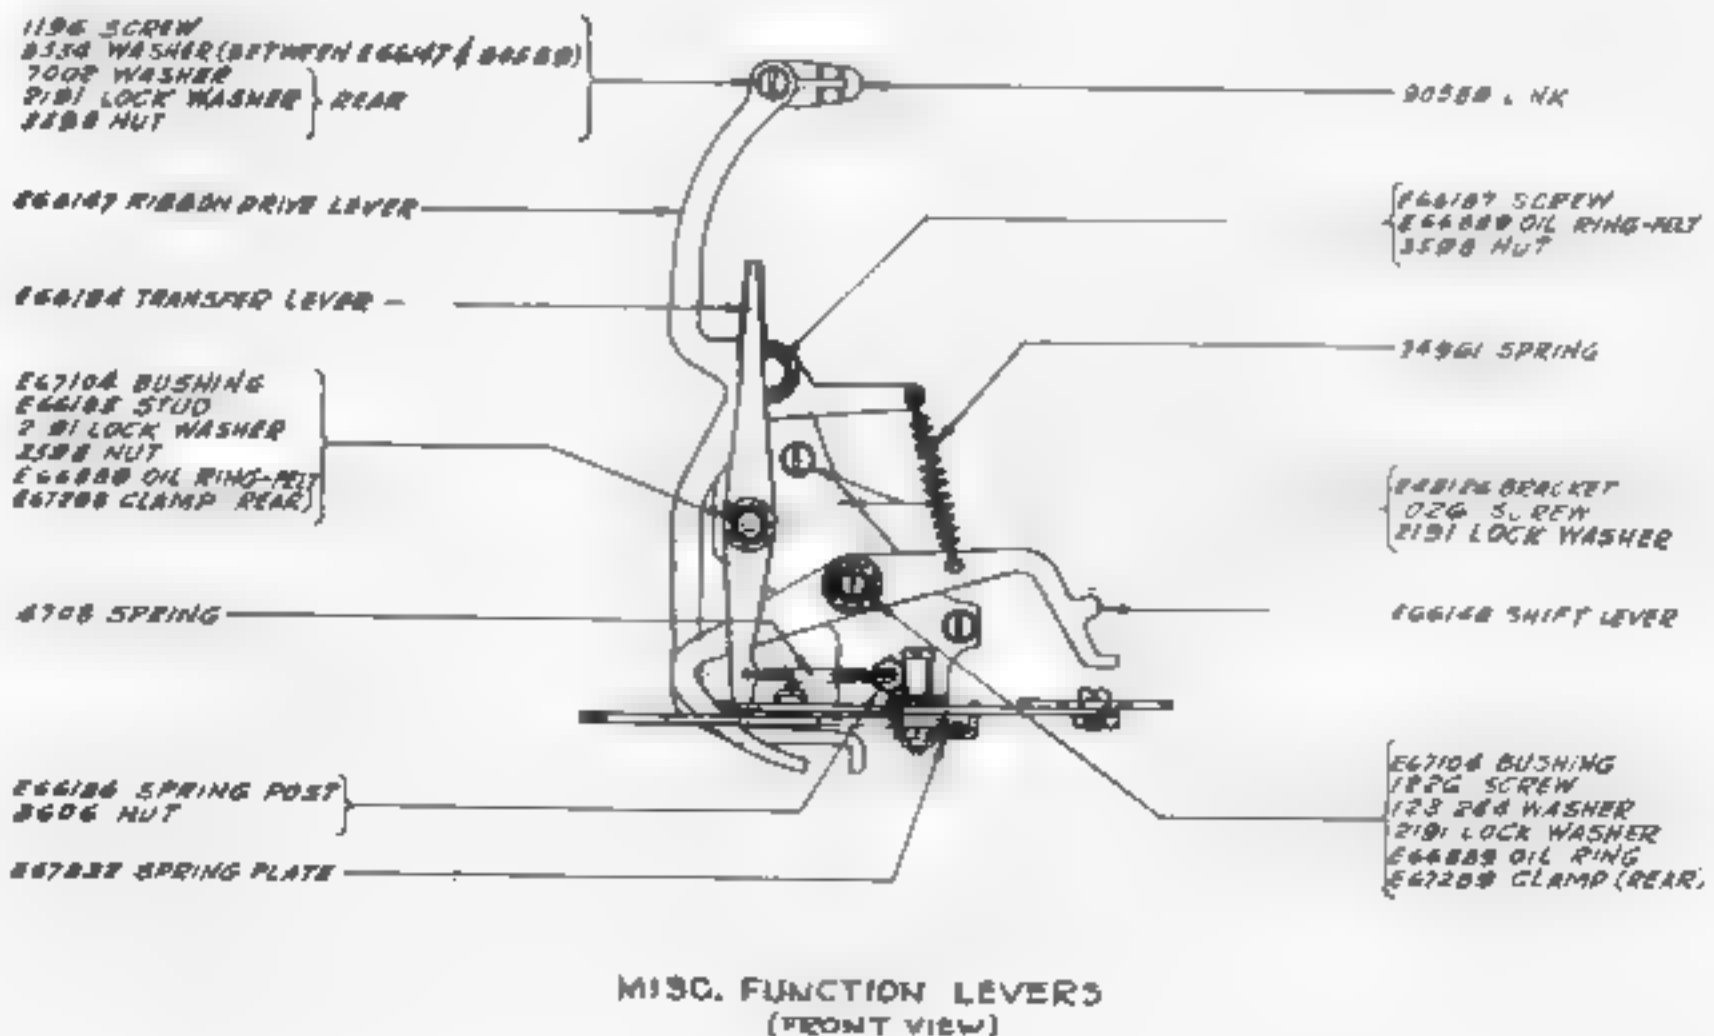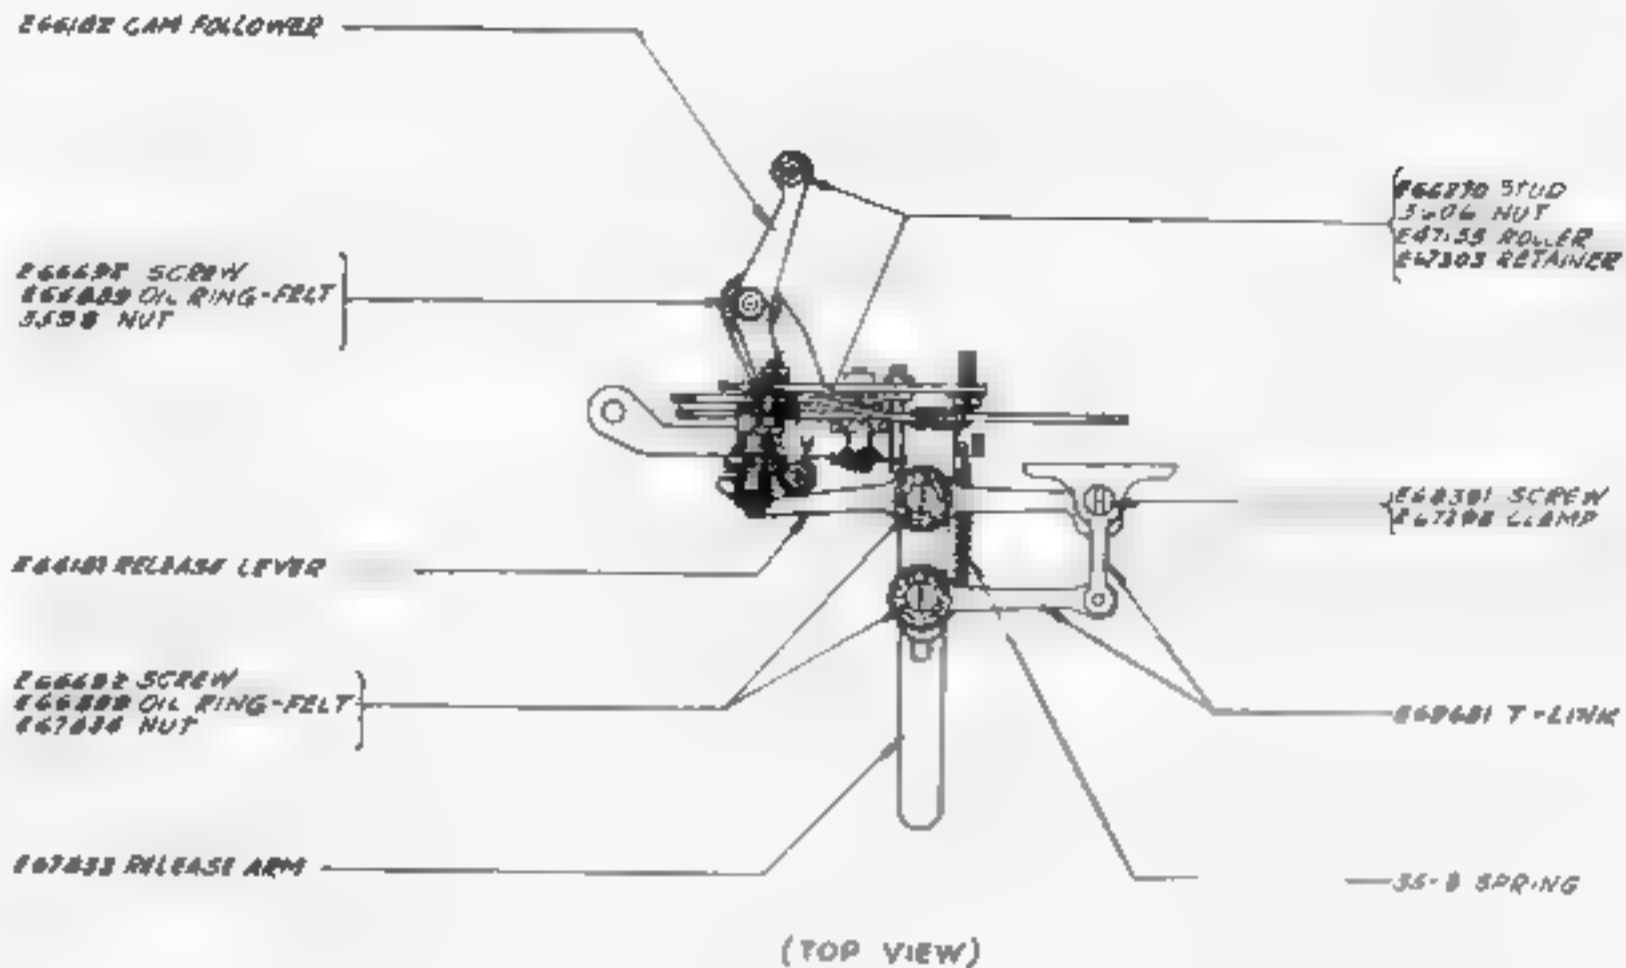


-8-
(D-1138)

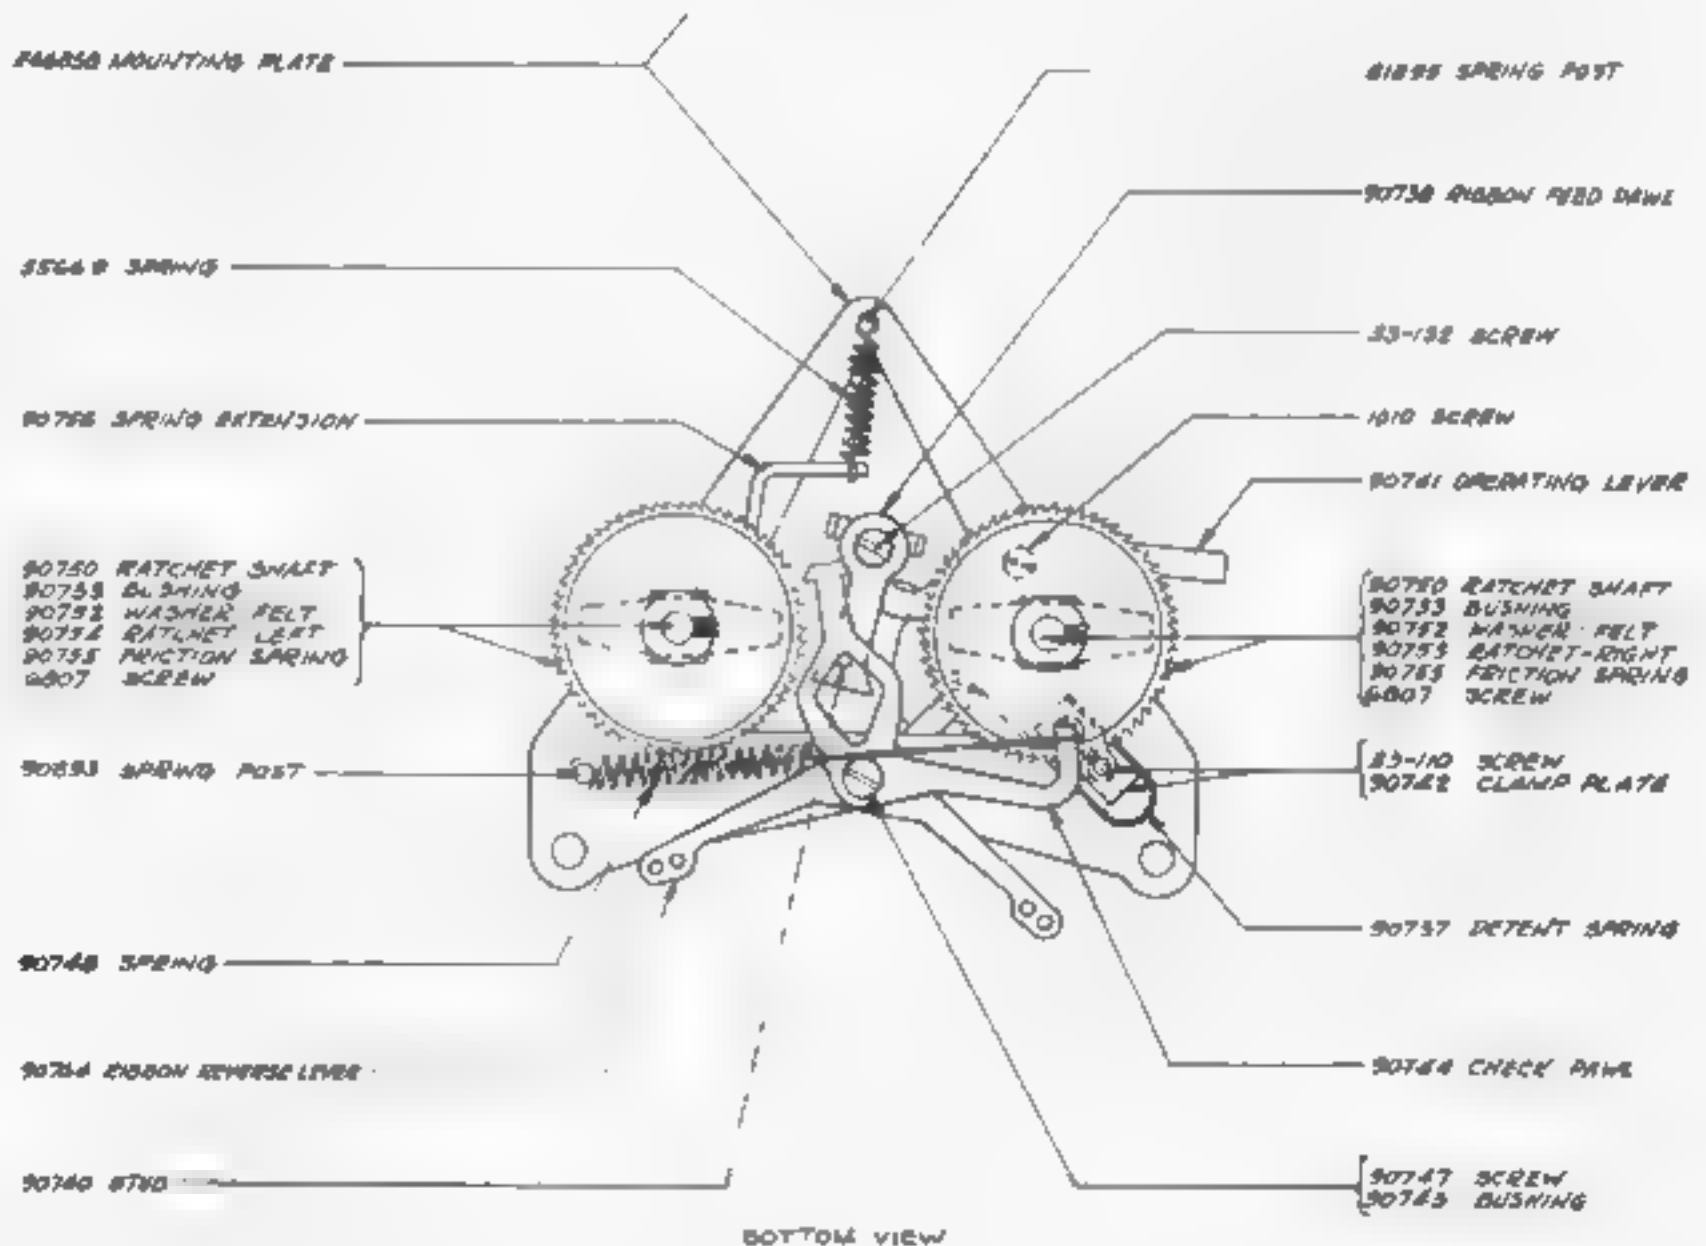
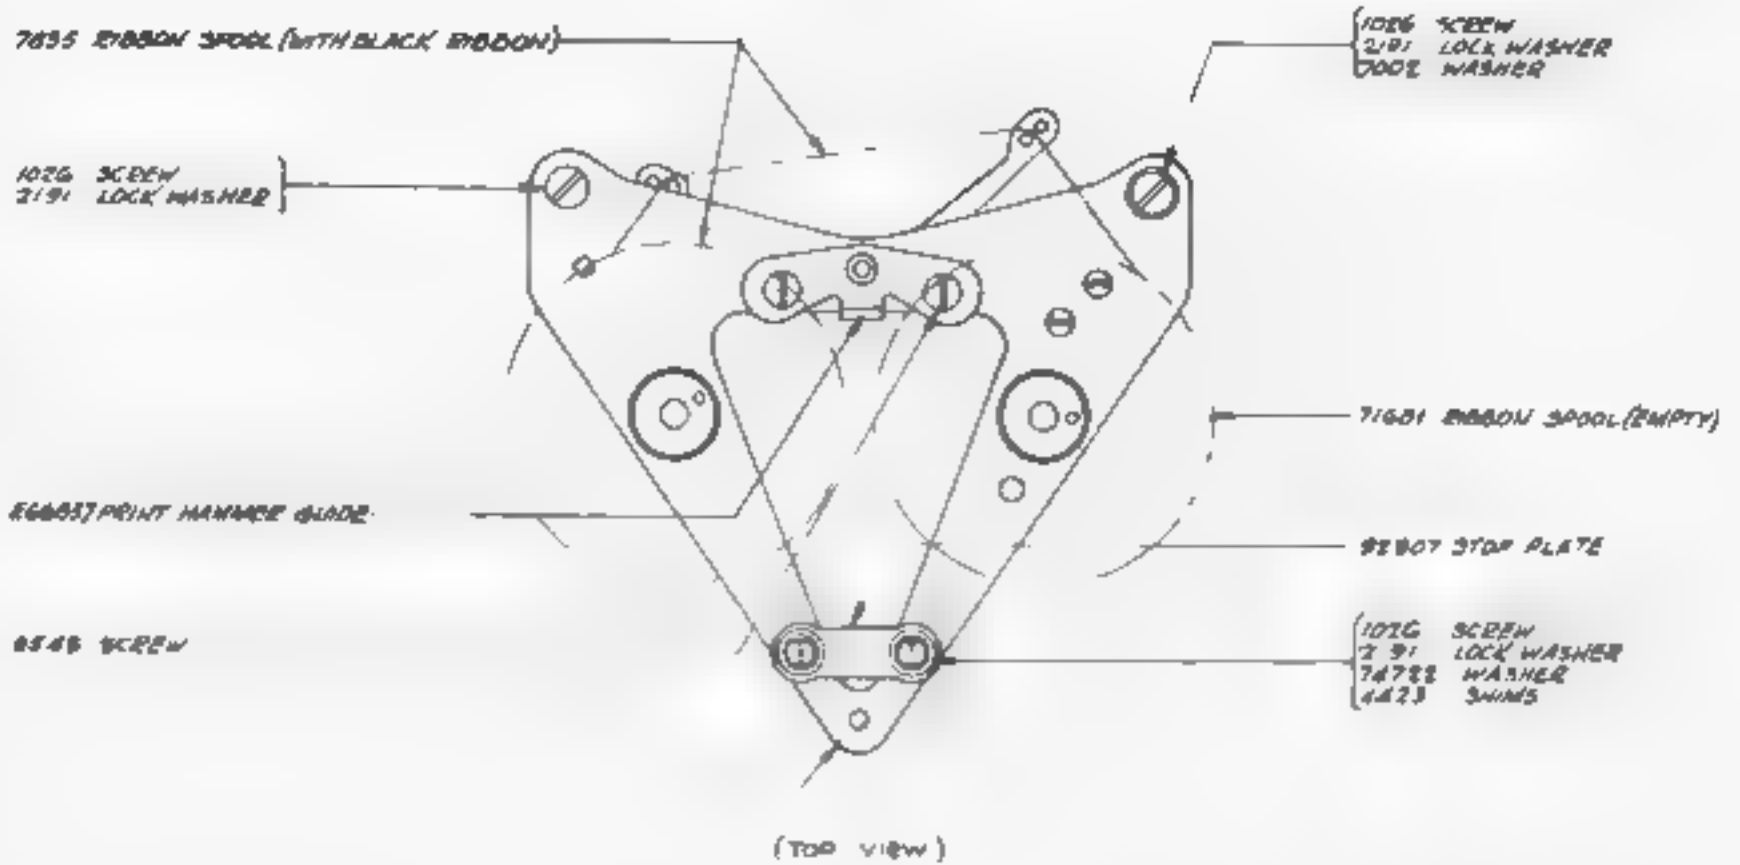


RIBBON FEED MECHANISM



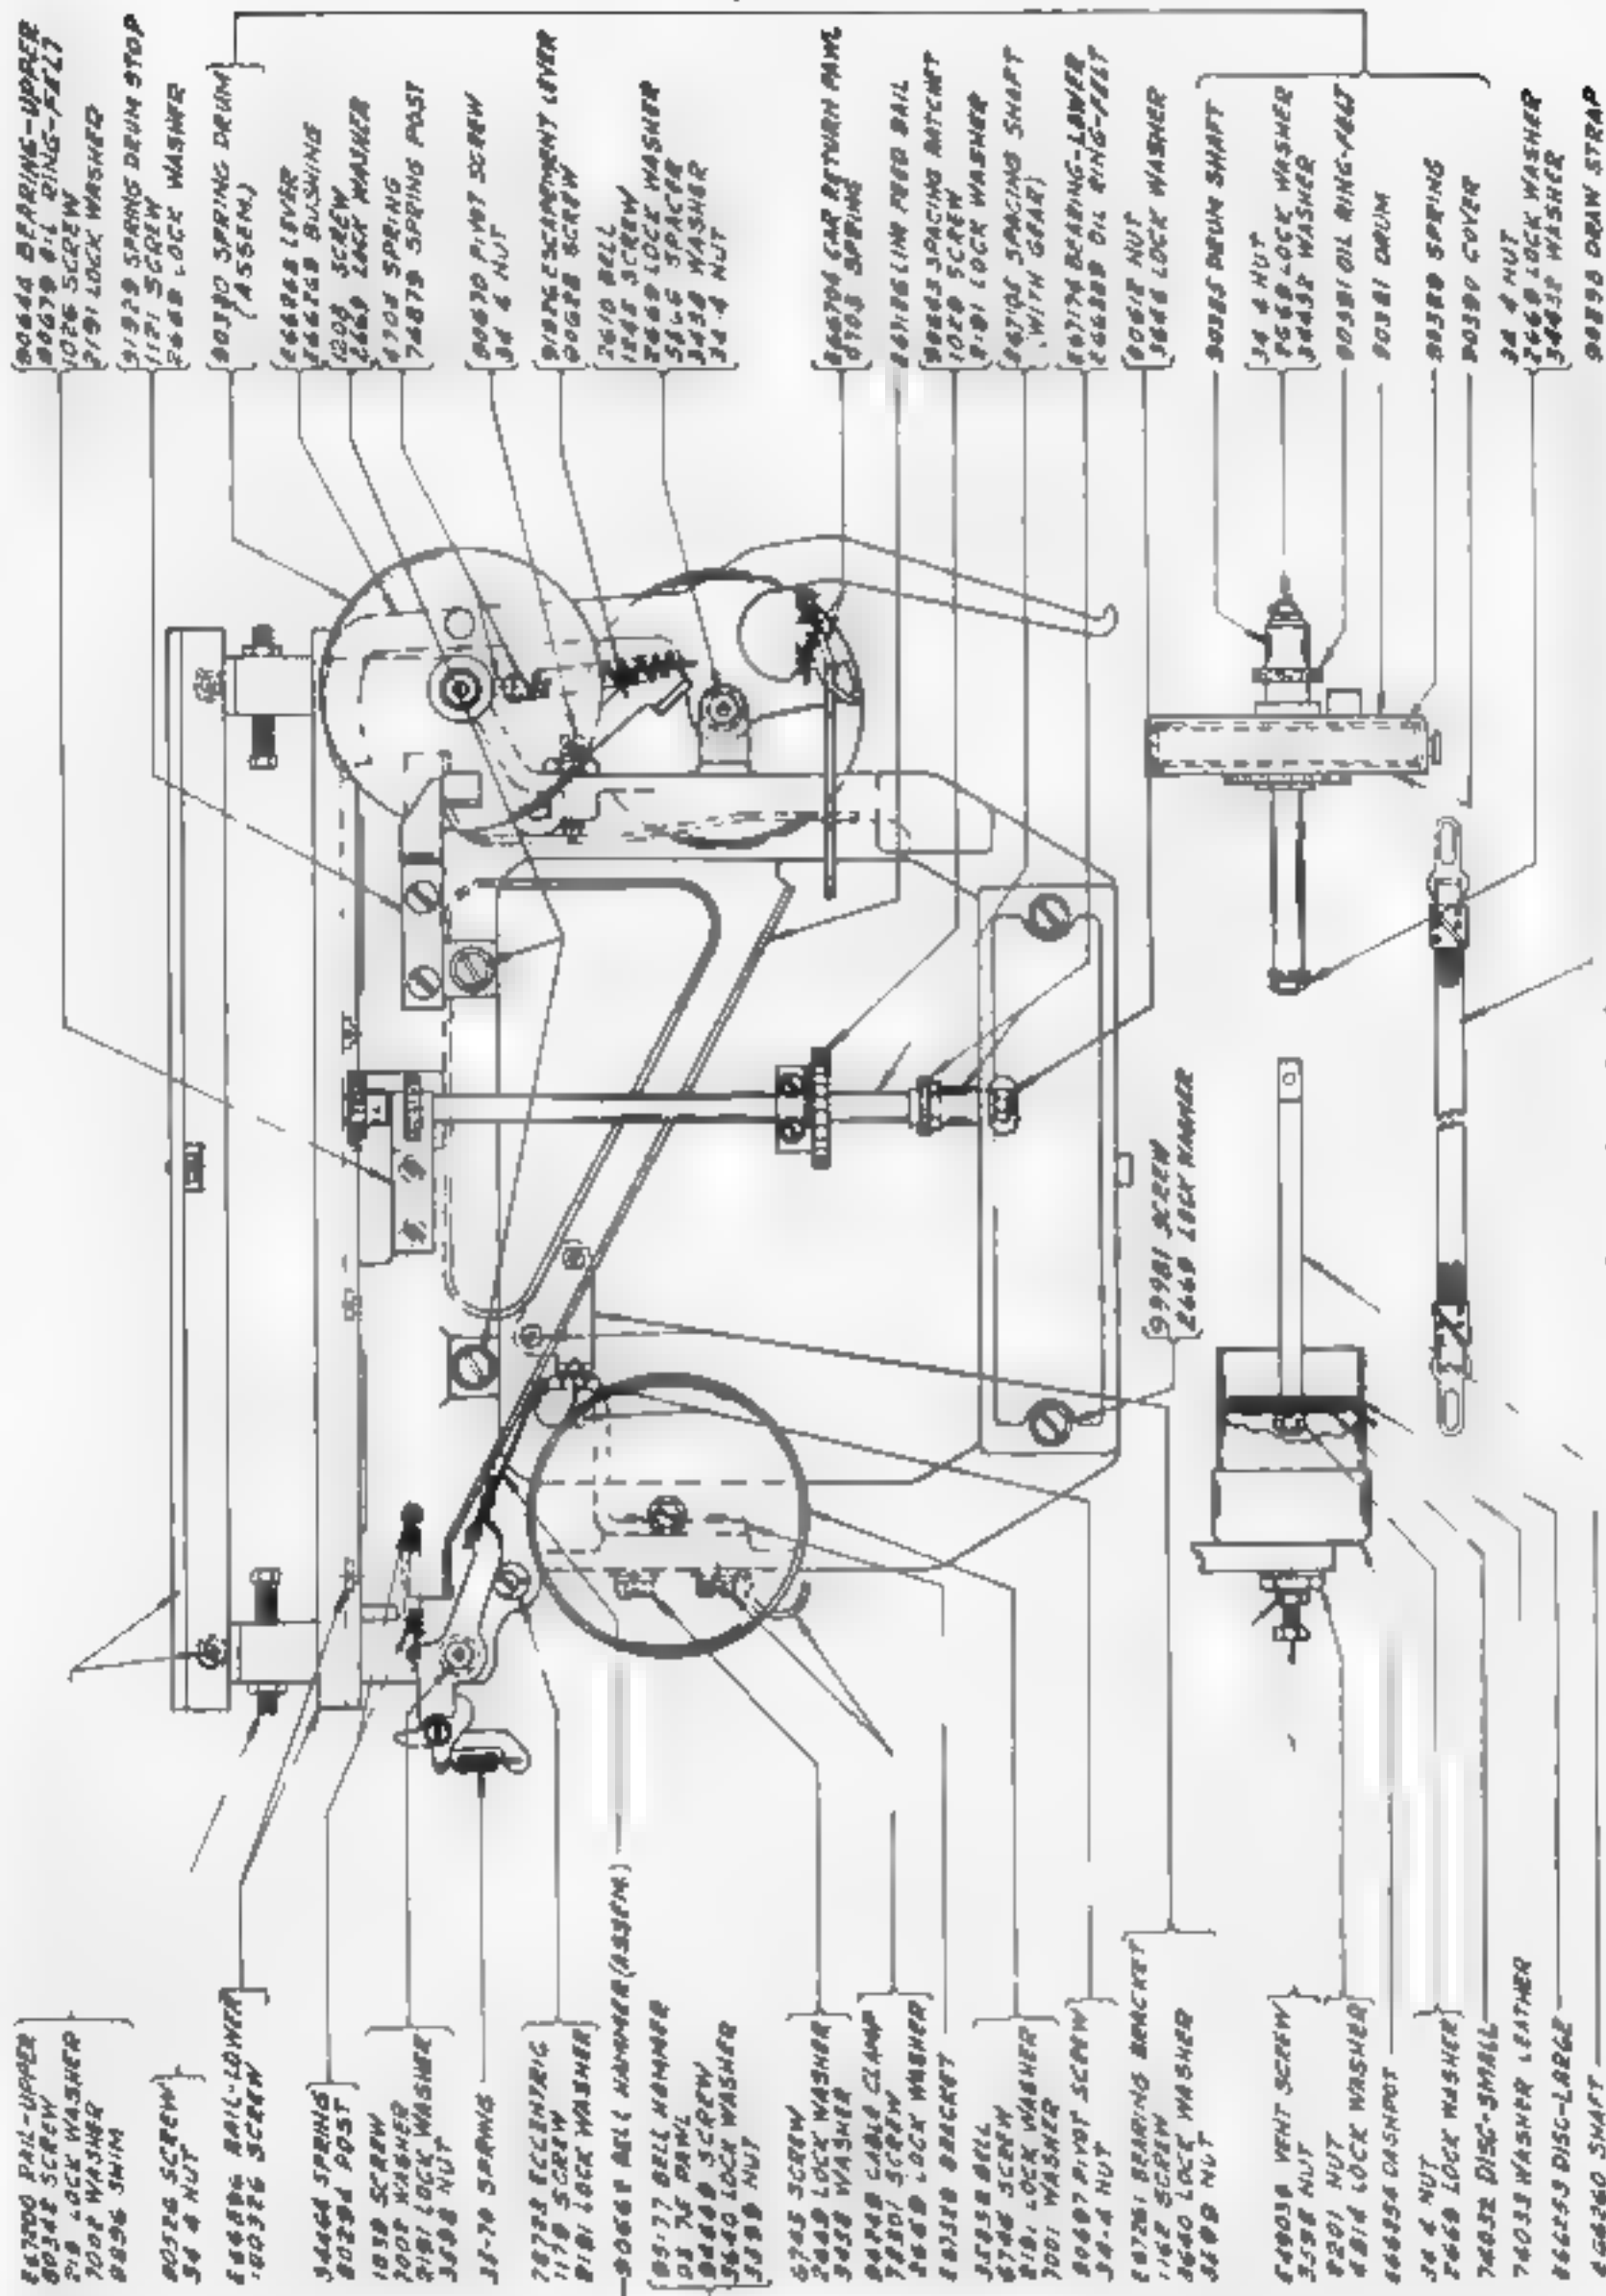



READ FRAME (ASSEM)

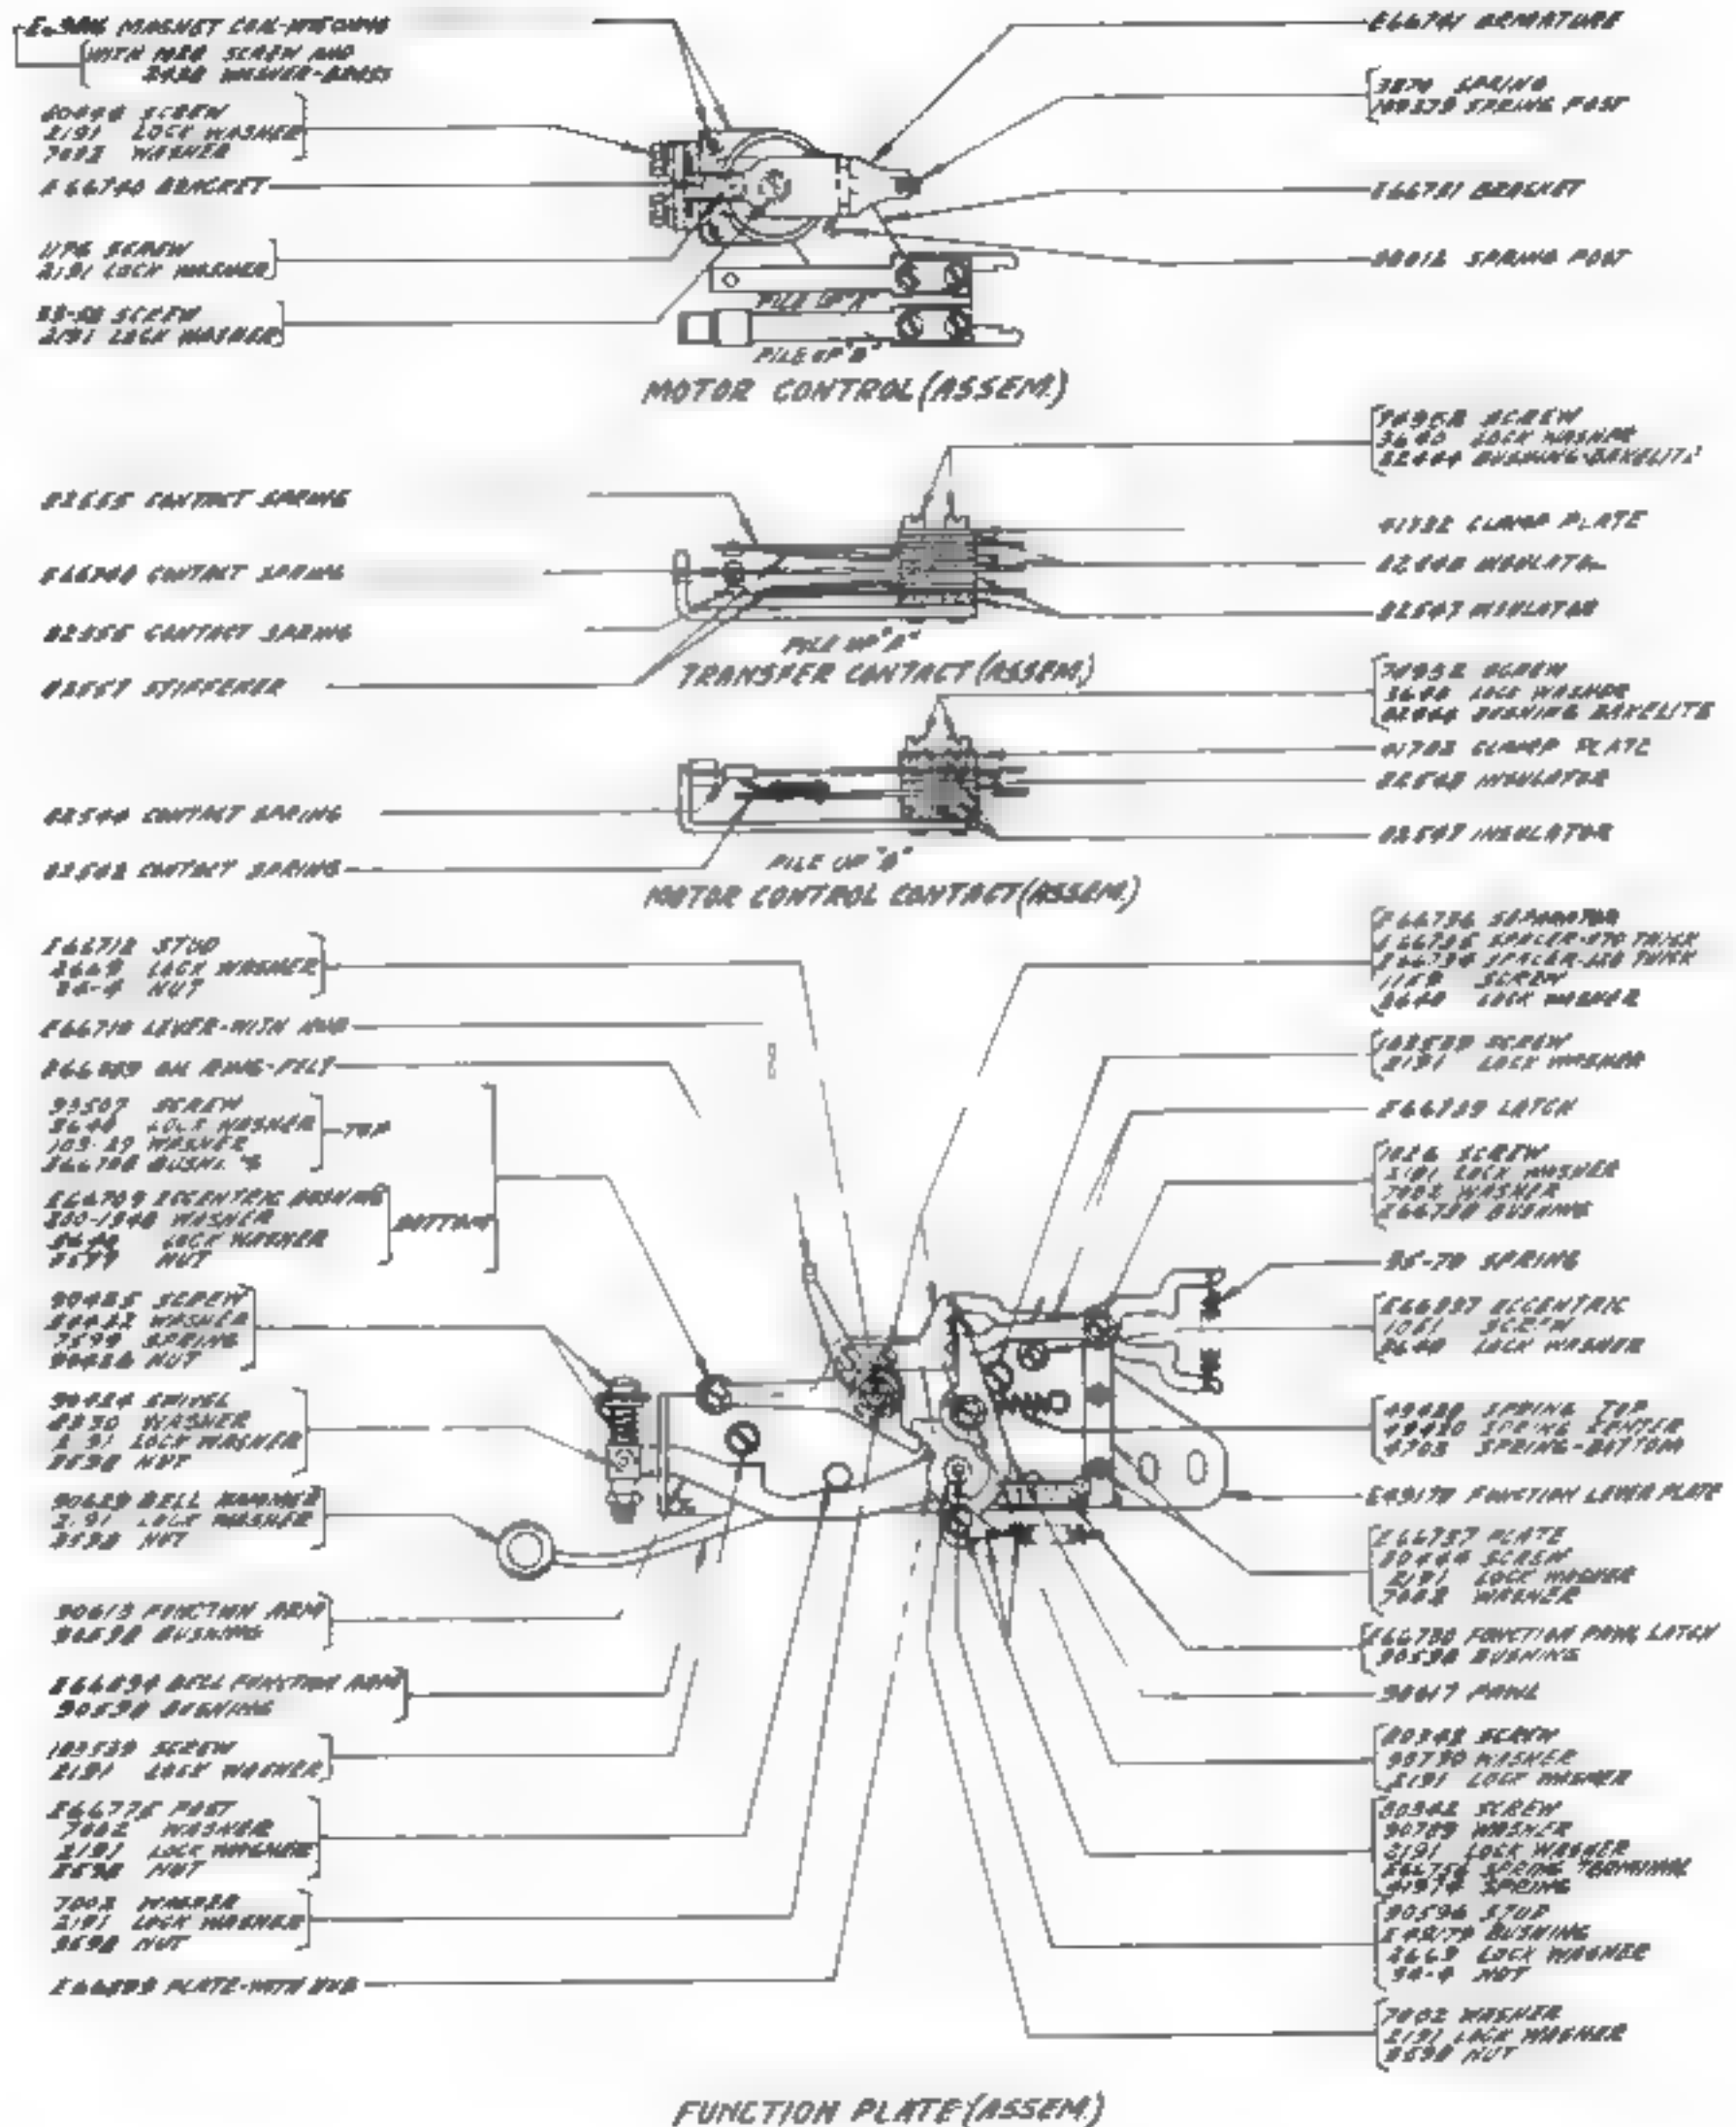

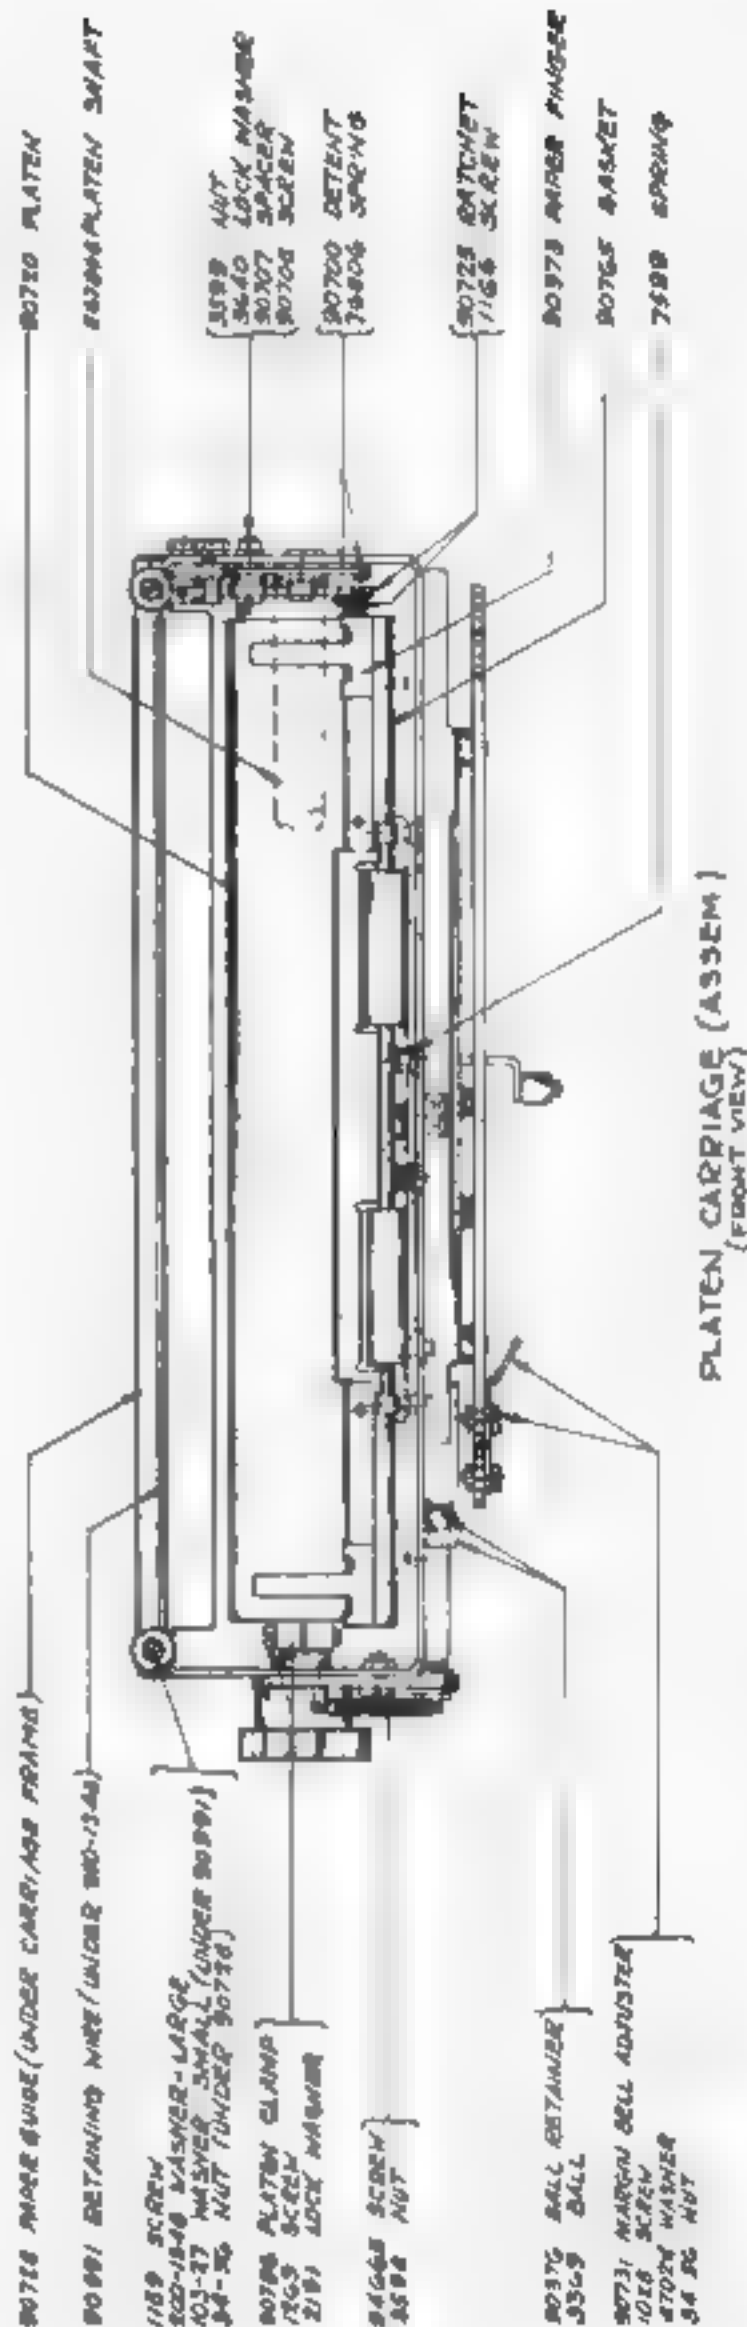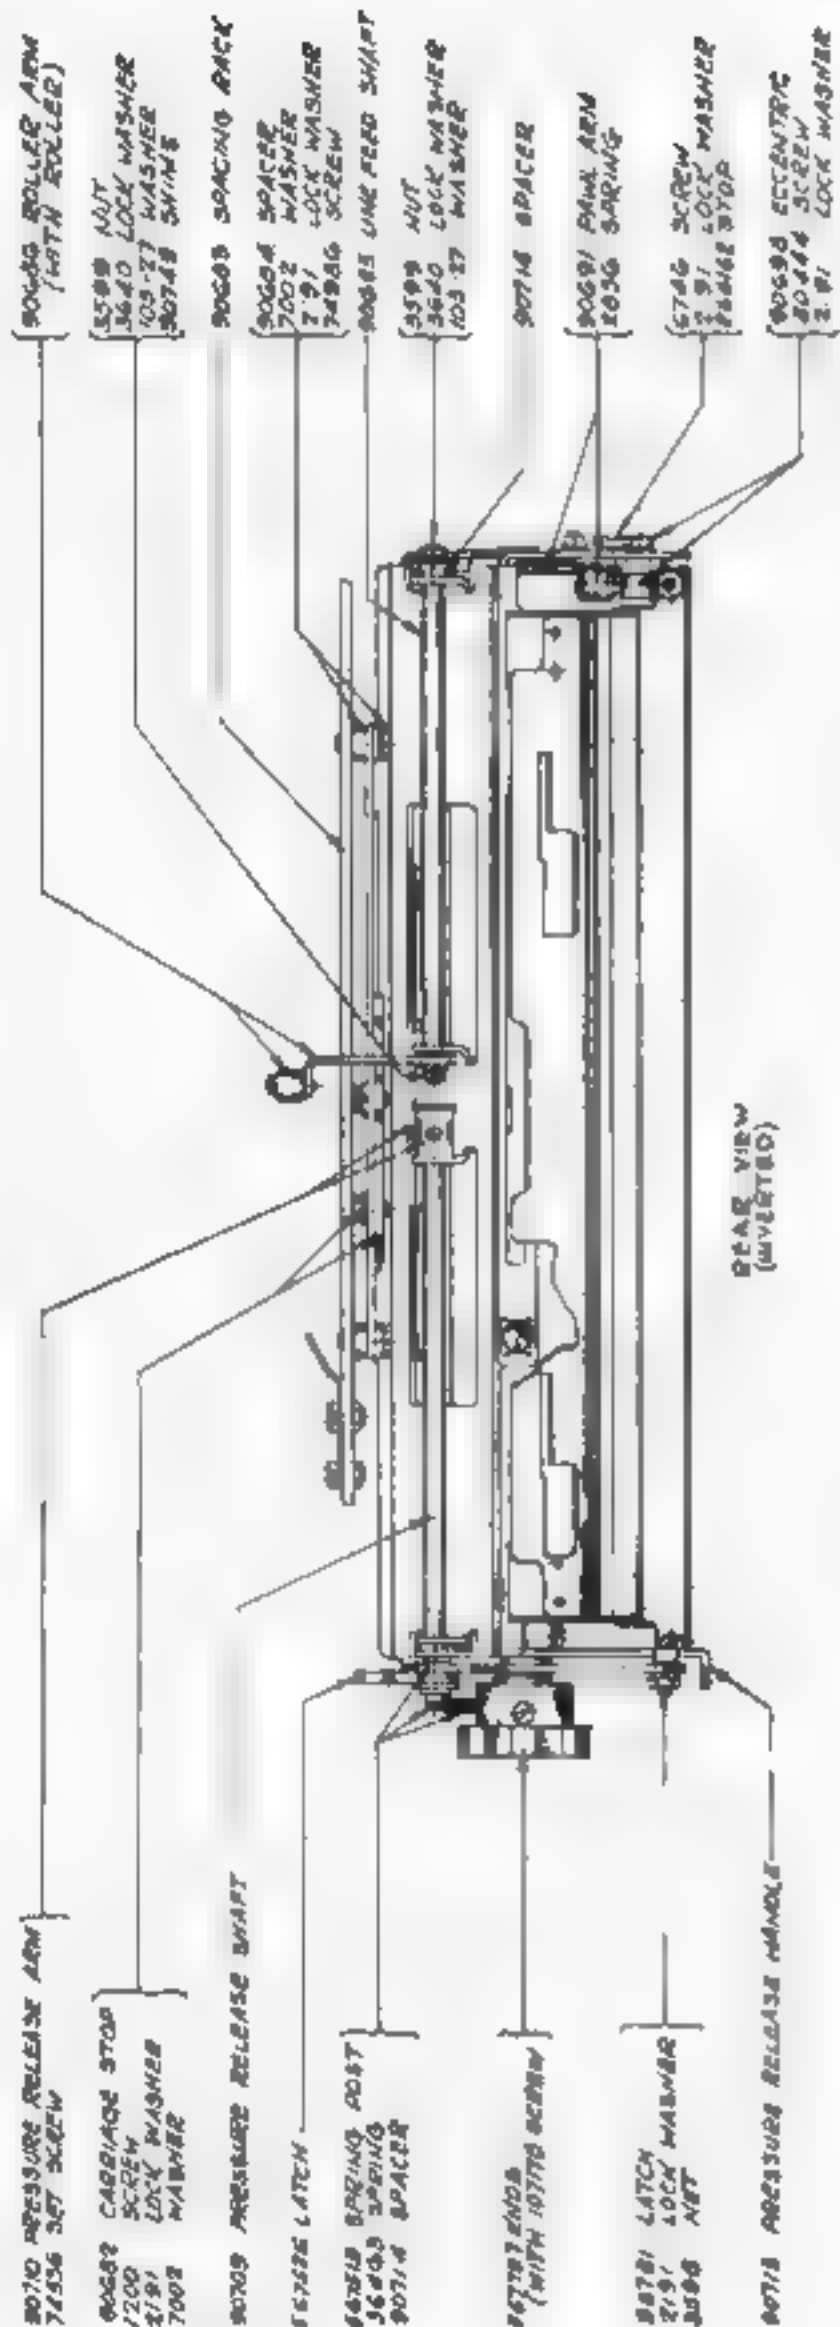


PLATEN CARRIAGE (ASSEMBLY)
(FRONT VIEW)

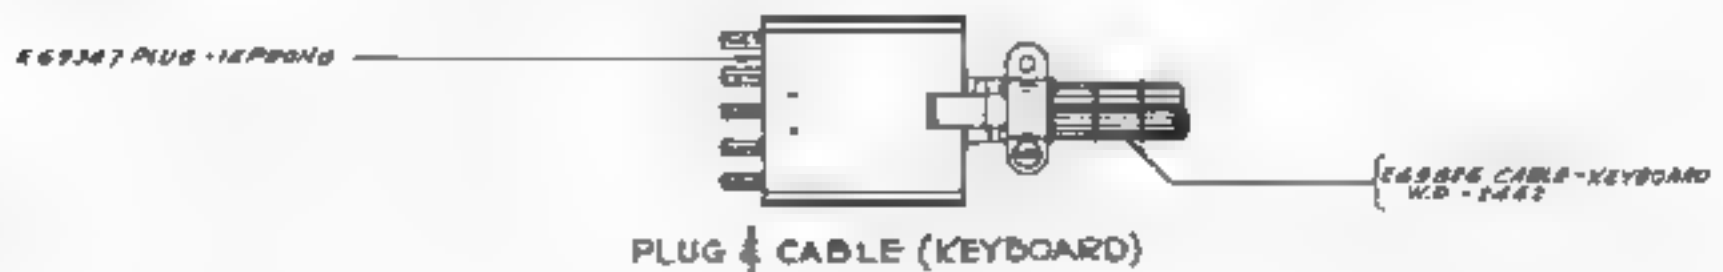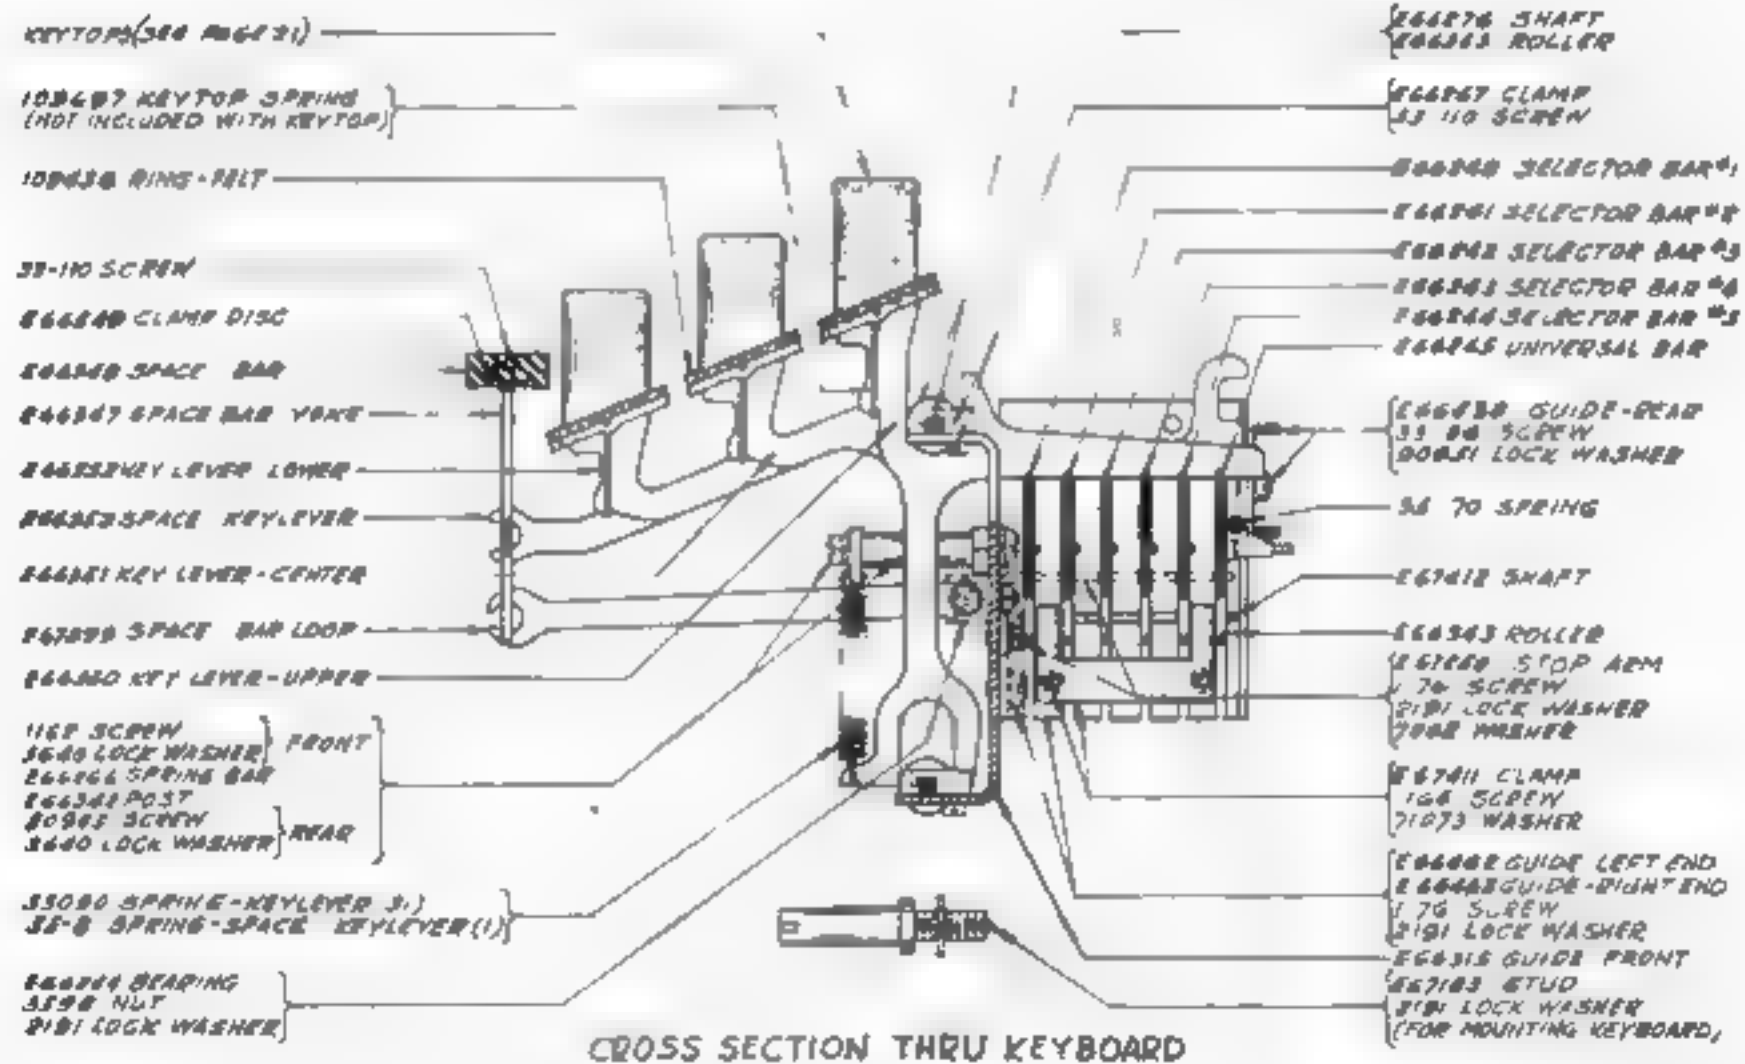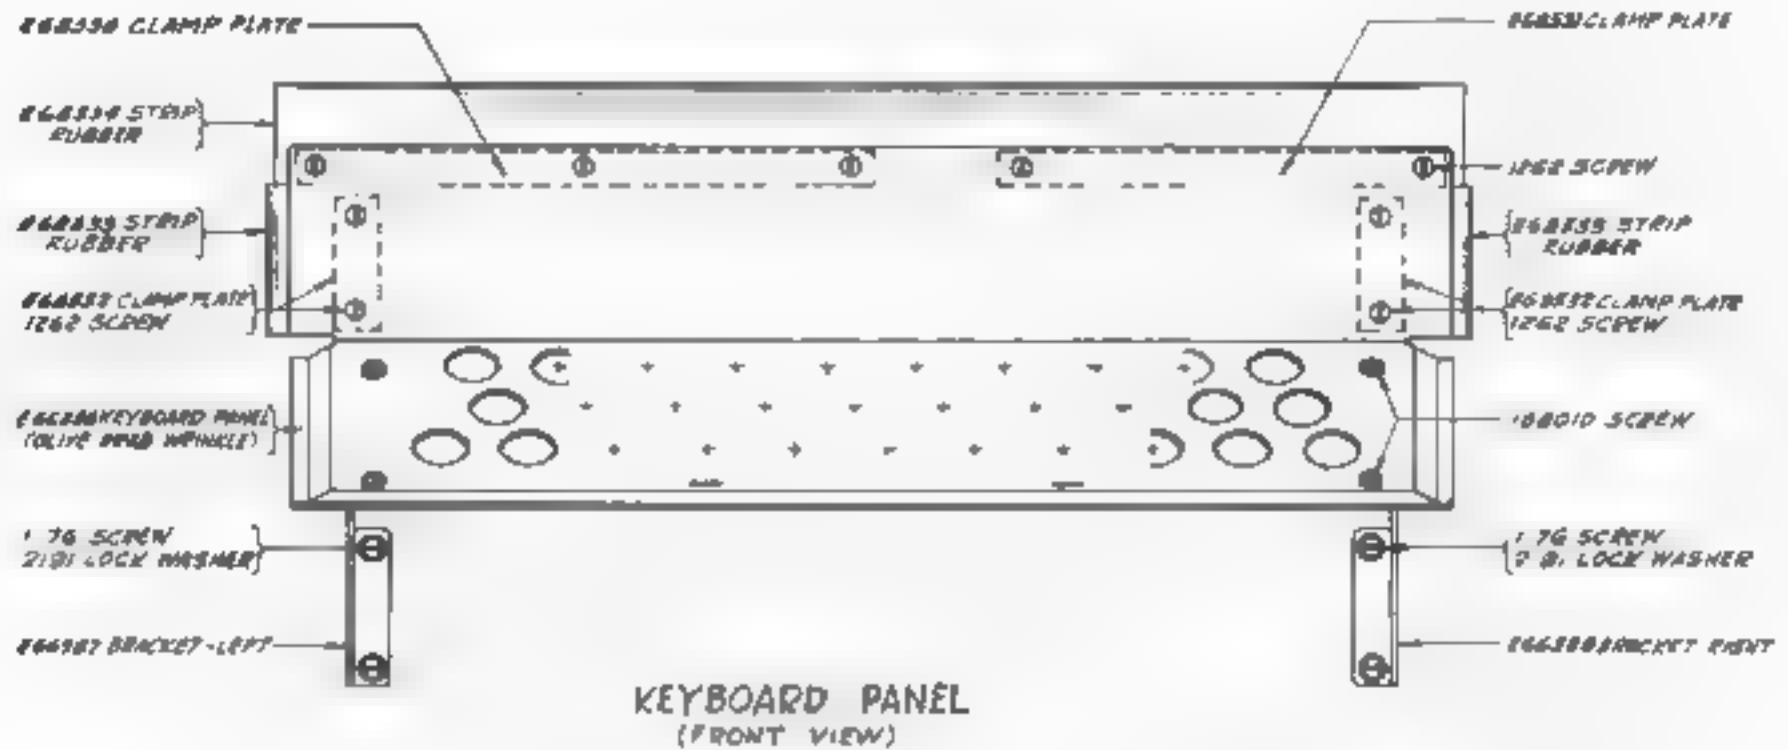


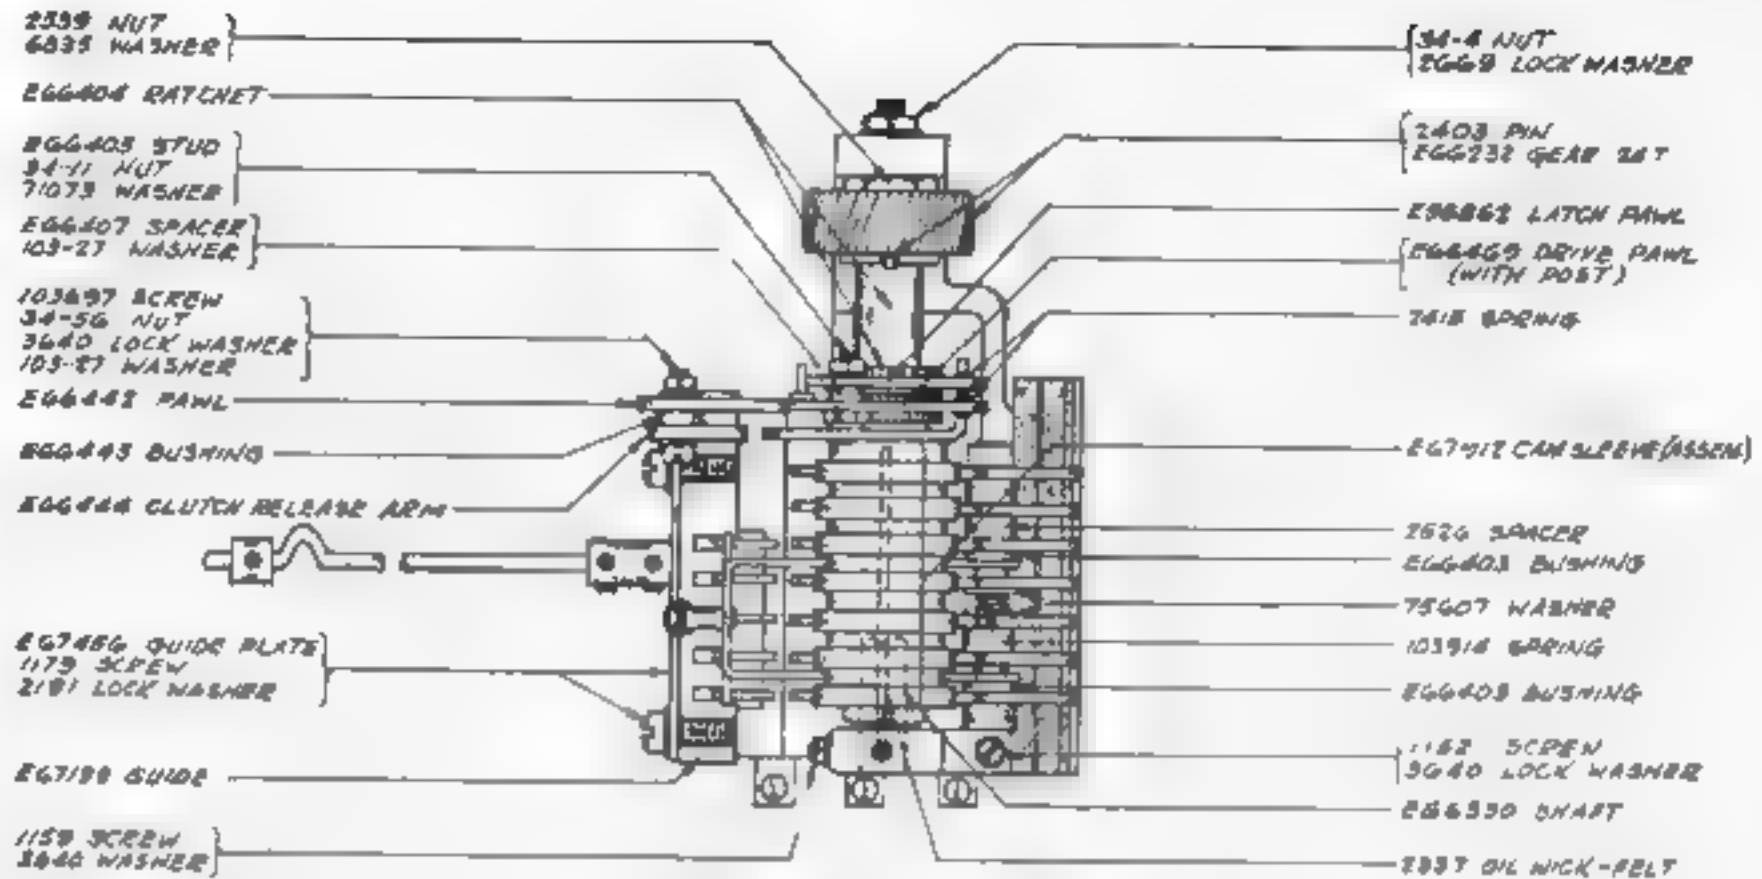


TOP VIEW

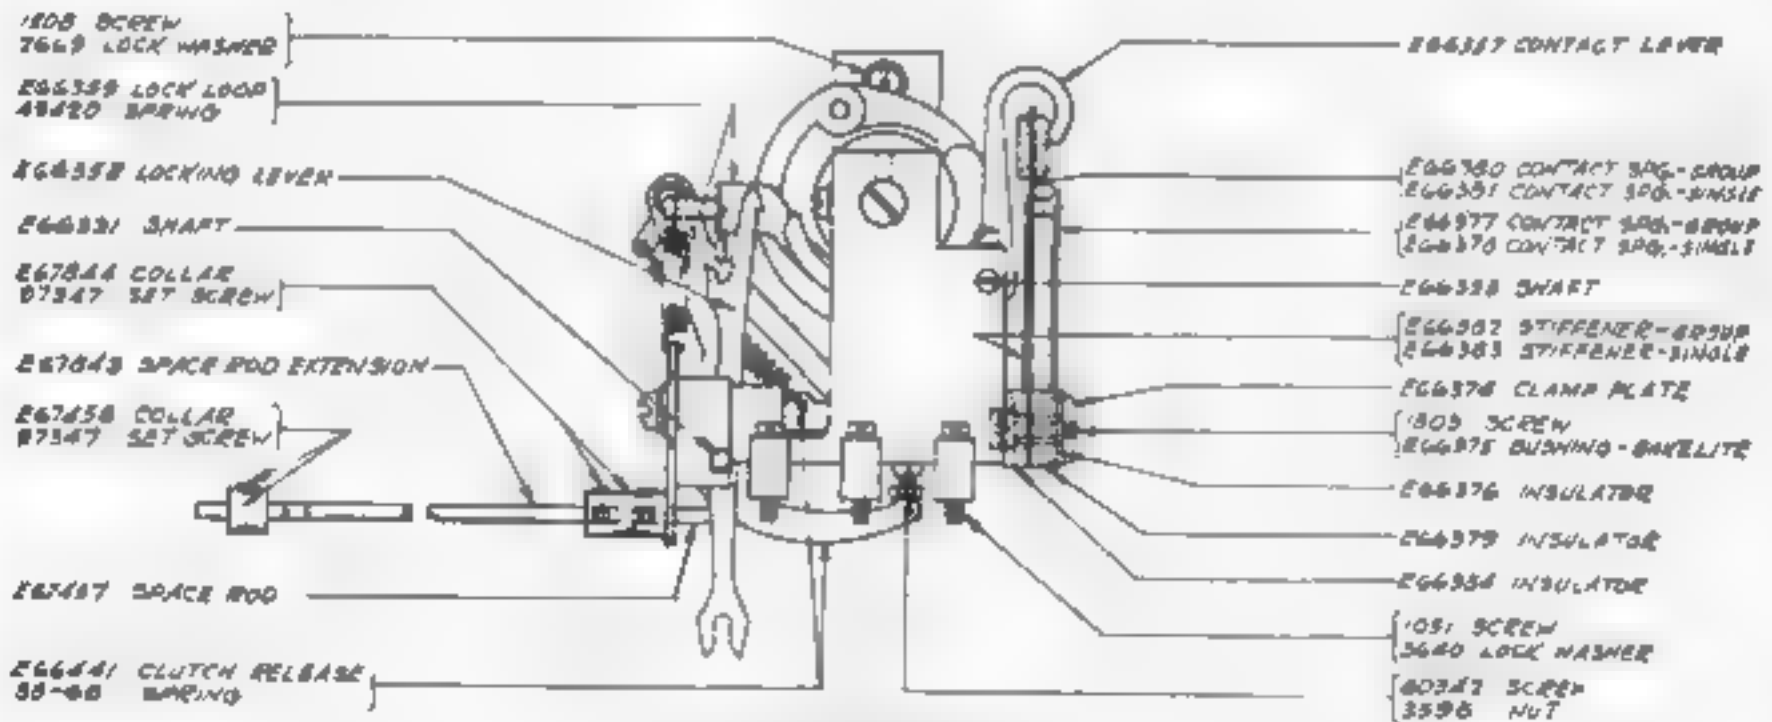

TRANSMITTER (ASSEM)
FRONT VIEW

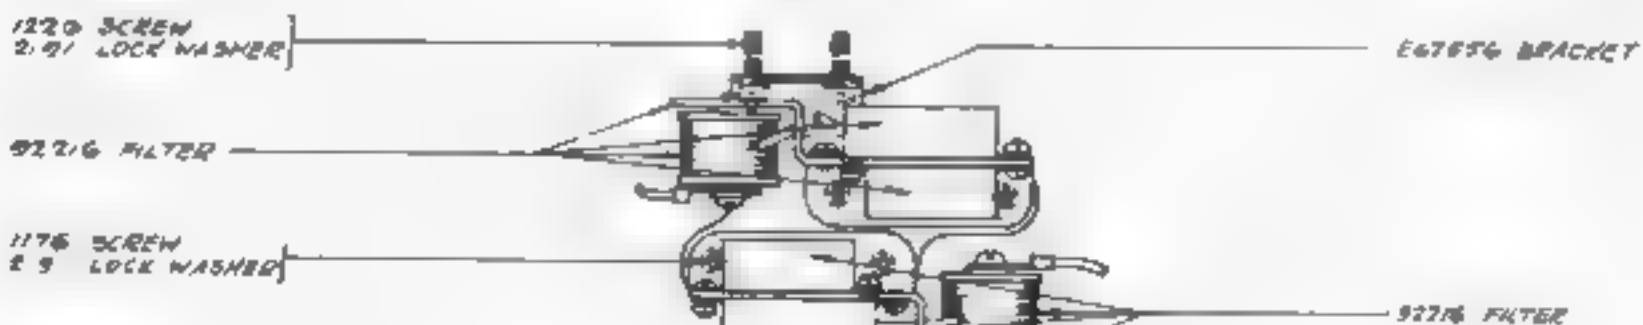

FILTER (ASSEM)

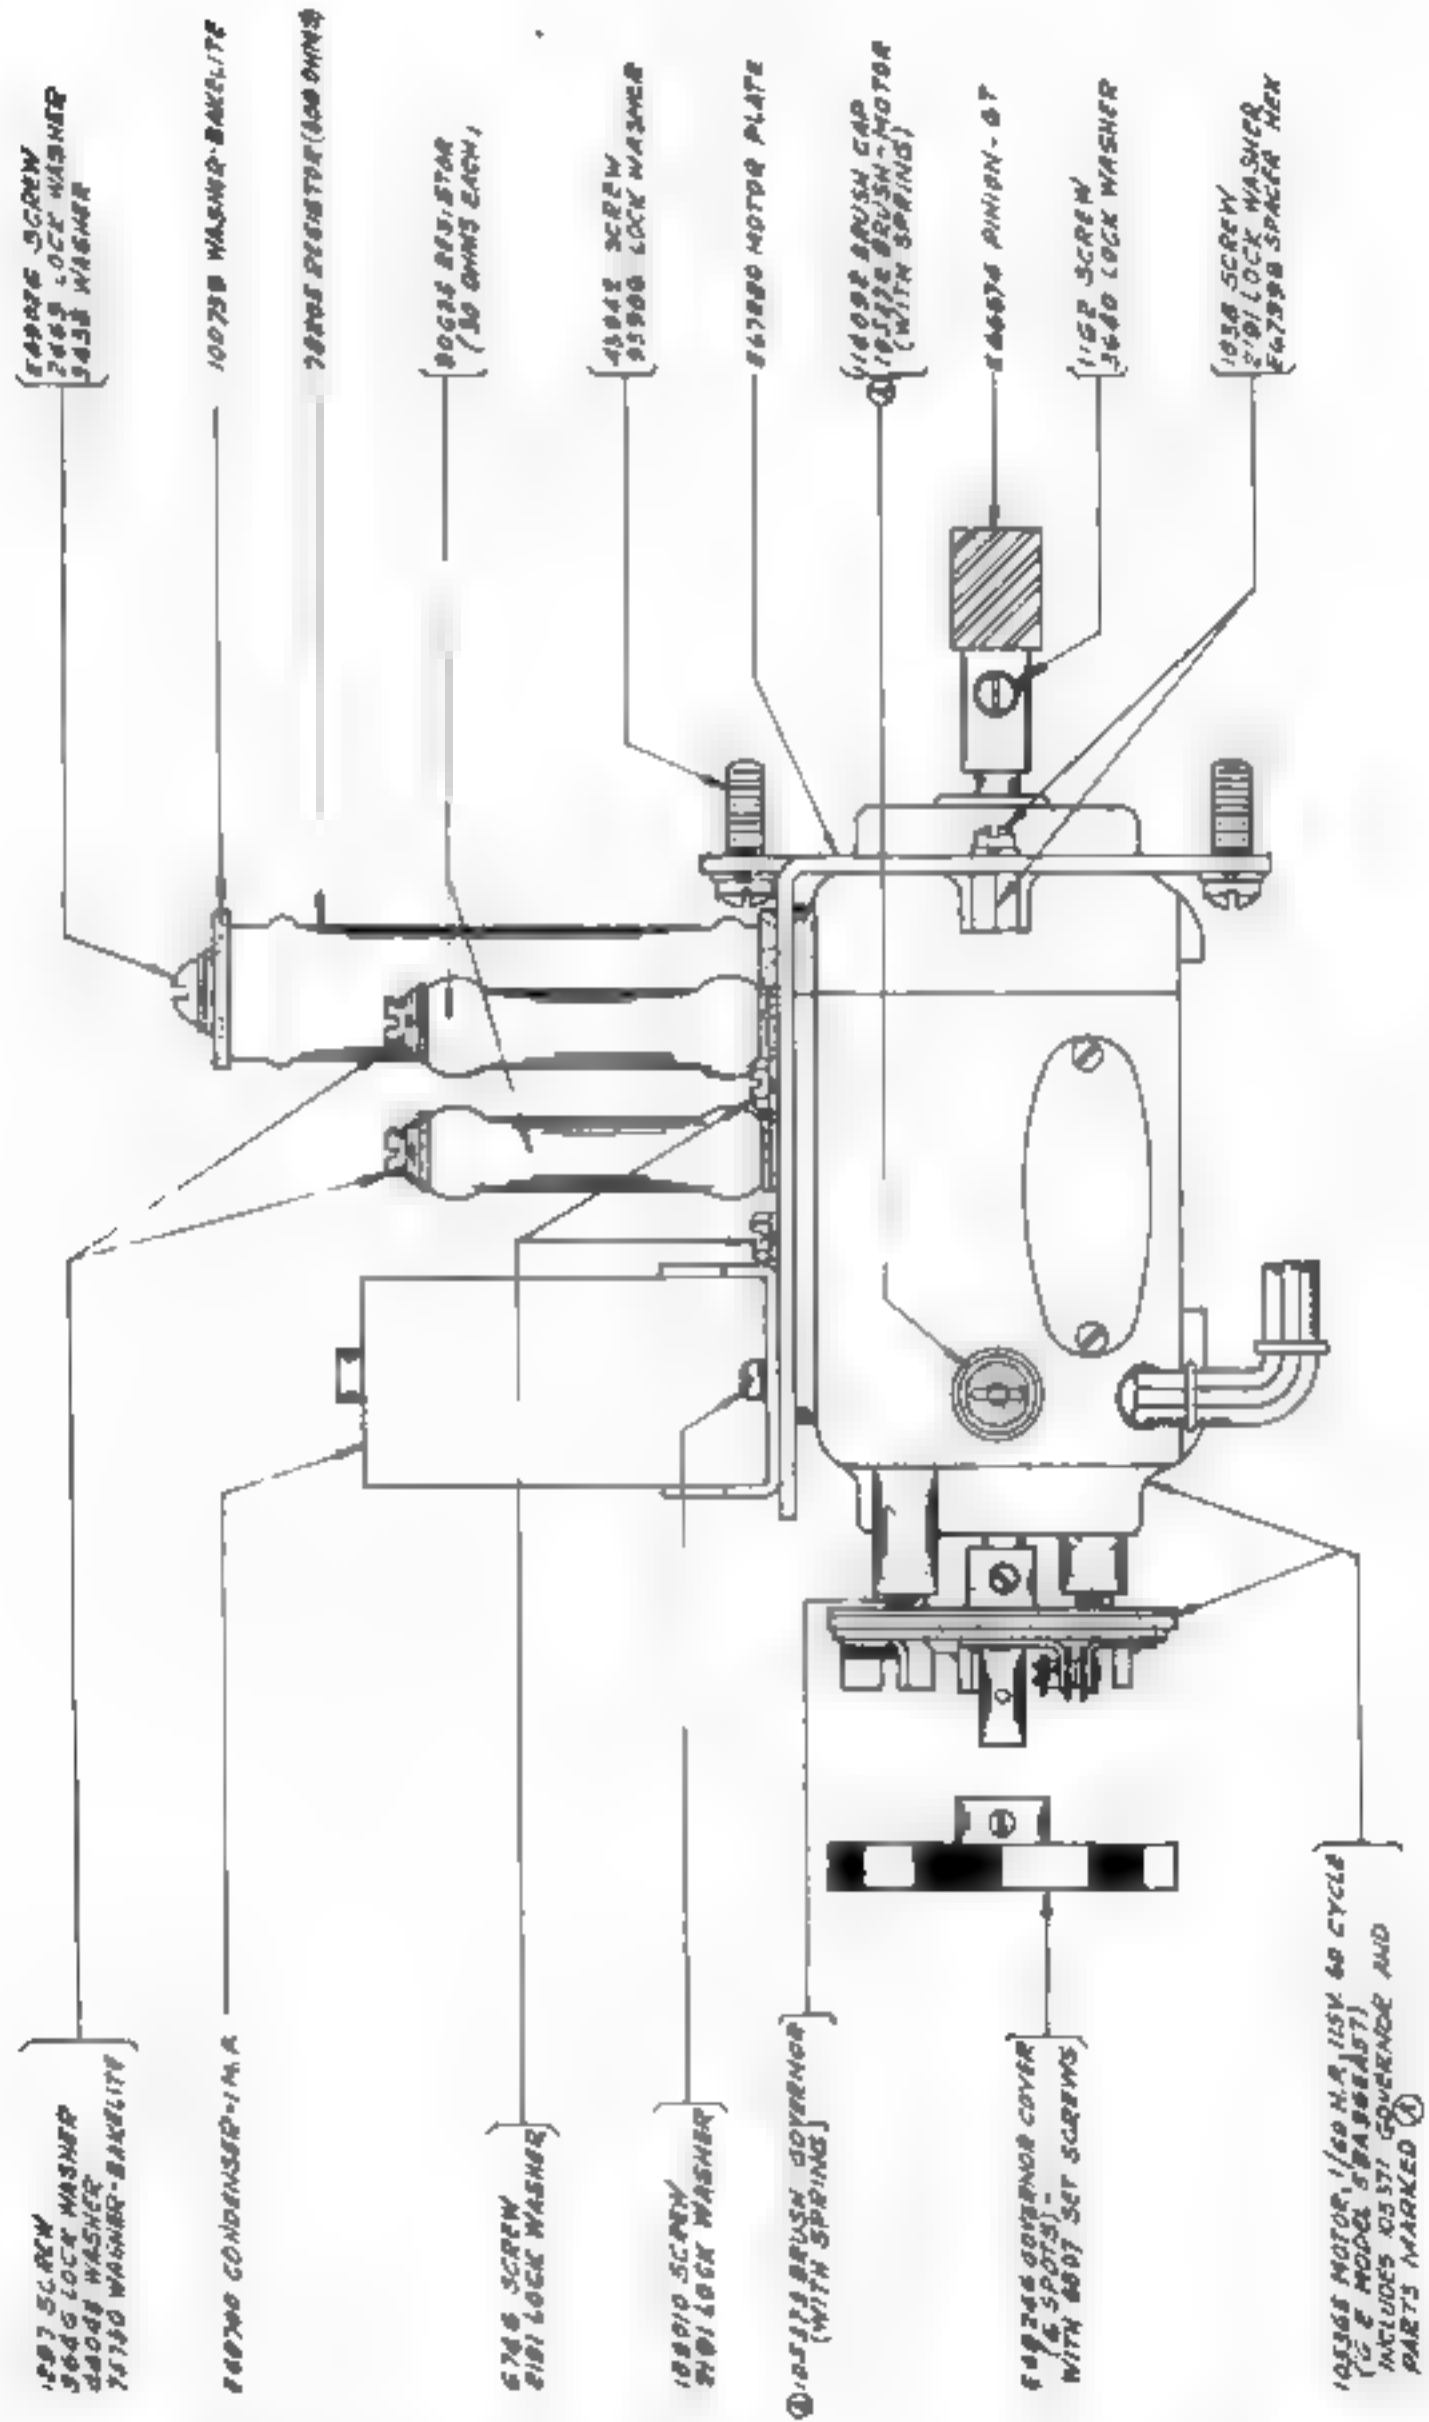

MOTOR (ASSEM)

46737 GLASS-

1266 SCREW
84760 MOUNTING PLATE
(TOP AND BOTTOM)
7008 WASHER
2101 LOCK WASHER
83086 NUT

867907 HINDA QUTUB

56044 SCREW
56045 SCREW

187909 187909 187909

157006 247CH

1045 SCRW
8590 SPRING WALKER
W.02. NY

44225 5941

[illegible]

14-00000-14-00000

555555 555555
555555 555555
555555 555555

222-8647 12/15/98
2ND CT - 2ND CT 501698

2007年12月14日 星期五

44426 704259

NOON 8/21/93

1015N RUBBER MOUNTING
E 4400 SEAL RUBBER
5.5-02 SCW
2502 100N WASHER
LN 4-4-88

1860 SCREW
667391 RAD QUADDER
247100 CAMP N. AVE
P. O. BOX WASH DC
20305 NY

44-38861-5C224

[illegible]


MEMBERSHIP 2021

[E67848 SPAIN
E67337 SWAFF]


COVER-LOWER SECTION (OLIVE DRAB WINKLE)

SEE PAGES 16, 17 & 18 FOR MISC PARTS MOUNTED INSIDE OF COVER.
(RIGHT END VIEW)


MISC. EQUIPMENT MOUNTED IN COVER-LOWER SECTION

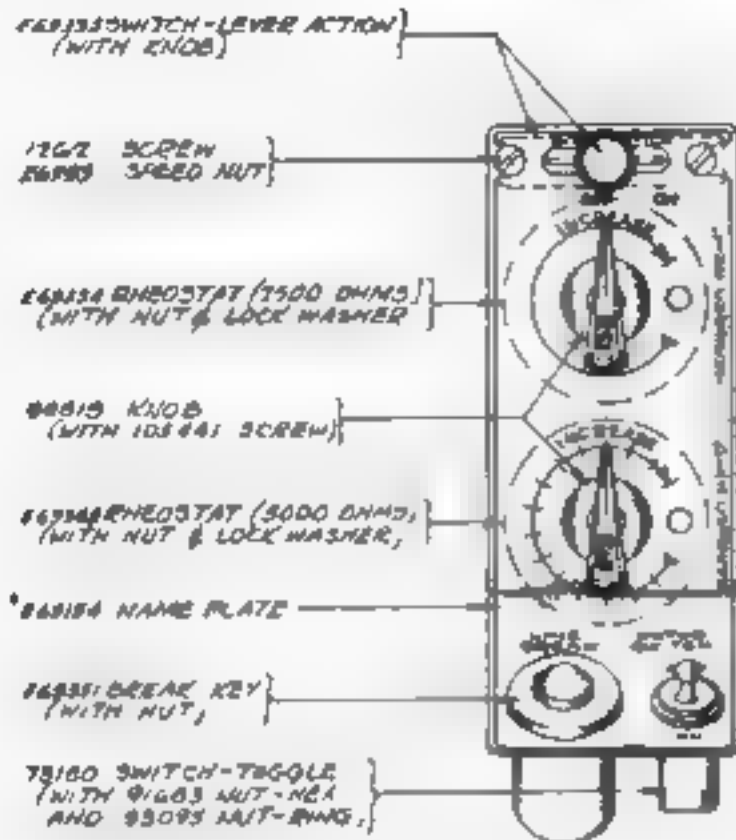


CONTROL PANEL

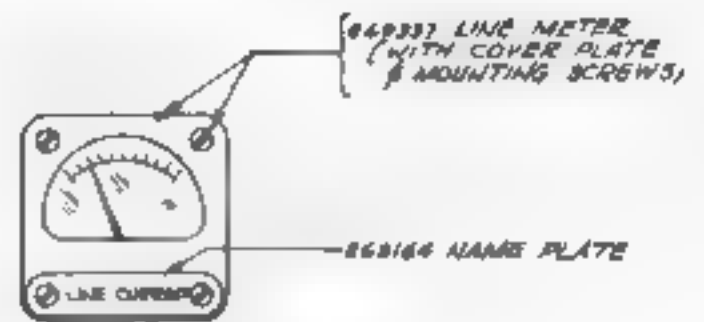



LINE METER

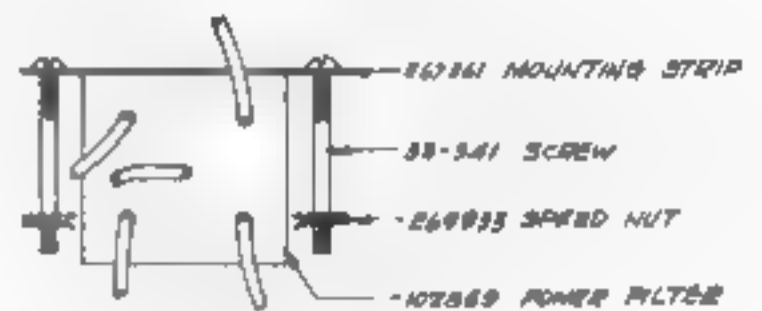

POWER FILTER

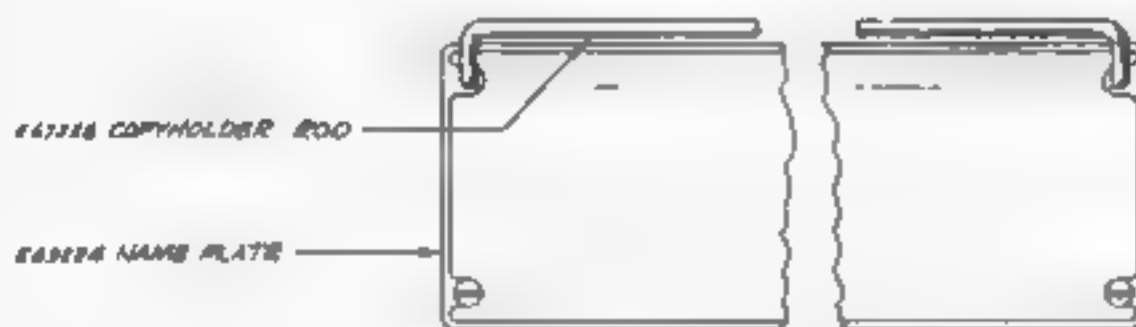

COPYHOLDER

 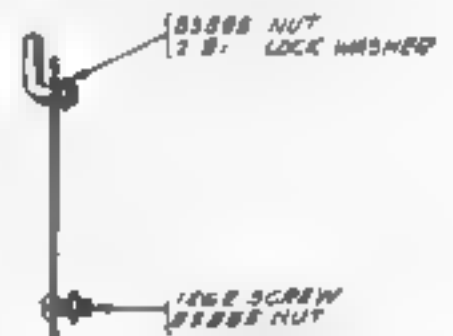

RECTIFIER



MISC. EQUIPMENT MOUNTED IN COVER-LOWER SECTION

E67244 MOUNTING PLATE

E67248 NAMEPLATE


1266 SCREW
83807 CABLE CLAMP

33818 KNOB
(WITH 105401 SCREW)

E69382 ROTARY SWITCH
(WITH NUT & LOCK WASHER)

E69346 FUSE HOLDER
(WITH NUT & WASHER - RUBBER)

1262 SCREW

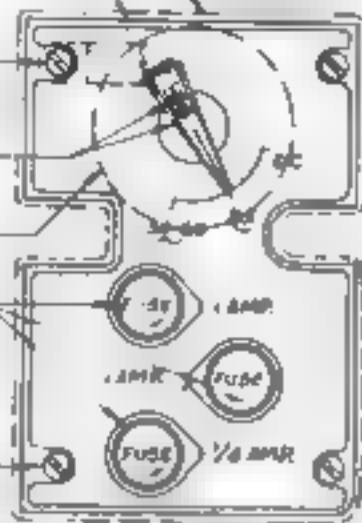

POWER SUPPLY PANEL

E67338 MOUNTING PLATE

E69341 CONDENSER-25MF

1262 SCREW

E61368 CONDENSER BRKT.
1262 SCREW
83885 NUT

E69348 FUSE CLIP
1162 SCREW
3640 LOCK WASHER
3619 NUT

E69336 FUSE-1 AMP

E69338 FUSE-1/8 AMP



CONDENSER AND
SPARE FUSE BRACKET


E69346 SOCKET-12 TERMINAL

1262 SCREW
E69341 SPEED NUT

E69387 CABLE COVER
W.D. 2438



SOCKET & CABLE

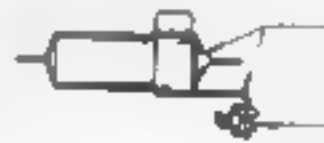

E69343 RES-50K-250W DPM3

1262 SCREW
2191 LOCK WASHER
83885 NUT

RESISTOR

1262 SCREW
2191 LOCK WASHER
83885 NUT

E69340 BINDING POST
1002 WASHER
2191 LOCK WASHER
83885 NUT




E 69288 CLIP

E67191 TERMINAL BLOCK

TERMINAL BLOCK

83885 NUT
2191 LOCK WASHER
1002 WASHER
E69345 SPACER
83341 SCREW

THIS SIDE
OTHER SIDE


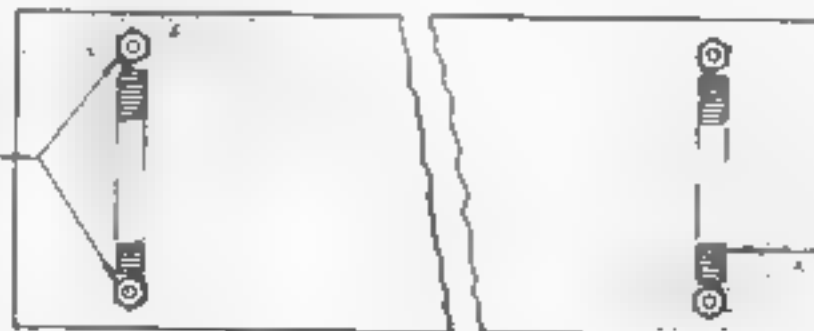



E69345 STRIP BAKELITE

35-26 SPRING


TUNING FORK HOLDER

MISC EQUIPMENT MOUNTED IN COVER-LOWER SECTION

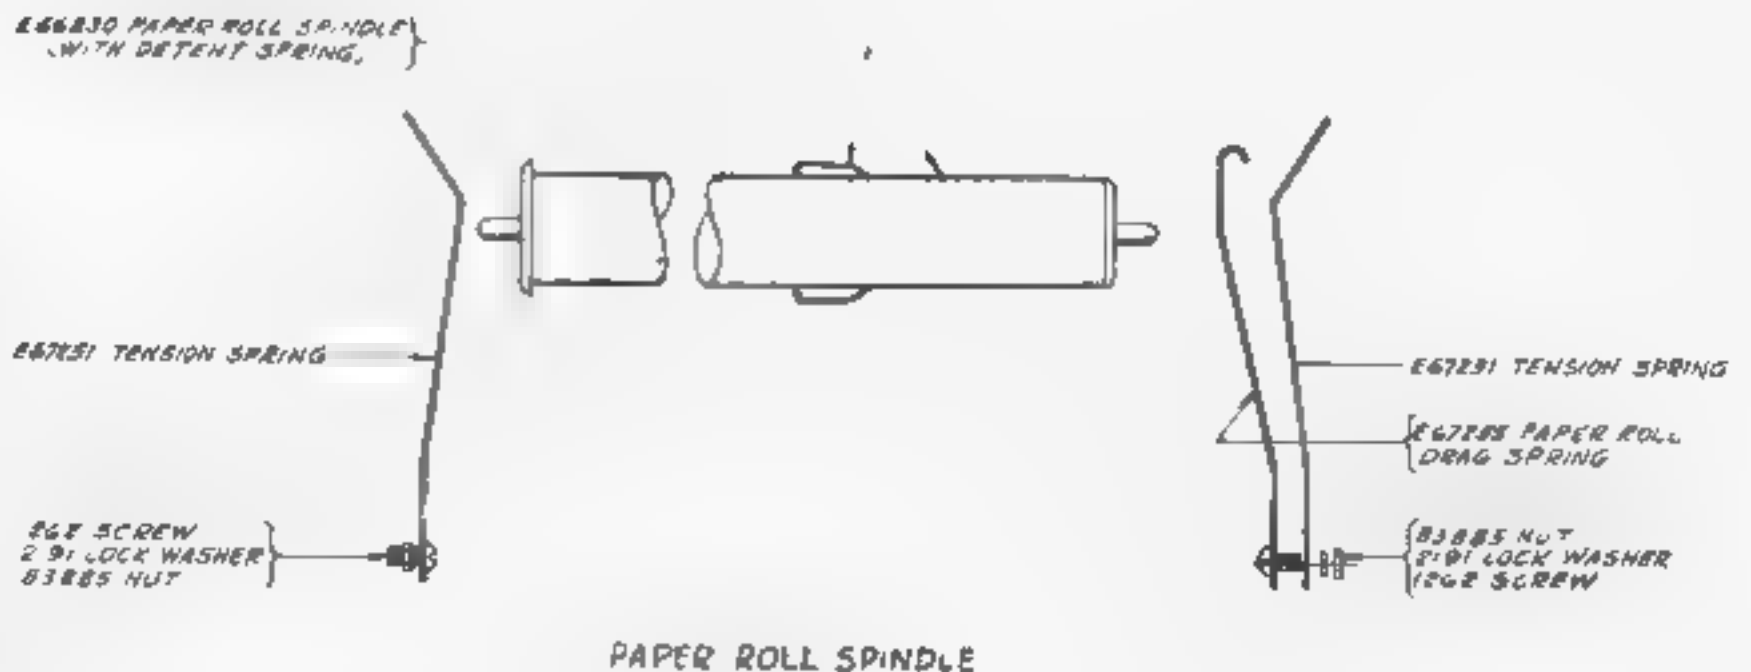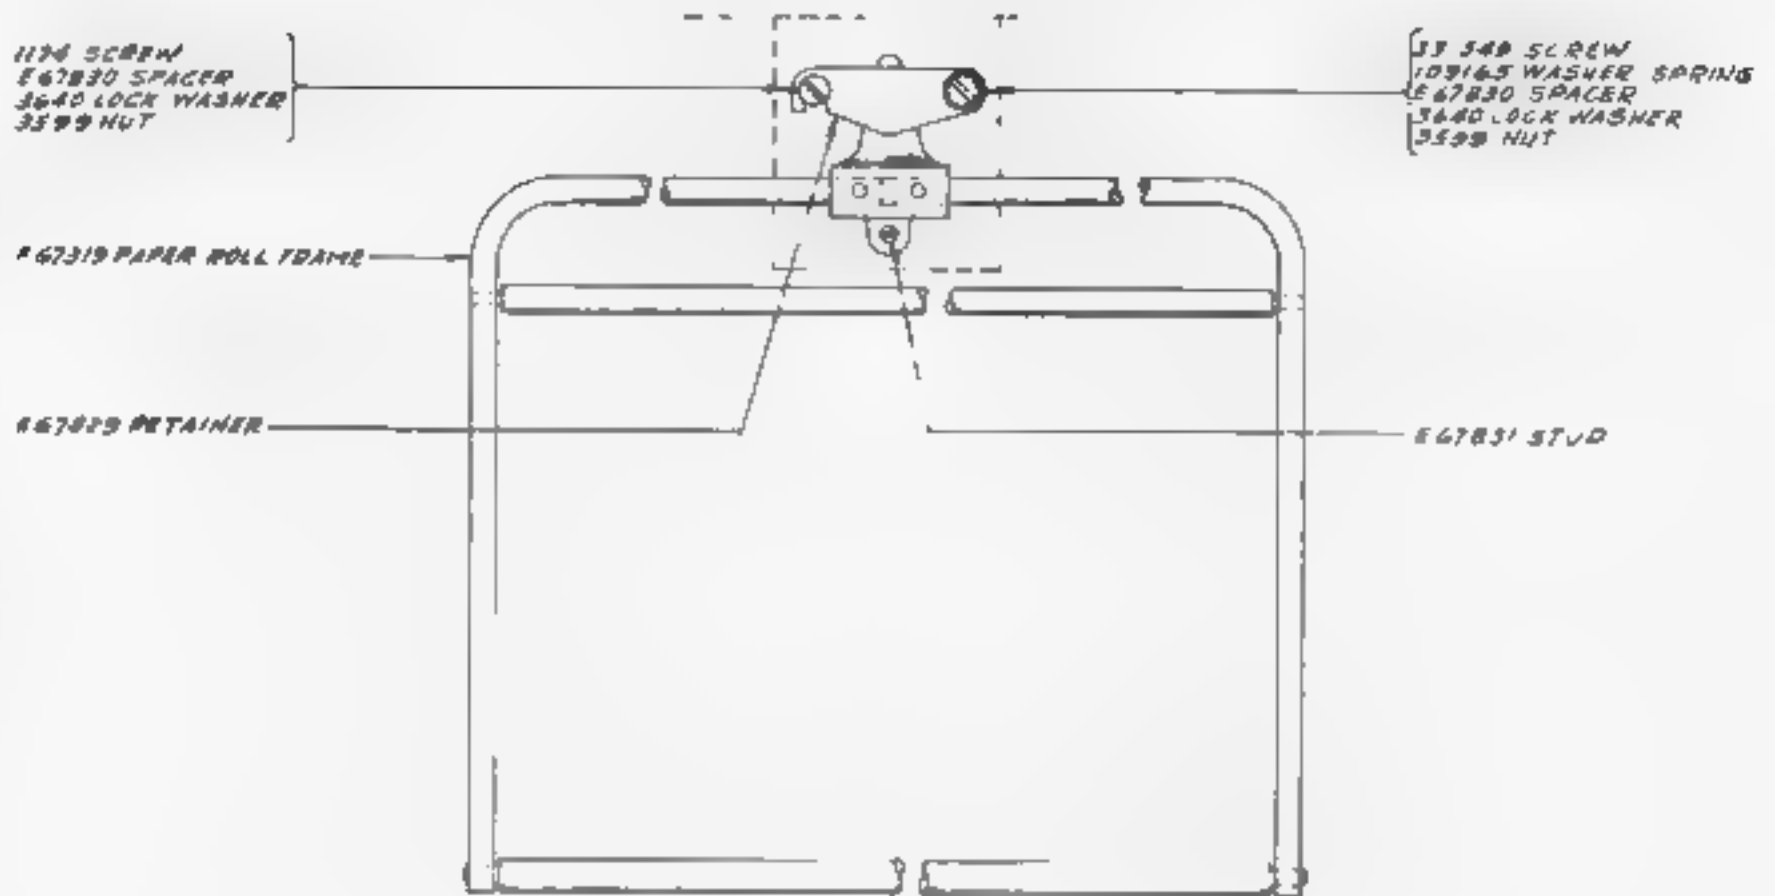


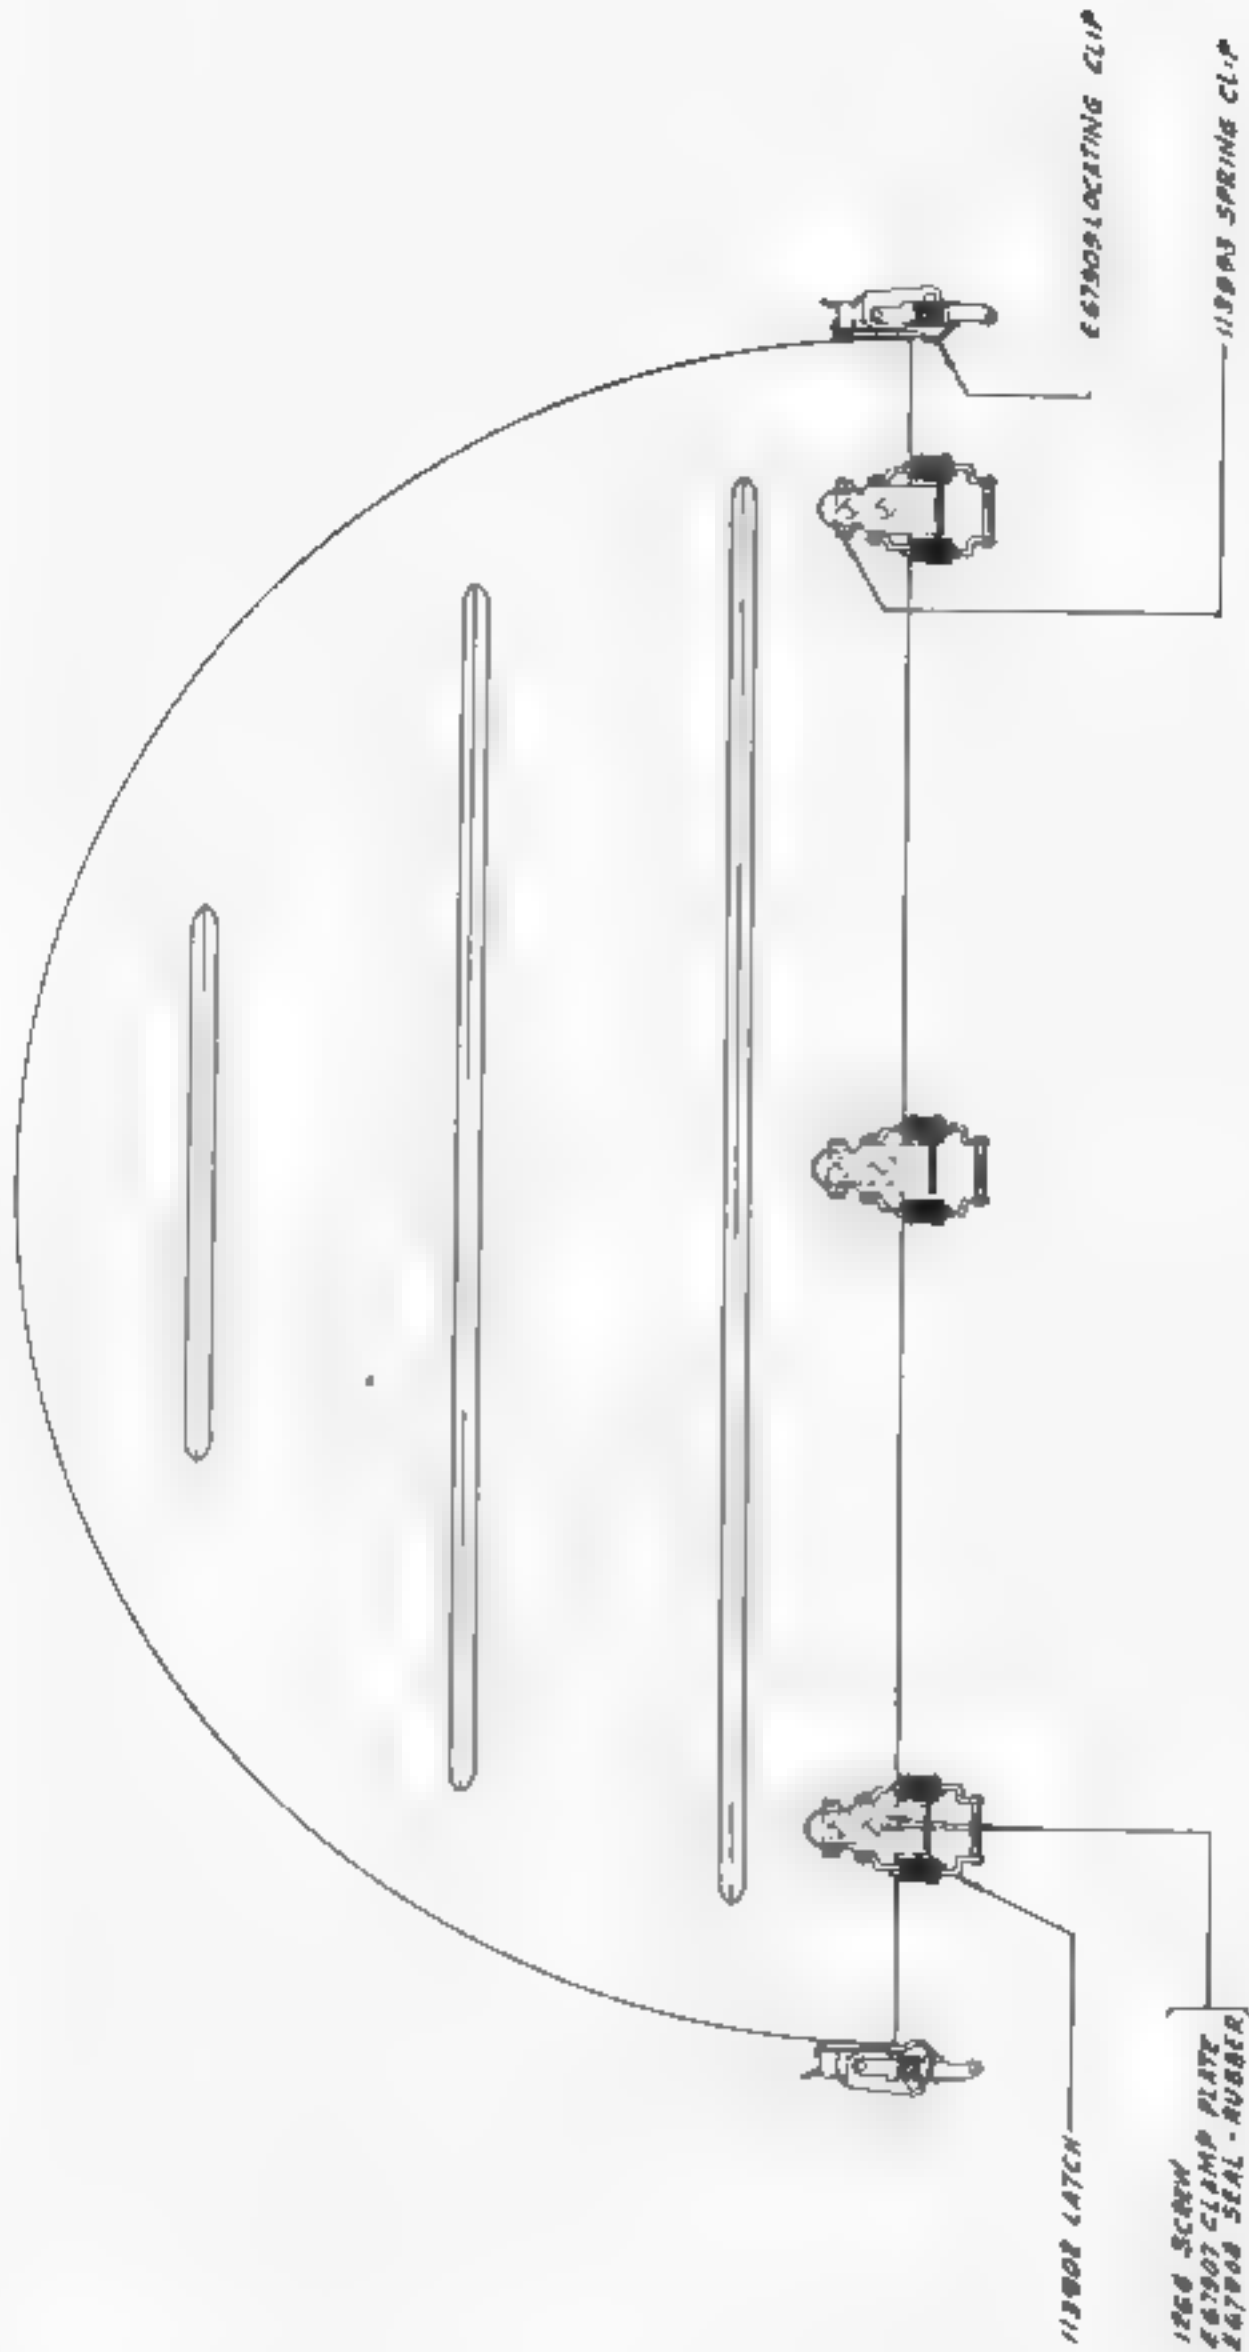


COVER - UPPER SECTION (OLIVE DRAB WRINKLE)
(RIGHT END VIEW)

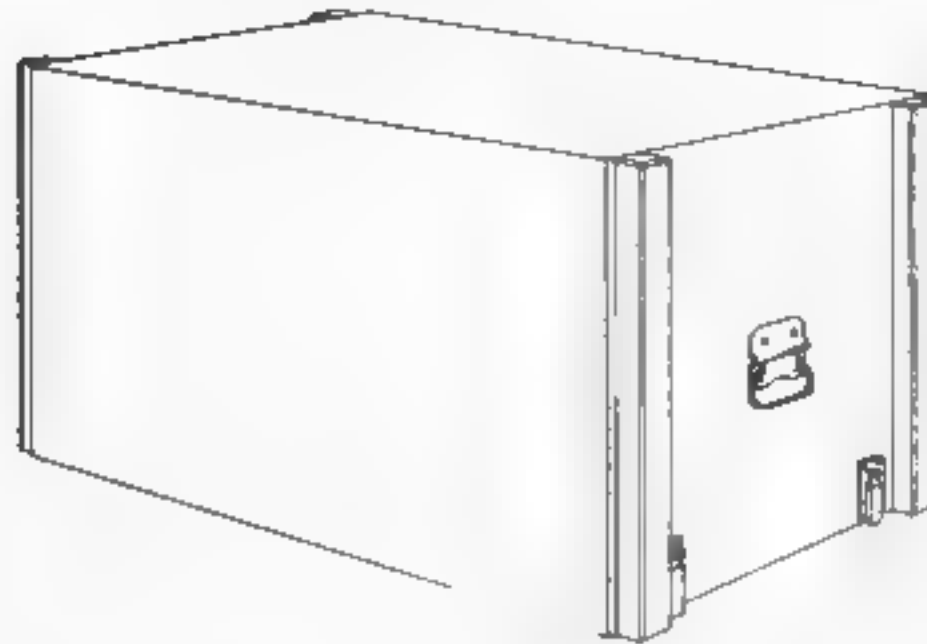

COVER

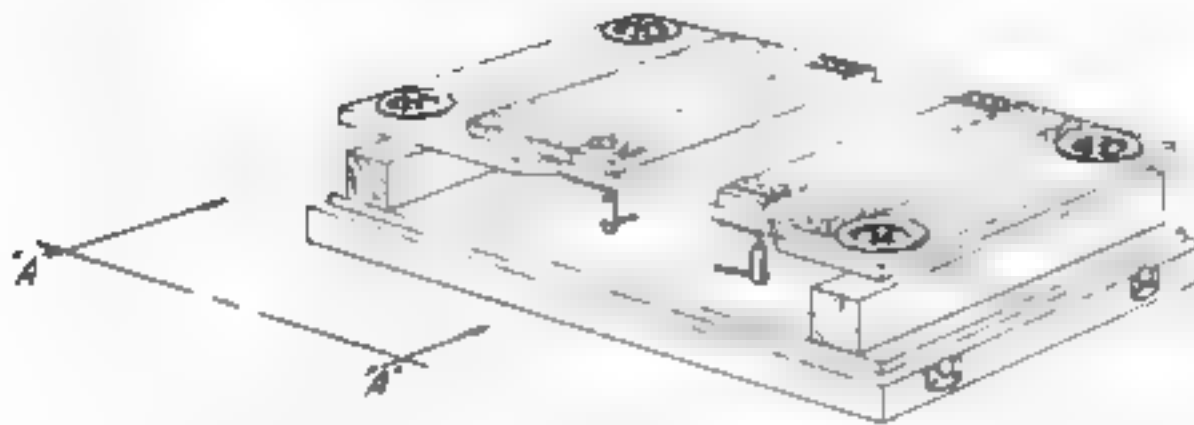

BASE

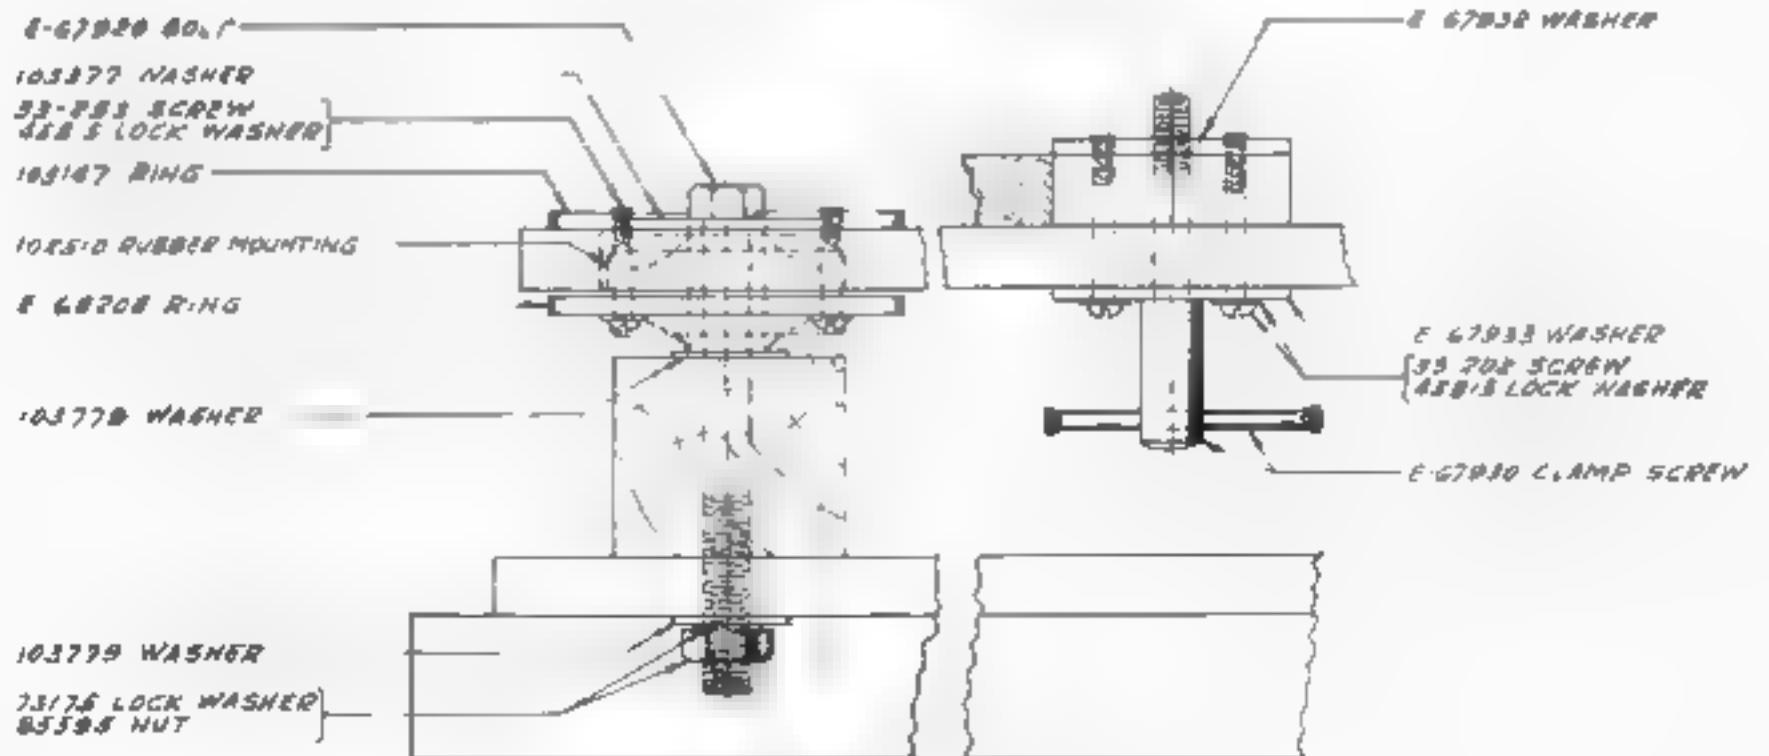

ELEVATION A-A (ENLARGED)

E67934 CARRYING CASE (ASSEM) - OLIVE DRAB

KEYTOPS & TYPE PALLETS					
KEYTOPS		TYPE PALLETS			
DESC	PART NUMBERS	DESC	PART NUMBERS	DESC	PART NUMBERS
A —	E69782	A	90831	—	90883
B ?	E69797	B	90832	?	90878
C :	E69795	C	90833	:	90886
D \$	E69784	D	90834	\$	90875
E 3	E69774	E	90835	3	90861
F !	E69785	F	90836	!	90879
G &	E69786	G	90837	&	90877
H STOP	E69787	H	90838	BLANK	90858
I 8	E69779	I	90839	8	90866
J 1	E69788	J	90840	1	90885
K (E69789	K	90841	(90880
L)	E69790	L	90842)	90881
M .	E69799	M	90843	.	90888
N ,	E69798	N	90844	,	90889
O 9	E69780	O	90845	9	90867
P Ø	E69781	P	90846	Ø	E66363
Q 1	E69772	Q	90847	1	90859
R 4	E69775	R	90848	4	90862
S BELL	E69783	S	90849	BLANK	90858
T 5	E69776	T	90850	5	90863
U 7	E69778	U	90851	7	90865
V ;	E69796	V	90852	;	90887
W 2	E69773	W	90853	2	90860
X /	E69794	X	90854	/	90882
Y 6	E69777	Y	90855	6	90864
Z "	E69793	Z	90856	"	90884
1 G3	E69792	—	—	—	—
LTR8	E69800	—	—	—	—
LINE FEED	E69801	—	—	—	—
CAR RET	E69791	—	—	—	—
BLANK	E69802	—	—	—	—

ONLY PARTS SHOWN HEREIN WITHOUT THE LETTER "E" PREFIX MAY BE ORDERED AS SERVICE ITEMS.
PART NUMBERS PREFIXED WITH LETTER "E" ARE SHOWN FOR REFERENCE PURPOSES ONLY.

NUMERICAL INDEX

M-207	Magnet Coil - 92 Ohms, 4	3595	Nut (1/4-32 Hex.), 3	71681	Ribbon Spool - Empty, 8
33-58	Screw (6-32 x 7/16), 10	3598	Nut (6-40 Hex.), 1, 2, 3, 4, 6, 7, 9, 10, 11, 12, 13	71697	Clamping Plate, 4
33-82	Screw (10-32 x 1/2), 15	3599	Nut (4-40 Hex.), 2, 4, 5, 6, 9, 10, 11, 18	72513	Driving Disc, 3
33-86	Screw (4-40 x 1/8), 12	3603	Nut (1/4-32 Hex.), 3	72514	Spring, 3
33-101	Screw (6-32 Fl. Hd.), 15	3606	Nut (6-40 Hex.), 1, 4, 6, 7, 15	72515	Nut (5/16-32 Hex.), 3
33-110	Screw (4-40 x 3/16), 1, 8, 12	3640	Lock Washer, 1, 3, 4, 5, 9, 10, 11, 12, 13, 14, 17, 18	72516	Retaining Disc, 3
33-132	Screw (4-40 Shoulder), 8	3646	Lock Washer, 9, 14	72517	Nut (5-16 x 32 Keyed - Hex.), 3
33-202	Screw (10-32 x 1-1/4 Rd. Hd.), 20	3870	Spring, 10	72521	Oil Wick - Felt, 2, 3
33-253	Screw (10-32 x 7/8), 20	4423	Shim, 8	72563	Oil Ring - Felt, 3
33-341	Screw (6-32 x 9/16), 16, 17	4603	Spring, 15	73175	Washer, 20
33-349	Screw (4-40 Shoulder), 18	4703	Spring, 9, 10	73180	Switch - Toggle (with 9168)
34-4	Nut (10-32 Hex.), 1, 6, 9, 10, 13, 15	4704	Spring, 9		Nut - Hex., and 93095
34-11	Nut (2-56 Hex.), 1, 13	4708	Spring, 4, 7		Nut - Ring, 16
34-19	Nut (8-32 Hex.), 17	4809	Oil Wick - Felt, 6	73894	Screw (6-40 Set), 2
34-56	Nut (4-40 Hex.), 4, 11, 13	4814	Lock Washer, 1, 9	74032	Disc - Small, 1, 9
35-8	Spring, 6, 7, 12	5475	Nut (3/16-40 Hex.), 4	74033	Washer - Leather, 1, 9
35-26	Spring, 17	5566	Spacer, 9	74334	Washer, 6
35-42	Spring, 5	6685	Sword, 4	74399	Screw (6-40 Pilot), 4
35-68	Spring, 6, 13	6689	Separator Plate, 4	74536	Screw (6-40 x 5/32 Set), 11
35-69	Spring, 1	6745	Screw (10-32 x 1/2), 2, 6, 9	74547	Collar, 2
35-70	Spring, 9, 10, 12	6746	Screw (6-40 x 5/16), 2, 4, 9, 11, 14	74722	Washer, 4, 8
103-27	Washer, 1, 2, 3, 10, 11, 13	6799	Screw (6-40 Shoulder), 4	74879	Spring Post, 9
123-244	Washer, 4, 7	6801	Screw (4-40 Pilot), 4	74952	Screw (4-40 x 9/8), 5, 10
200-1348	Washer, 10, 11	6807	Screw (6-40 x 3/16 Set), 8, 14	74961	Spring, 7
1010	Screw (6-40 Shoulder), 8	6811	Screw (6-40 x 5/8), 4	74986	Screw (6-40 x 13/32), 6, 11
1026	Screw (6-40 x 3/8), 2, 7, 8, 9, 10	6835	Washer, 13	75607	Washer, 13
1028	Screw (4-40 x 1/4), 10, 11	6861	Washer - Felt, 3	75750	Washer - Bakelite, 14
1029	Screw (6-40 x 27/64), 9	6863	Cam Sleeve Disc, 3	76011	Code Disc No. 1, 2
1030	Screw (6-40 Shoulder), 4	6909	Stop Lever, 4	76012	Code Disc No. 2, 2
1038	Screw (6-40 x 9/32), 2, 14	6966	Eccentric Stop, 4	76013	Code Disc No. 3, 2
1039	Screw (6-40 Shoulder), 9	7001	Washer, 2, 4, 9	76014	Code Disc No. 4, 2
1046	Screw (6-40 Shoulder), 15	7002	Washer, 1, 2, 4, 6, 7, 8, 9, 10, 11, 12, 13, 17	76015	Code Disc No. 5, 2
1051	Screw (4-40 x 1/2), 10, 13	7007	Trip Plunger, 4	76016	Bushing, 2
1073	Screw (6-40 Thumb), 4	7389	Clutch - Driving, 3	76084	Washer - Felt, 2
1121	Screw (10-32 x 3/8), 9	7391	Clutch - Driven, 3	76085	Friction Disc, 2
1159	Screw (4-40 x 3/8), 6, 10, 11, 13	7407	Spacer, 2	76087	Friction Spring, 2
1160	Screw (6-40 x 5/16), 3	7599	Spring, 10, 11	76303	Shim, 2
1162	Screw (4-40 x 1/4), 3, 9, 12, 13, 14, 17	7602	Spring, 4	76379	Spring - Lift Slide, 6
1164	Screw (2-56 x 3/16), 1, 12	7603	Spring, 2, 4	76806	Spring, 11
1166	Screw (4-36 x 1/4), 11	7607	Collar, 4	78163	Post, 4
1168	Screw (4-40 x 5/16), 5	7612	Spring, 1	78164	Selector Post, 4
1174	Screw (4-40 Shoulder), 18	7614	Spring, 4	78205	Resistor - 300 Ohms, 14
1176	Screw (6-40 x 3/16), 2, 5, 10, 12, 13	7655	Spring, 5	78301	Screw (10-32 x 5/8), 9
1179	Screw (6-40 x 5/8), 1, 3, 9, 13	7835	Ribbon Spool (with Black Ribbon), 8	78596	Washer, 4
1181	Screw (6-40 x 11/16), 2	7963	Spring, 3	78597	Screw (10-32 Shoulder), 4
1196	Screw (6-40 Shoulder), 7	8157	Selector Lever - Right, 4	78723	Eccentric, 9
1200	Screw (6-40 x 9/32), 11	8330	Washer, 6, 10	80294	Post, 9
1208	Screw (10-32 x 5/8), 2, 9, 13	8334	Washer, 7	80342	Screw (6-40 x 23/64), 9, 10, 13
1223	Screw (10-32 x 1/2), 6	8543	Screw (6-40 x 1/4), 1, 2, 8	80444	Screw (6-40 x 1/4), 4, 10, 11
1226	Screw (6-40 x 3/4), 1, 7, 13	8896	Shim, 2, 9	80612	Nut (8-32 Hex.), 9
1245	Screw (10-32 x 1), 9	21397	Washer, 6	80625	Resistor - 30 Ohms, 14
1262	Screw (6-32 x 9/16), 13, 15, 16, 17, 18	34432	Washer, 4, 9, 10	80721	Washer, 4
1266	Screw (6-32 x 7/16), 15, 17, 19	34464	Spring, 9	80854	Screw (6-40 x 1-7/16), 5
1269	Screw (6-40 x 1/2), 6, 11	35826	Washer, 15	80983	Screw (4-40 x 1/4), 13
1297	Screw (6-40 x 2-7/16), 14	35858	Bell, 9	81895	Spring Post, 8
1303	Screw (6-40 x 13/32), 2, 13	36463	Spring, 11	82440	Screw (6-40 x 7/16), 4
2191	Lock Washer, 1, 18	41732	Clamp Plate, 10	82444	Bushing - Bakelite, 10
2201	Nut (5/16-32 Hex.), 1, 9	41974	Spring, 10	82542	Contact Spring, 10
2337	Oil Wick - Felt, 13	44048	Washer, 14	82544	Contact Spring, 10
2382	Lock Washer, 15	45814	Screw (8-40 Shoulder), 1	82547	Insulator, 10
2403	Pin, 13	45815	Lock Washer, 20	82548	Insulator, 10
2415	Spring, 13	45842	Screw (12-24 x 1/2), 14	82555	Contact Spring, 10
2438	Washer, 10	47024	Washer, 11	82557	Stiffener, 10
2526	Spacer, 13	49056	Screw (10-32 x 7/8), 3	83330	Washer, 2
2539	Nut (3/8-32 Hex.), 13	49420	Spring, 1, 5, 6, 10, 13	83885	Nut (6-32 Hex.), 15, 16, 17, 18
2610	Bell, 9	55090	Spring - Key Lever, 12	84990	Screw (6-40 x 1/4), 2
2669	Lock Washer, 1, 2, 3, 4, 6, 9, 10, 13, 14	55292	Screw (10-32 x 7/16), 13	85595	Nut (3/8-16 Hex.), 20
2836	Spring, 11	55669	Spring, 6, 8	85957	Washer, 6
3339	Nut (9/16-32 Hex.), 2	70886	Washer, 3	85970	Spring Washer, 15
3369	Ball, 11	71073	Washer, 4, 12, 13	86710	Oiler, 3
3438	Washer, 9, 14			86742	Nut (4-40 Hex.), 2
				88012	Spring Post, 10
				89407	Clip, 15
				90024	Coil Retainer, 4
				90043	Armature Bracket, 4
				90069	Detent Post, 4

ONLY PARTS SHOWN HEREIN WITHOUT THE LETTER "E" PREFIX MAY BE ORDERED AS SERVICE ITEMS.
PART NUMBERS PREFIXED WITH LETTER "E" ARE SHOWN FOR REFERENCE PURPOSES ONLY.

NUMERICAL INDEX

90088 Trip Latch, 4
90265 Screw (6-40 Special), 4
90328 Tube - Inner, 2
90329 Tube - Outer, 2
90330 Post, 2
90331 Separator, 2
90334 Bushing, 5
90371 Pallet Guide, 2
90373 Washer, 2
90376 Ball Retainer, 11
90380 Spring Drum (Assem.), 9
90381 Drum, 9
90385 Drum Shaft, 9
90389 Spring, 9
90390 Cover, 9
90391 Oil Ring - Felt, 2, 9
90399 Bearing, 3
90424 Swivel, 10
90425 Screw (10-32 x 1-1/8), 10
90426 Nut (10-32 Special), 10
90435 Bushing - Hex., 6
90439 Screw (1-64 x 11/64), 2
90441 Garter Spring, 2
90442 Post, 2
90490 Shim, 3
90491 Bushing, 3
90505 Locking Lever, 4
90507 Separator Top Plate, 4
90508 Spring Arm, 4
90509 Detent, 4
90510 Spring, 4
90511 Screw (6-40 x 13/16), 4
90512 Selector Arm Bracket, 4
90513 Eccentric, 4
90515 Screw (3/16-40 Pivot), 4
90516 Selector Arm, 4
90517 Spring, 2, 4
90518 Locking Wedge, 4
90519 Screw (2-56 x 3/32), 4
90520 Armature Lever, 4
90524 Screw (4-40 x 17/32), 4
90526 Screw (10-32 x 1-1/8), 9
90539 Bushing, 6
90559 Stud, 6
90566 Bushing, 6
90570 Plunger, 6
90571 Spacer, 6
90589 Link, 7
90596 Stud, 10
90598 Bushing, 10
90613 Bell Function Arm, 10
90617 Pawl, 10
90628 Screw (6-40 Shoulder), 9
90629 Bell Hammer, 10
90643 Spacing Ratchet, 9
90644 Bearing - Upper, 9
90662 Bell Hammer (Assem.), 9
90670 Screw (10-32 Pivot), 9
90679 Oil Ring - Felt, 2, 9
90682 Carriage Stop, 11
90683 Spacing Rack, 11
90684 Spacer, 11
90685 Line Feed Shaft, 11
90686 Roller Arm (with Roller), 11
90691 Pawl Arm, 11
90697 Screw (10-32 Pivot), 9
90698 Eccentric, 11
90700 Detent, 11
90707 Spacer, 11
90708 Screw (4-40 Shoulder), 11
90709 Pressure Release Shaft, 11
90710 Pressure Release Arm, 11
90713 Pressure Release Handle, 11

90714 Spacer, 11
90720 Platen, 11
90725 Ratchet, 11
90728 Paper Guide, 11
90731 Margin Bell Adjuster, 11
90733 Bushing, 8
90737 Detent Spring, 8
90738 Ribbon Feed Pawl, 8
90740 Stud, 8
90741 Operating Lever, 8
90742 Clamp Plate, 8
90743 Bushing, 8
90744 Check Pawl, 8
90747 Screw (4-40 Shoulder), 8
90748 Spring, 8
90749 Shim, 11
90750 Ratchet Shaft, 8
90752 Washer - Felt, 8
90753 Ratchet - Right, 8
90754 Ratchet - Left, 8
90755 Friction Spring, 8
90756 Spring Extension, 8
90759 Armature Bracket Link, 4
90764 Ribbon Reverse Lever, 8
90765 Basket, 11
90774 Bell Crank, 4
90789 Washer, 10
90790 Washer, 10
90791 Lock Washer, 4

Type Pallets

90831 (A)
90832 (B)
90833 (C)
90834 (D)
90835 (E)
90836 (F)
90837 (G)
90838 (H)
90839 (I)
90840 (J)
90841 (K)
90842 (L)
90843 (M)
90844 (N)
90845 (O)
90846 (P)
90847 (Q)
90848 (R)
90849 (S)
90850 (T)
90851 (U)
90852 (V)
90853 (W)
90854 (X)
90855 (Y)
90856 (Z)
90858 (Blank)
90859 (1)
90860 (2)
90861 (3)
90862 (4)
90863 (5)
90864 (6)
90865 (7)
90866 (8)
90867 (9)
90875 (0)
90877 (A)
90878 (B)
90879 (C)
90880 (D)
90881 (E)

90882
90883
90884
90885
90886
90887
90888
90889
90893 Spring Post, 8
90898 Draw Strap, 9
90905 Post, 4
90951 Lock Washer, 6, 12
90973 Paper Finger, 11
90991 Retaining Wire, 11
91926 Escapement Lever, 9
91929 Spring Drum Stop, 9
92216 Filter, 13
92273 Magnet Core, 4
92626 Stud, 3
92662 Print Hammer, 1
92685 Spacer, 17
92907 Stop Plate, 8
92954 Selector Cam Sleeve (Assem.), 3
93507 Screw (4-40 x 3/4), 10
93807 Cable Clamp, 17
93899 Spring, 2
93901 Guide Disc - Upper, 2
93986 Lock Washer, 1, 14
94249 Cable Clamp, 9
94662 Spacer, 2
94665 Screw (6-40 Shoulder), 11
94669 Screw (4-40 Shoulder), 2, 9
95175 Pawl, 9
95177 Bell Hammer, 9
96878 Guide Disc - Lower, 2
96879 Spacer, 2
97317 Clamp Plate, 4
97347 Set Screw (4-40 x 1/8), 13
98781 Latch, 11
98819 Knob (with 105441 Screw),
16, 17
100032 Spring Post, 1
100326 Screw (6-40 x 9/32), 9
100739 Washer - Bakelite, 14
102510 Rubber Mounting, 20
102511 Rubber Mounting, 15
102859 Power Filter, 16
103147 Ring, 20
103377 Washer, 20
103539 Screw (6-40 x 3/8), 10
103697 Screw (4-40 x 7/16), 13
103779 Washer, 20
103914 Spring, 13
104824 Spring, 5
105365 Motor, 1/60 H.P., 115 V.
60 Cycle (G.E. Model
5BA36EA57), 14
105372 Brush - Motor (with Spring),
14
105373 Brush - Governor (with
Spring), 14
105441 Screw (8-32 Special), 16, 27
108010 Screw (6-40 x 1/8), 12, 14
109165 Washer - Spring, 18
109379 Spring Post, 10
109436 Ring - Felt, 12
109697 Keypad Spring (not Included
with Keypad), 12
113902 Latch, 19
113903 Spring Clip, 19
114092 Brush Cap, 14

ONLY PARTS SHOWN HEREIN WITHOUT THE LETTER "E" PREFIX MAY BE ORDERED AS SERVICE ITEMS.
PART NUMBERS PREFIXED WITH LETTER "E" ARE SHOWN FOR REFERENCE PURPOSES ONLY.

NUMERICAL INDEX

E44719	Sleeve, 5	E66348	Space Bar, 12	E66738	Bushing, 10
E47086	Roller, 6	E66349	Clamp Disc, 12	E66739	Latch, 10
E47155	Roller, 1, 6, 7	E66350	Key Lever - Upper, 12	E66740	Bracket, 10
E47156	Stud, 6	E66351	Key Lever - Center, 12	E66741	Armature, 10
E47157	Roller, 6	E66352	Key Lever - Lower, 12	E66743	Spring Hanger, 5
E47158	Stud, 6	E66353	Space Key Lever, 12	E66748	Contact Spring, 10
E48126	Bracket, 7	E66357	Contact Lever, 13	E66756	Spring Terminal, 10
E48201	Roller, 6	E66358	Locking Lever, 13	E66770	Adjusting Button, 3
E48982	Shift Latch Lever, 5	E66359	Lock Lamp, 13	E66775	Post, 10
E48983	Button, 5	E66360	Screw (6-40 x 15/64 Eccentric), 2	E66823	Bell Function Pawl, 6
E48984	Nut (2-56 Special), 5	E66363	Type Pallet (d), 21	E66830	Paper Roll Spindle (with Detent Spring), 18
E48985	Figs. - Ltr. Latch, 5	E66374	Clamp Plate, 13	E66837	Eccentric, 10
E49012	Shaft, 6	E66375	Bushing - Bakelite, 13	E66857	Print Hammer Guide, 8
E49039	Screw (6-40 x 11/16 Special), 1, 9	E66376	Insulator, 13	E66858	Mounting Plate, 8
E49055	Retaining Plate, 2	E66377	Contact Spring - Group, 13	E66867	Bracket - Left, 15
E49056	Type Wheel Hub, 2	E66378	Contact Spring - Single, 13	E66887	Screw (6-40 Shoulder), 2
E49058	Shelf, 2	E66379	Insulator, 13	E66889	Oil Ring - Felt, 1, 7, 9, 10
E49060	Shift Slide, 6	E66380	Contact Spring - Group, 13	E66894	Bell Function Arm, 10
E49061	Ribbon Shield, 2	E66381	Contact Spring - Single, 13	E66898	Selector Plate, 4
E49071	Clamp, 2	E66382	Stiffener - Group, 13	E66899	Plate - with Hub, 10
E49178	Function Lever Plate, 10	E66383	Stiffener - Single, 13	E66947	Guide, 1
E49179	Bushing, 10	E66384	Insulator, 13	E67104	Bushing, 1, 7
E49619	Guide Plate, 1	E66385	Keyboard Panel - Olive Drab Wrinkle, 12	E67105	Spacing Shaft (with Gear), 9
E56862	Latch Pawl, 13	E66386	Bracket - Right, 12	E67106	Clutch Drive Arm, 2
E63137	Space Cam Follower Arm, 6	E66387	Bracket - Left, 12	E67108	Latch Guide Arm, 2
E65960	Transfer Lever, 4	E66403	Bushing, 13	E67109	Latch, 2
E65961	Code Disc Lever, 2	E66404	Ratchet, 13	E67112	Screw (6-40 x 19/64), 1
E66023	Separator, 2	E66405	Stud, 13	E67113	Bushing, 1
E66024	Plate, 2	E66407	Spacer, 13	E67115	Clutch Throw-out Lever, 3
E66034	Function Code Bar No. 1, 5	E66410	Bracket, 3	E67126	Line Feed Bail, 9
E66035	Function Code Bar No. 2, 5	E66425	Stop Pawl Plate, 4	E67140	Screw (10-32 x 11/32), 1
E66036	Function Code Bar No. 3, 5	E66432	Bushing, 3	E67174	Bearing - Lower, 9
E66037	Function Code Bar No. 4, 5	E66438	Guide - Rear, 12	E67182	Hook, 15
E66038	Function Code Bar No. 5, 5	E66441	Clutch Release, 13	E67183	Stud, 12
E66148	Shift Lever, 7	E66442	Pawl, 13	E67185	Bracket, 15
E66158	Bushing, 6	E66443	Bushing, 13	E67191	Terminal Block, 17
E66162	Stop, 11	E66444	Clutch Release Arm, 13	E67194	Catch, 15
E66179	Screw (4-40 Shoulder), 2	E66462	Guide - Left End, 12	E67196	Hook - Right, 15
E66181	Release Lever, 7	E66463	Guide - Right End, 12	E67197	Hook - Left, 15
E66182	Cam Follower, 7	E66469	Drive Pawl (with Post), 13	E67199	Guide, 13
E66184	Transfer Lever, 7	E66554	Stud, 1	E67200	Rail - Upper, 9
E66185	Stud, 7	E66559	Code Bar Bracket, 5	E67220	Index Pin, 2
E66186	Spring Post, 7	E66561	Washer, 5	E67237	Glass, 15
E66187	Screw (6-40 Shoulder), 7	E66562	Washer, 2	E67243	Name Plate, 17
E66202	Guide, 4	E66563	Spacer, 2	E67244	Mounting Plate, 17
E66221	Roller, 2	E66564	Screw (4-40 x 5/8), 2	E67250	Stop Arm, 12
E66229	Hub, 3	E66589	Shaft, 2	E67251	Tension Spring, 18
E66230	Lift Slide Arm, 6	E66593	Pawl, 2	E67255	Paper Roll Drag Spring, 18
E66231	Gear - 21T, 3	E66597	Clutch Sleeve, 2	E67260	Mounting Plate, 15
E66232	Gear - 24T, 13	E66674	Pinion - 36T, 14	E67261	Bearing Bracket, 9
E66240	Selector Bar No. 1, 12	E66676	Gear - 36T, 2	E67280	Motor Plate, 14
E66241	Selector Bar No. 2, 12	E66679	Stud, 6	E67289	Clamp, 7
E66242	Selector Bar No. 3, 12	E66680	Shaft, 5	E67298	Clamp, 7
E66243	Selector Bar No. 4, 12	E66681	Bearing, 5	E67302	Stud, 6
E66244	Selector Bar No. 5, 12	E66692	Screw (6-40 Shoulder), 7	E67303	Retainer, 1, 6, 7
E66245	Universal Bar, 12	E66697	Stud, 2	E67319	Paper Roll Frame, 18
E66246	Lift Slide Lever, 6	E66704	Carriage Return Pawl, 9	E67328	Mounting Plate, 17
E66250	Bushing, 6	E66705	Space Pawl, 6	E67329	Bracket, 9
E66253	Disc - Large, 1, 9	E66706	Inset, 6	E67330	Clamp Plate, 15
E66254	Dashpot, 1, 9	E66708	Bushing, 10	E67331	Pad - Rubber, 15
E66260	Shaft, 1, 9	E66709	Eccentric Bushing, 10	E67332	Spacer - Short, 5
E66266	Spring Bar, 12	E66710	Lever - with Hub, 10	E67337	Shaft, 15
E66267	Clamp, 12	E66712	Stud, 10	E67356	Copyholder Rod, 16
E66268	Lever, 9	E66713	Carriage Return Latch, 6	E67363	Mounting Strip, 16
E66269	Bushing, 9	E66715	Line Feed Function Bar, 5	E67363	Condenser Bracket, 17
E66270	Stud, 1, 6, 7	E66716	Bell Function Bar, 5	E67411	Clamp, 12
E66276	Shaft, 12	E66717	Motor Stop Function Bar, 5	E67412	Shaft, 12
E66287	Print Cam Follower, 2	E66718	Function Bar, 5	E67429	Screw (12-24 x 1/2), 1
E66291	Print Lever, 1	E66719	Function Bar, 5	E67456	Guide Plate, 13
E66298	Oil Wick - Felt, 2	E66720	C. R. Function Bar, 5	E67457	Space Rod, 13
E66302	Code Disc Sleeve, 2	E66722	Spring Post, 6	E67458	Collar, 13
E66303	Bracket, 2	E66723	Strap, 6	E67513	Spring Post, 11
E66315	Guide - Front, 12	E66730	Function Pawl Latch, 10	E67514	Spacer - Long, 5
E66330	Shaft, 13	E66731	Bracket, 10	E67526	Latch, 11
E66331	Shaft, 13	E66734	Spacer, 10	E67556	Bracket, 13
E66342	Post, 12	E66735	Spacer, 10	E67751	Clamp Plate, 5
E66343	Roller, 12	E66736	Separator, 10	E67797	Knob, 11
E66344	Bearing, 12	E66737	Plate, 10	E67804	Platen Shaft, 11
E66347	Space Bar Take, 12			E67809	Seal - Rubber, 15

ONLY PARTS SHOWN HEREIN WITHOUT THE LETTER "E" PREFIX MAY BE ORDERED AS SERVICE ITEMS.
PART NUMBERS PREFIXED WITH LETTER "E" ARE SHOWN FOR REFERENCE PURPOSES ONLY.

NUMERICAL INDEX

E67816	Spring Plate, 6	E68610	Knob, 15	E69772	Key-top
E67828	Spring, 15	E68616	Spacer, 2	E69773	(Q 1)
E67829	Retainer, 18	E68801	Latch, 15	E69774	(W 2)
E67830	Spacer, 18	E69026	Screw (10-24 x 3-7/8), 14	E69775	(E 3)
E67831	Stud, 18	E69154	Name Plate, 16	E69776	(R 4)
E67832	Spring Plate, 7	E69164	Name Plate, 16	E69777	(T 5)
E67833	Release Arm, 7	E69224	Name Plate, 16	E69778	(Y 6)
E67834	Nut (6-40 Special), 7	E69238	Clip, 17	E69779	(U 7)
E67835	Seal - Rubber, 15	E69246	Governor Cover (6 Spots) with 6807 Set Screws, 14	E69780	(I 8)
E67836	Clamp Plate, 15	E69250	Mounting Plate, 16	E69781	(O 9)
E67843	Space Rod Extension, 13	E69258	Strip - Bakelite, 17	E69782	(P 10)
E67844	Collar, 13	E69334	Rheostat (5000 Ohms) (with Nut and Lock Washer), 16	E69783	(A -)
E67866	Bracket - Right, 15	E69335	Switch - Lever Action (with Knob), 16	E69784	(S Ball)
E67881	Range Scale, 4	E69336	Fuse - 1 Amp., 17	E69785	(D 1)
E67899	Space Bar Loop, 12	E69337	Line Meter (with Cover Plate and Mounting Screws), 16	E69786	(F 2)
E67902	Hinge - Rubber, 15	E69338	Fuse - 1/4 Amp., 17	E69787	(G 3)
E67903	Bracket - Left, 15	E69340	Binding Post, 17	E69788	(H Stop)
E67904	Bracket - Right, 15	E69341	Condenser - 25 MF., 17	E69789	(J 4)
E67906	Latch, 15	E69343	Resistor - 2500 Ohms, 17	E69790	(K 5)
E67907	Clamp Plate, 19	E69344	Fuse Holder (with Nut and Washer - Rubber), 17	E69791	(L 6)
E67908	Seal - Rubber, 19	E69345	Fuse Clip, 17	E69792	(Car. Ret.)
E67909	Locating Clip, 19	E69346	Socket - 15 Terminal, 17	E69793	(Figs.)
E67912	Cam Sleeve (Assm.), 13	E69347	Plug - 15 Prong, 12	E69794	(Z 7)
E67929	Bolt (3/8-16 x 4), 20	E69348	Rheostat (5000 Ohms) (with Nut and Lock Washer), 16	E69795	(X 8)
E67930	Screw (5/16-18 Special), 20	E69351	Break Key (with Nut), 16	E69796	(C 9)
E67932	Washer, 20	E69352	Rotary Switch (with Nut and Lock Washer), 17	E69797	(V 10)
E67933	Washer, 20	E69354	Rectifier (with Wire Strap, Nuts and Washers), 16	E69798	(B 11)
E67997	Function Cam Sleeve (Assm.), 3	E69566	Screw (5/16-18 x 1/2), 1	E69799	(N 12)
E67998	Spacer - Hex., 14	E69681	"T" Link, 7	E69800	(M 13)
E68208	Ring, 20	E69700	Condenser - 1 MF., 14	E69801	(Ltr.)
E68270	Pin, 3			E69802	(Line Feed)
E68304	Shaft, 3			E69816	(Blank)
E68391	Screw (6-40 Shoulder), 7			E69827	Magnet Coil - 1075 Ohms, 10
E68480	Seal - Rubber, 15			E69932	Cable - Cover, 17
E68530	Clamp Plate, 12			E69933	Nut - Speed (6-32 Flat Type), 15, 16, 17
E68531	Clamp Plate, 12				Nut - Speed (6-32 "H" Type), 16
E68532	Clamp Plate, 12				
E68533	Strip - Rubber, 12				
E68534	Strip - Rubber, 12				